Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

FeeTUO FEH030

FeeTUO Hard Tri-Fold Tonneau Cover User Manual

Model: FEH030 | Brand: FeeTUO

1. Introduction

This manual provides detailed instructions for the installation, operation, and maintenance of your FeeTUO Hard Tri-Fold Tonneau Cover. Please read this manual thoroughly before installation and use to ensure proper function and longevity of the product.
This tonneau cover is designed for:

- 2007-2025 Chevy Silverado 1500 (5.8FT / 69.3 inch bed)
- 2007-2025 GMC Sierra 1500 (5.8FT / 69.3 inch bed)

Note: Not compatible with models equipped with CarbonPro Bed, Factory Utility Track System, or Roll Bar. Please verify your truck bed length before proceeding.



Image: FeeTUO Hard Tri-Fold Tonneau Cover securely installed on a silver pickup truck, showcasing its sleek, low-profile design.

2. Safety Information

- Always ensure the tonneau cover is securely latched before driving.
- Do not exceed the weight limit of 500 lbs on the cover.
- Keep hands and fingers clear of moving parts and hinges during folding and unfolding operations.
- Do not operate the vehicle with the cover partially open or unsecured.
- Regularly inspect the cover and mounting hardware for wear or damage. Replace any damaged components immediately.

3. Package Contents

Verify that all components are present before beginning installation:

- Hard Tri-Fold Tonneau Cover Assembly
- Mounting Clamps (Pre-installed or separate)

- Weather Stripping (if applicable)
- Instruction Manual (this document)

4. Setup and Installation

No drilling is required for installation. The process typically takes 10-15 minutes with one person.

4.1. Pre-Installation Checks

1. **Verify Bed Length:** Measure your truck bed length from the inside of the bulkhead to the inside of the tailgate, excluding the side rails. Ensure it matches the 5.8FT (69.3 inch) requirement for this model.

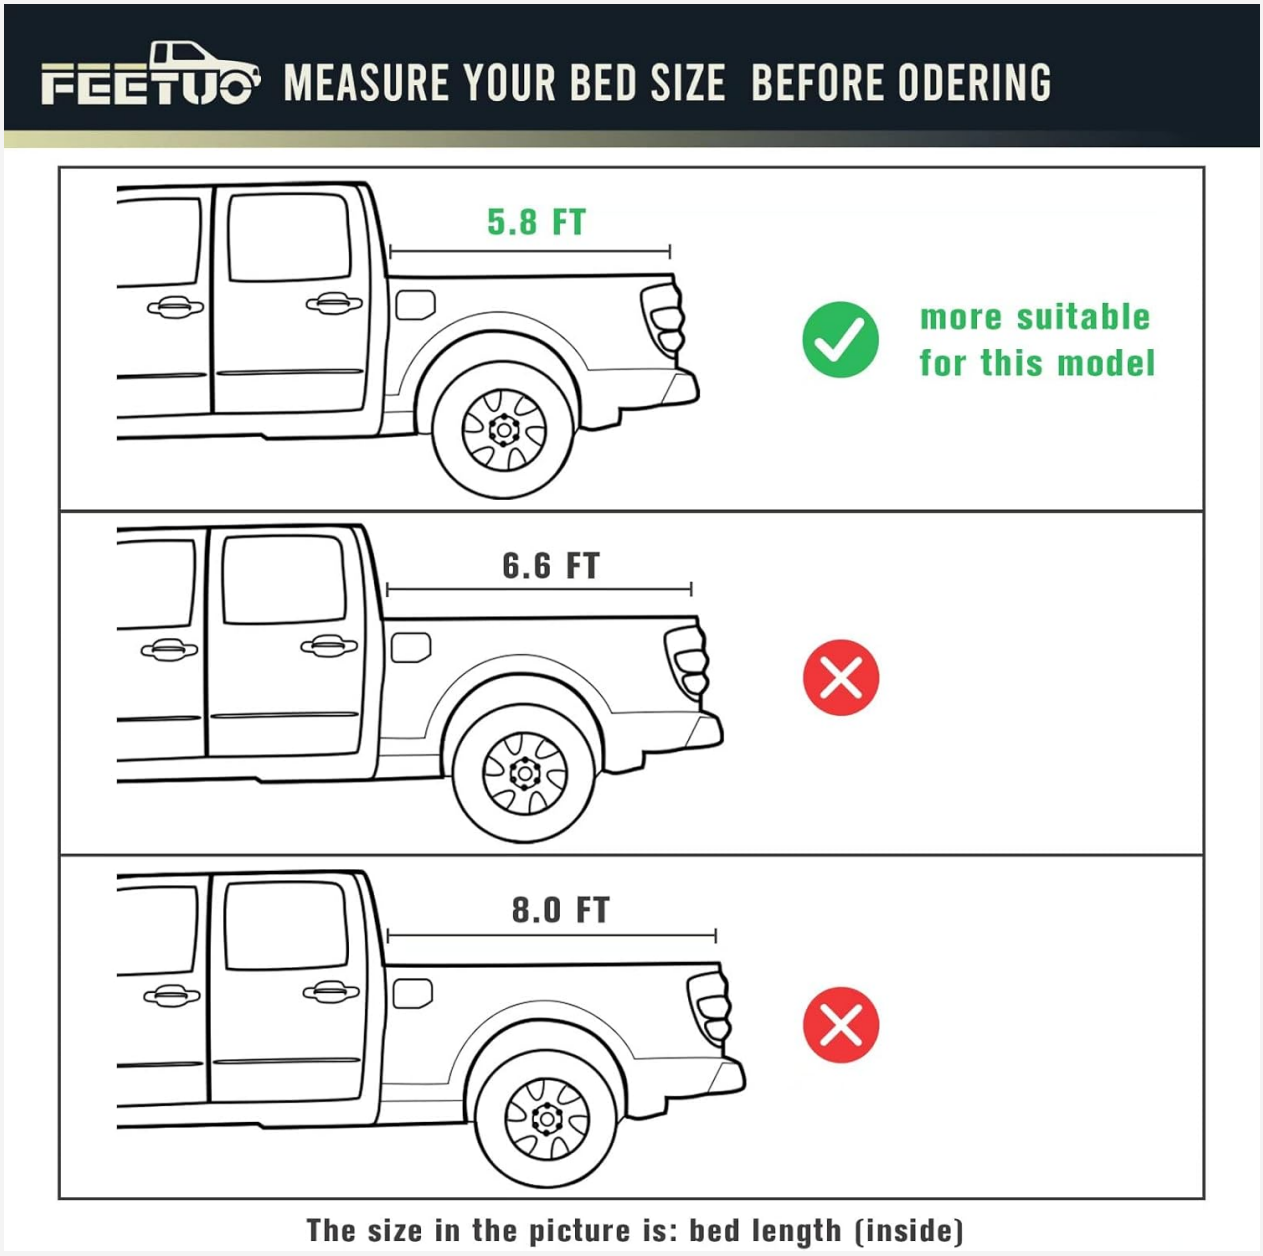


Image: Visual guide on how to accurately measure your truck bed length to ensure proper fitment of the tonneau cover.

2. **Check Compatibility:** Confirm your truck bed is free from accessories such as headache racks, tool boxes, roll bars, or badrails, as these may interfere with the cover's installation or operation.

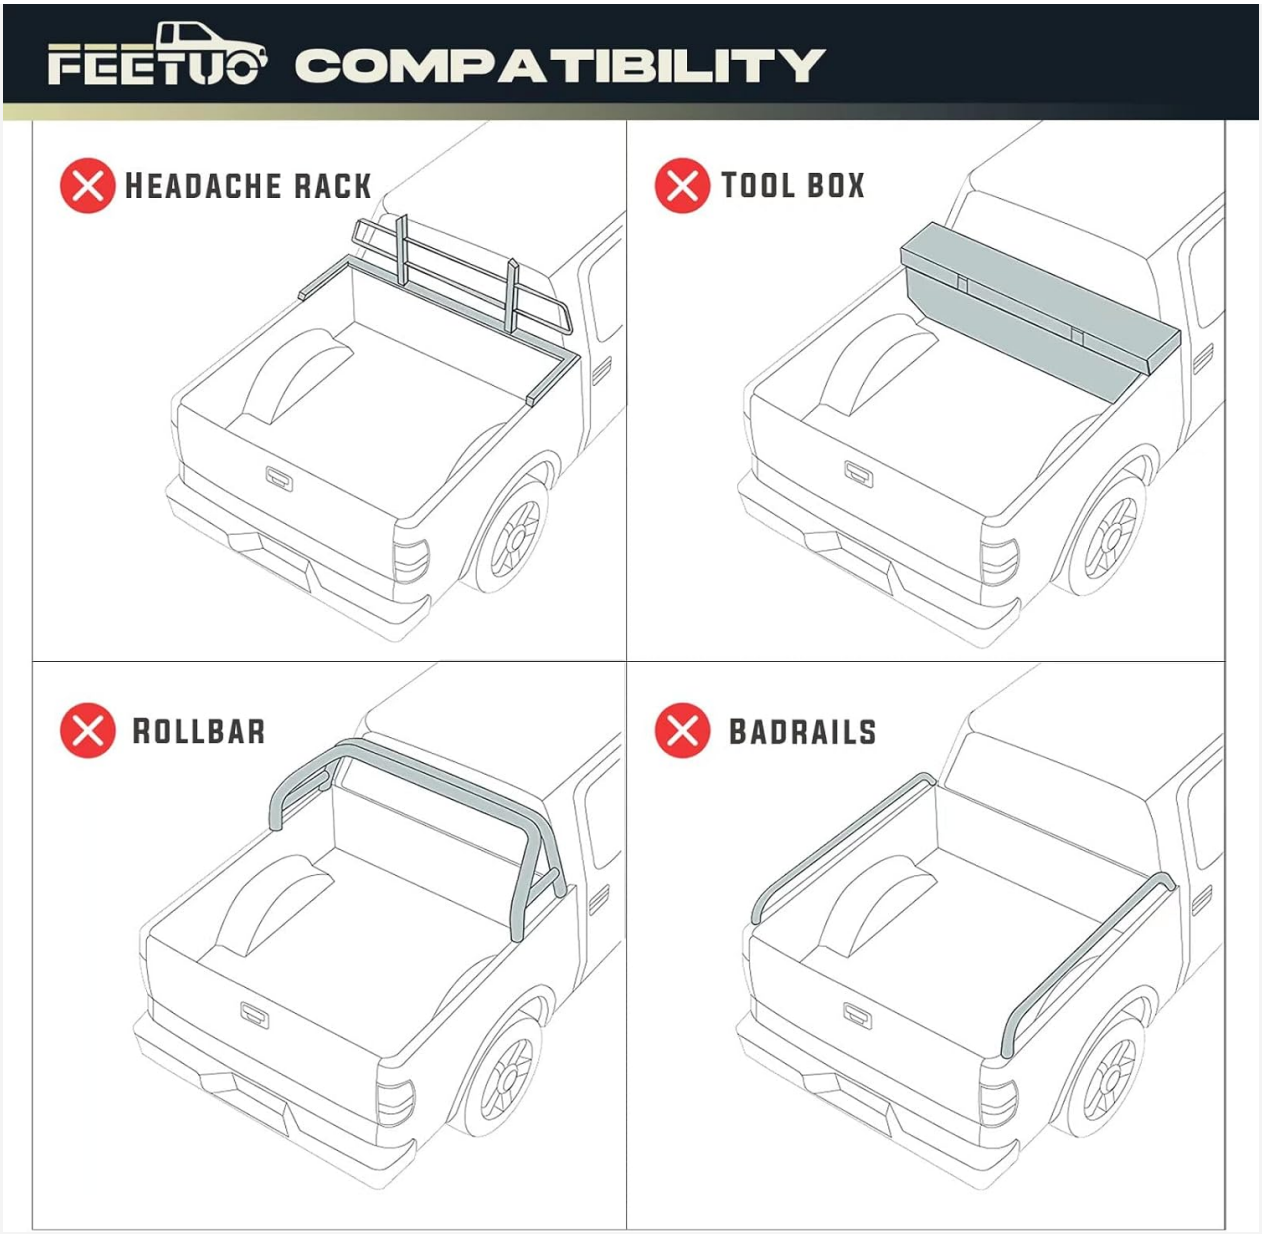


Image: Illustrations of various truck bed accessories that are incompatible with the FeeTUO Hard Tri-Fold Tonneau Cover.

3. **Clean Bed Rails:** Ensure the truck bed rails are clean and dry for optimal seal and clamp grip.

4.2. Installation Steps

1. **Position the Cover:** Place the folded tonneau cover assembly onto the front bulkhead of your truck bed. Ensure it is centered and aligned properly.
2. **Unfold First Section:** Carefully unfold the first section of the cover towards the tailgate.
3. **Secure Front Clamps:** Locate the front clamping mechanisms. Engage and tighten these clamps to secure the front section of the cover to the truck bed rails. Ensure a firm, even grip on both sides.



Image: Close-up views demonstrating the quick-release clamping system for secure and convenient installation.

4. **Unfold Remaining Sections:** Continue unfolding the remaining sections of the cover towards the tailgate.
5. **Secure Rear Clamps:** Once fully extended, engage and tighten the rear clamping mechanisms to secure the cover to the rear bed rails. These clamps are designed for quick release.
6. **Final Adjustment:** Check that the cover is evenly spaced and sealed along all sides of the truck bed. Adjust clamps as necessary to achieve a tight, secure fit.

5. Operation

The FeeTUO Hard Tri-Fold Tonneau Cover features a quick-release clamping system for easy folding and access to your truck bed.

5.1. Folding the Cover

1. **Release Rear Clamps:** From the tailgate, disengage the rear quick-release clamps on both sides of the cover.
2. **Fold Sections:** Lift and fold the rear section of the cover forward onto the middle section. Continue folding the combined sections towards the bulkhead.
3. **Secure Folded Cover:** Use the integrated straps or buckles to secure the folded cover against the bulkhead. This allows for partial bed access while driving.



Image: Sequential views demonstrating the tri-fold mechanism, allowing for easy partial or full access to the truck bed.

5.2. Unfolding the Cover

1. **Release Securing Straps:** Unfasten the straps or buckles holding the folded cover.
2. **Unfold Sections:** Carefully unfold the cover sections towards the tailgate, ensuring they lay flat and align with the bed rails.
3. **Secure Rear Clamps:** Engage and tighten the rear quick-release clamps to lock the cover in its fully closed position.

6. Maintenance

Regular maintenance will help preserve the appearance and functionality of your tonneau cover.

- **Cleaning:** Wash the cover regularly with mild soap and water. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **UV Protection:** The cover features a UV protective coating. To maintain this protection and prevent fading, consider applying a UV protectant specifically designed for tonneau covers periodically.

- **Hardware Inspection:** Periodically check all clamps, hinges, and mounting hardware for tightness and signs of wear. Tighten any loose fasteners.
- **Seals:** Inspect the weather seals around the perimeter of the cover for any damage or degradation. Replace worn seals to maintain water resistance.



Image: Illustration detailing the multi-layer construction of the tonneau cover, emphasizing its durability, waterproof, and UV resistant properties.

7. Troubleshooting

Problem	Possible Cause	Solution
Cover does not close properly	Misalignment; Obstruction; Loose clamps	Re-align cover on bed rails; Remove any obstructions; Tighten all clamps.
Water leakage into bed	Worn or damaged seals; Improper installation; Loose clamps	Inspect and replace seals if necessary; Re-install cover ensuring proper alignment and tight clamps.
Cover rattles while driving	Loose clamps; Improperly secured folded sections	Tighten all clamps; Ensure folded sections are securely strapped.

8. Specifications

Feature	Detail
Model Number	FEH030
Brand	FeeTUO
Material	PP Honeycomb and FRP panels
Finish	Scratch-resistant UV protective black powder coat
Weight Limit	500 lbs
Item Weight	56 pounds
Product Dimensions	70.47 x 27.95 x 5.31 inches
UPC	768564745101
Fitment	2007-2025 Chevy Silverado/GMC Sierra 1500 (5.8FT bed)

9. Warranty and Support

For warranty information or technical support, please refer to the FeeTUO official website or contact their customer service directly. Keep your purchase receipt as proof of purchase.
For further assistance, you may visit the FeeTUO Store on Amazon.

© 2025 FeeTUO. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B09WLH4C9M

More documents and user manuals: **https://manuals.plus/**