

iPormis MMS10004

iPormis Queen Bed Frame User Manual

Model: MMS10004 | Brand: iPormis

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- Exercise caution around sharp edges during assembly.
- Do not load the bed frame with more than 1000 pounds (453 kg). Exceeding this weight limit may cause damage or injury.
- Ensure all bolts and fasteners are securely tightened before use and periodically check for tightness.
- Keep small parts away from children during assembly to prevent choking hazards.
- Assemble the bed frame on a soft, clean surface to prevent scratching.

PRODUCT OVERVIEW

The iPormis Queen Bed Frame with Wingback is a modern upholstered platform bed designed for comfort, stability, and convenience. It features an 8-inch under-bed storage space, wood slat support, and a fabric headboard, eliminating the need for a box spring. Its noise-free design ensures a quiet sleeping environment.

Key Features

- **Comfortable Wingback Headboard:** Upholstered with skin-friendly, breathable linen and high-density memory foam for enhanced comfort. The headboard stands 24 inches tall.
- **Solid Construction:** Heavy-duty metal frame combined with 12 solid wood slats provides robust support for up to 1000 lbs.
- **Noise-Free Design:** Features EVA sponge and Velcro on slats to prevent friction and eliminate noise, ensuring a peaceful sleep.
- **Ample Under-Bed Storage:** Offers 8 inches of clearance, ideal for storing items or accommodating robotic

vacuums.

- **Easy Assembly:** Designed for quick and straightforward assembly, typically completed within 30 minutes.



Figure 1: Fully assembled iPormis Queen Bed Frame with Wingback in Dark Gray.

ASSEMBLY INSTRUCTIONS

The iPormis Queen Bed Frame is designed for easy assembly. All necessary parts, tools, and a detailed installation manual are included in the package. Please follow the step-by-step instructions provided in the separate installation manual for a smooth setup.

Before You Begin

- Unpack all components and verify against the parts list in the installation manual.
- Ensure you have enough clear space for assembly.
- It is recommended to have two people for assembly to ensure safety and ease.

Key Assembly Features

- **Labeled Parts:** All parts are clearly labeled to match the instructions.
- **Exact Fit Bolts:** Bolts are designed for precise fitting, simplifying the connection process.
- **Velcro Design:** Slats feature a Velcro design for quick and secure attachment to the frame, reducing assembly time and preventing movement.



Figure 2: Components such as thick wooden slats, metal center rails, and durable feet, designed for robust support.

VELCRO DESIGN For Easy Assembly



EVA MUTE FOAM Makes Noise Free

Figure 3: Velcro design on slats for easy assembly and EVA mute foam for noise reduction.

USAGE GUIDELINES

This bed frame is designed to support a Queen size mattress without the need for a box spring. The sturdy wood slats provide direct support for your mattress.

Mattress Compatibility

- Compatible with Queen size mattresses.
- Recommended mattress height: 8-12 inches for optimal aesthetic and functional fit with the headboard and frame height.

Under-Bed Storage

The 8-inch clearance beneath the bed provides convenient storage space. This height is also suitable for most robotic vacuum cleaners to operate underneath, facilitating easy floor cleaning.



Figure 4: Illustration of the 8-inch under-bed storage space.

CARE AND MAINTENANCE

Proper care will extend the lifespan and maintain the appearance of your iPormis bed frame.

- **Cleaning:** Wipe the frame and upholstered surfaces with a dry cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Noise Prevention:** The integrated EVA sponge and Velcro system is designed to prevent noise. If any squeaking occurs, re-check the tightness of all bolts and ensure slats are properly seated.
- **Regular Inspection:** Periodically inspect all connections and hardware to ensure they remain tight and secure. Tighten as necessary.
- **Weight Distribution:** Distribute weight evenly across the bed frame to prevent undue stress on any single point.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bed frame makes noise (squeaking/creaking)	Loose bolts or slats not properly seated.	Ensure all bolts are tightened securely. Check that all wooden slats are correctly positioned and the Velcro is fully engaged. The EVA mute foam should be in place.
Bed frame feels unstable or wobbly	Incomplete or incorrect assembly; loose connections.	Review the assembly instructions to ensure all steps were followed correctly. Tighten all bolts and connections. Verify that the center support legs are firmly on the ground.
Missing parts upon unboxing	Packaging error.	Contact iPormis customer support immediately with your purchase details and a list of missing components.

PRODUCT SPECIFICATIONS

Model Number	MMS10004
Size	Queen
Product Dimensions (L x W x H)	82" x 62" x 48"
Color	Dark Gray
Material	Upholstered Linen Fabric, Heavy-Duty Metal Structure, Wood Slats
Weight Capacity	1000 lbs (453 kg)
Under-Bed Clearance	8 inches
Assembly Required	Yes (Approx. 30 minutes)
Care Instructions	Wipe with Dry Cloth
Included Components	Headboard, Heavy-Duty Bed Frame, Installation Manual, Installation Tools & Accessories, Slats

QUEEN



Capacity



30mins
Assembly

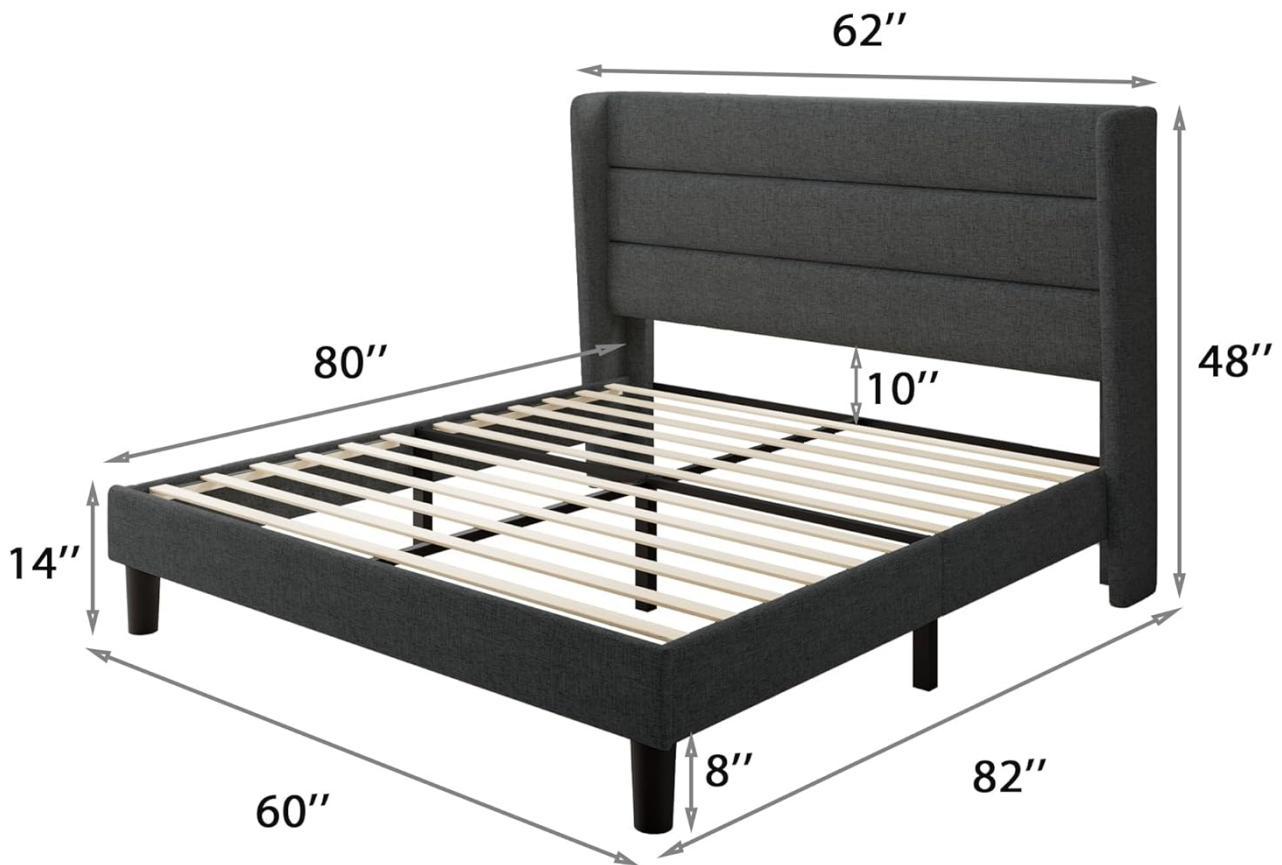


Figure 5: Detailed dimensions of the iPormis Queen Bed Frame.

CUSTOMER SUPPORT

For any questions, missing parts, or assistance with assembly, please contact iPormis customer support. Have your model number (MMS10004) and purchase details ready for faster service.

You can typically find contact information on the packaging or through the retailer where you purchased the product.