

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VECELO](#) /

› [VECELO Full Size Metal Platform Bed Frame with Headboard and Footboard, Model KHD-YT-F01-UW-BC08](#)

VECELO KHD-YT-F01-UW-BC08

VECELO Full Size Metal Platform Bed Frame Instruction Manual

Model: KHD-YT-F01-UW-BC08

INTRODUCTION

Thank you for choosing the VECELO Full Size Metal Platform Bed Frame. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure safe and proper use of your new bed frame. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

SAFETY INFORMATION

- Always assemble the bed frame on a soft, clean surface to prevent damage to the product or your floor.
- Ensure all bolts and screws are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not exceed the maximum weight capacity of the bed frame.
- Keep small parts and packaging materials away from children to prevent choking hazards.
- Do not stand or jump on the bed frame.
- Use only the tools provided or recommended in this manual.

PACKAGE CONTENTS

Before assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer service.

- Headboard components
- Footboard components
- Side rails
- Center support bar(s)

- Metal slats
- Support legs
- Hardware pack (bolts, washers, nuts, Allen wrench)
- Instruction manual

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly is designed to be straightforward with labeled parts and included tools. It is recommended to have two people for assembly, though it can be completed by one person.

1. **Unpack and Identify Parts:** Carefully unpack all components and lay them out on a clean, soft surface. Match each part to the corresponding label in the parts list.
2. **Assemble Headboard and Footboard:** Attach the vertical posts to the decorative panels of the headboard and footboard using the provided bolts and Allen wrench. Do not fully tighten bolts until all components are aligned.
3. **Attach Side Rails:** Connect the side rails to the assembled headboard and footboard. Ensure the connection points are secure.
4. **Install Center Support:** Place the center support bar(s) and attach any necessary support legs.
5. **Place Metal Slats:** Lay the metal slats across the bed frame. Ensure they are evenly spaced and secured according to the instructions. The square steel design helps prevent noise and provides robust support.



Humanized Design Easy to Assemble

Figure 1: Humanized Design for Easy Assembly. All parts are clearly labeled for a quick and simple setup.



Figure 2: Square steel slats provide strong support and minimize noise.

Once all components are in place, go back and fully tighten all bolts and screws. Your bed frame is now ready for use.

OPERATING INSTRUCTIONS

This VECELO bed frame is designed to support a full-size mattress directly, eliminating the need for a box spring. Simply place your mattress on the assembled metal slats. The 12.6-inch clearance from the floor

provides convenient storage space underneath for bins, baskets, or luggage.



Figure 3: Ample under-bed storage space for various items.



Figure 4: The VECELO bed frame with a mattress and bedding, showcasing its Victorian style.

MAINTENANCE

- **Cleaning:** Wipe the metal frame with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as they may damage the finish.
- **Inspection:** Periodically inspect all connections and hardware to ensure they remain tight. Re-tighten any loose bolts or screws to maintain stability and prevent squeaking.
- **Moving the Bed:** When moving the bed frame, lift it rather than dragging it to prevent damage to the frame and your flooring.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bed frame is wobbly or unstable.	Loose bolts or uneven assembly.	Check and tighten all bolts. Ensure the frame is assembled on a level surface.

Problem	Possible Cause	Solution
Squeaking noises.	Loose connections or friction between metal parts.	Re-tighten all bolts. Apply a small amount of lubricant (e.g., silicone spray) to connection points if necessary.
Mattress sags.	Incorrect mattress size or damaged slats.	Ensure the mattress is the correct full size. Inspect slats for damage and replace if needed.

SPECIFICATIONS

Full Size Bed Frame Dimension

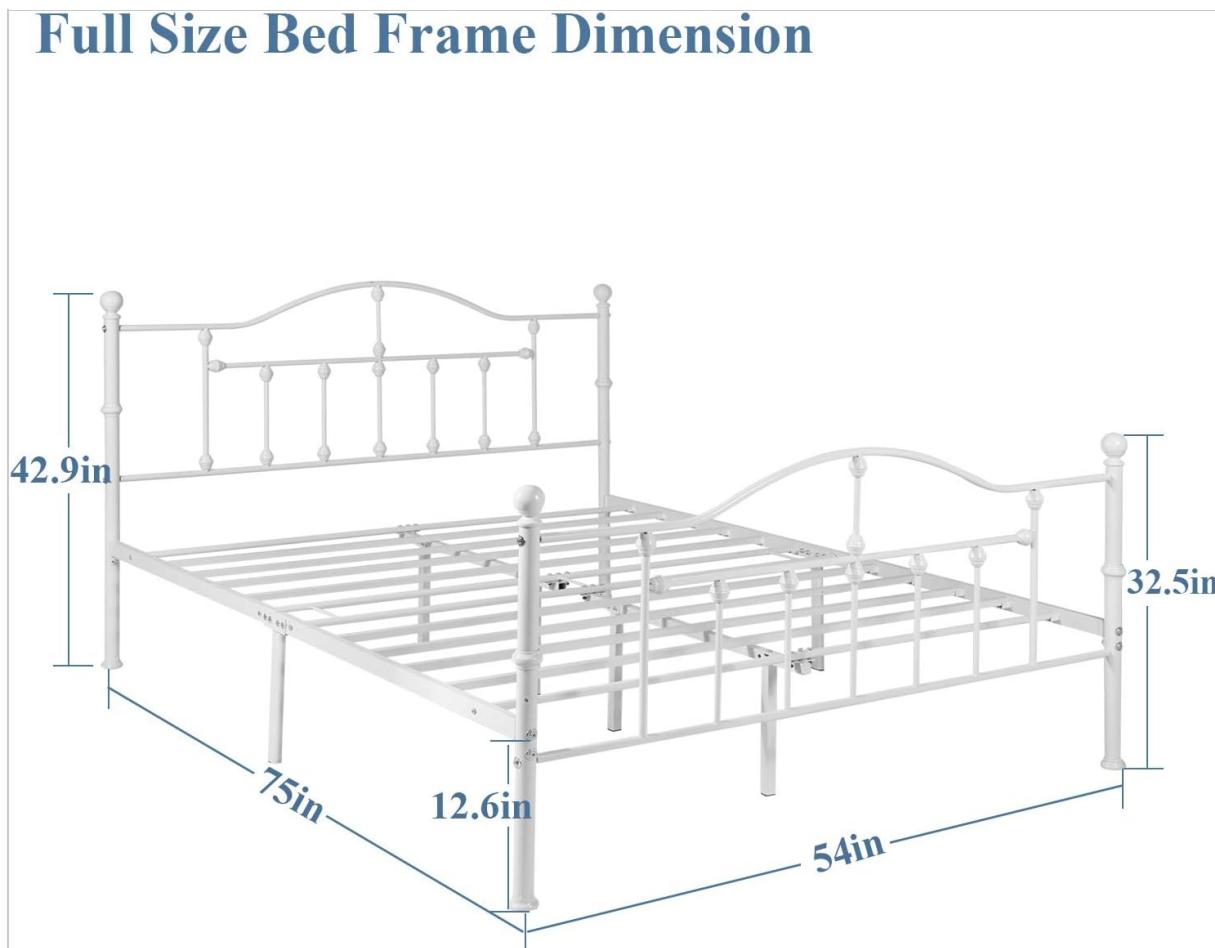


Figure 5: VECELO Full Size Bed Frame Dimensions.

Feature	Detail
Size	Full
Product Dimensions (L x W x H)	75" x 54" x 42.9"
Under-bed Clearance	12.6 inches
Special Feature	Squeak Resistant
Color	White
Finish Type	Steel
Material	Metal

Feature	Detail
Assembly Required	Yes
Item Weight	51.4 pounds
Model Number	KHD-YT-F01-UW-BC08
UPC	810110780132

WARRANTY AND SUPPORT

VECELO provides a free parts replacement warranty. For any questions, concerns, or to request replacement parts, please contact VECELO customer service. Refer to your purchase documentation for specific warranty terms and contact information.