

[manuals.plus](#) /› [Bme](#) /› [Bme Dinkee 15" Solid Wood Platform Bed Frame Instruction Manual](#)

## Bme Dinkee Bedframe Twin Dark Chocolate

# Bme Dinkee 15" Solid Wood Platform Bed Frame Instruction Manual

Model: Dinkee Bedframe Twin Dark Chocolate | Brand: Bme

## 1. INTRODUCTION

Thank you for choosing the Bme Dinkee 15" Solid Wood Platform Bed Frame. This manual provides essential information for the proper assembly, operation, maintenance, and troubleshooting of your new bed frame. Designed with a modern and minimalist style, this bed frame offers robust wood slat support and eliminates the need for a box spring, ensuring a comfortable and noise-free sleep experience. Please read these instructions carefully before beginning assembly to ensure safe and correct setup.

## 2. SAFETY INFORMATION

- Always follow all assembly instructions carefully.
- Two-person assembly is highly recommended to ensure safety and ease of installation.
- Wear gloves during assembly to protect your hands from splinters or pinches.
- Ensure all bolts and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not exceed the maximum weight recommendation for your bed frame size: Twin bed frames support up to 350 pounds.
- Keep small parts and packaging materials away from children and pets to prevent choking hazards.
- Do not stand or jump on the bed frame.

### 3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer service immediately.




Image: All components of the Bme Dinkee bed frame laid out for inspection.

- Bed frame components (side rails, end rails, legs)
- Wood slats
- Installation Hardware (bolts, washers, Allen wrench)
- Installation Manual (this document)

## 4. SETUP AND ASSEMBLY

The Bme Dinkee bed frame is designed for quick and easy assembly. All parts are detachable and packed efficiently. An instruction sheet is included, and a video guide may also be available for visual assistance. Two-person assembly is recommended, and wearing gloves is advised for a smooth process. A drilling tool can assist with setup, though an Allen wrench is provided.

- 1. Unpack and Identify Parts:** Carefully unpack all components and lay them out on a clean, soft surface to prevent scratches. Identify each part according to the parts list in your manual.
- 2. Assemble the Frame:** Connect the side rails and end rails using the provided hardware. Ensure all connections are snug but do not fully tighten bolts until the entire frame is assembled.
- 3. Attach the Legs:** Securely attach the tapered legs to the bed frame corners.

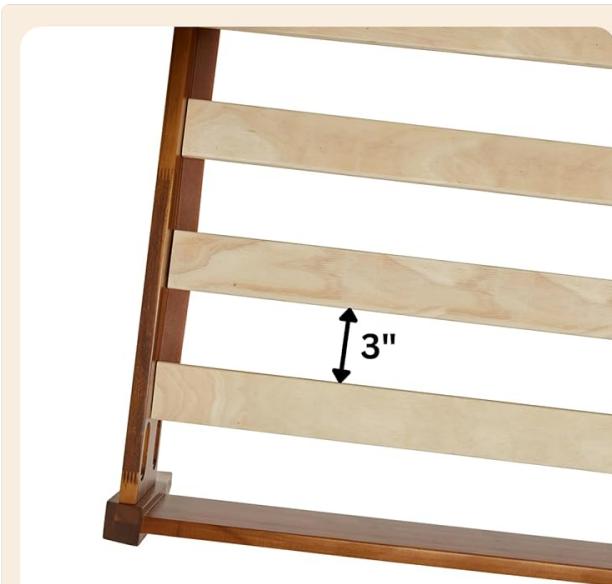

**FULL  
SOLID  
WOOD**

**Refined design is reflected in every corner**



Image: Detail of the bed frame leg, showcasing the tapered design.

- 4. Install the Slats:** Place the wood slats across the frame. The slats are designed to fit securely and provide optimal mattress support without the need for a box spring.



Image: Installation of a wooden slat into the bed frame.

5. **Final Tightening:** Once all components are in place and aligned, systematically tighten all bolts using the provided Allen wrench. Ensure all connections are firm and stable.

## 5. OPERATING (USAGE)

The Bme Dinkee bed frame is designed to provide a supportive and stylish foundation for your mattress. Its robust wood slat system eliminates the need for a box spring, offering direct support and increasing mattress longevity. The design also provides ample space underneath for storage and easy cleaning.



Image: The Bme Dinkee bed frame in a bedroom setting.

- **Mattress Placement:** Simply place your mattress directly onto the installed wood slats. No box spring is required.
- **Weight Distribution:** Ensure the weight on the bed frame is distributed evenly to maintain stability and prevent undue stress on any single point.
- **Under-Bed Storage:** Utilize the generous 8.3-inch clearance beneath the frame for convenient storage of items in bins or containers.

# Bed Frame SIZES AND DIMENSIONS

STANDARD MATTRESS SIZES	MATTRESS SIZE FIT	BME BED FRAME DIMENSIONS	BEST FIT
KING	79.5" L X 75.9" W	81.8" L X 78" W X 14.8" H	
QUEEN	79.5" L X 59.8" W	81.8" L X 62" W X 14.8" H	
FULL	74.4" L X 53.9" W	76.8" L X 56" W X 14.8" H	
TWIN	74.4" L X 38.3" W	76.8" L X 40.5" W X 14.8" H	

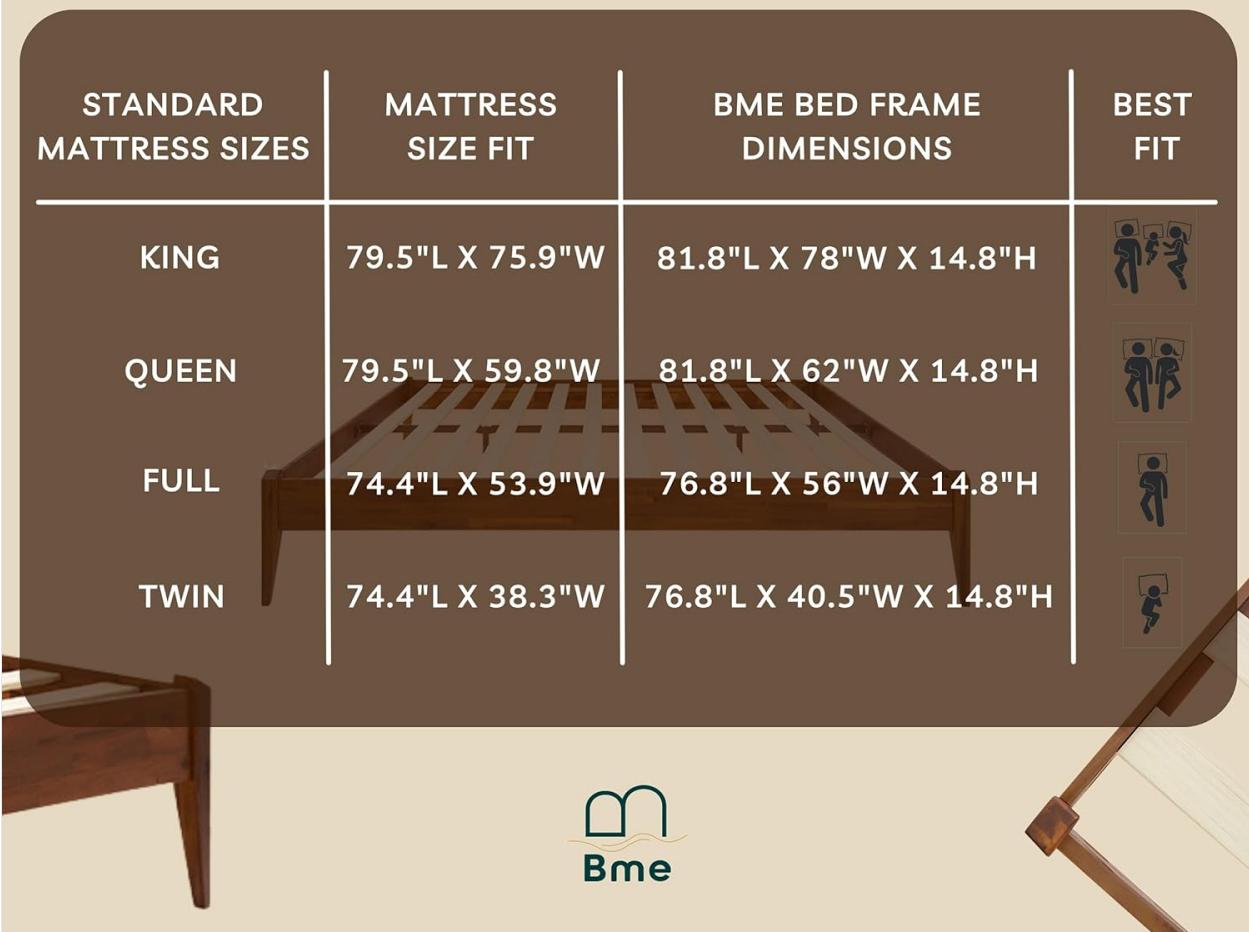


Image: Demonstrating mattress placement on the bed frame.

## 6. MAINTENANCE

Proper maintenance will help preserve the beauty and longevity of your Bme Dinkee bed frame.

- Cleaning:** Wipe the wood surfaces with a dry, soft cloth to remove dust and debris. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the finish.
- Hardware Check:** Periodically inspect all bolts and connections to ensure they remain tight. Re-tighten any loose hardware to maintain the frame's stability and prevent squeaking.
- Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause wood to fade or crack. Position your bed frame away from direct sunlight or use curtains/blinds to protect it.
- Humidity Control:** Maintain a consistent humidity level in your room to prevent wood from expanding or contracting, which can lead to warping or cracking.

## 7. TROUBLESHOOTING

---

This section addresses common issues you might encounter with your bed frame.

Problem	Possible Cause	Solution
Bed frame is squeaking.	Loose hardware; friction between parts.	Ensure all bolts are securely tightened. Apply a small amount of wax or silicone spray to points of friction between wood components or slats if necessary. Ensure the bed frame is not pushed tightly against a wall, which can cause friction.
Bed frame feels unstable or wobbly.	Loose connections; uneven floor.	Re-tighten all assembly hardware. Check if the bed frame is on an even surface; use furniture pads or shims under legs if the floor is uneven.
Slats are shifting or falling out.	Improper installation; slats not fully seated.	Ensure each slat is fully seated in its designated slot or support. Verify that the mattress is evenly distributed across the slats.

## 8. SPECIFICATIONS

---

Detailed specifications for the Bme Dinkee Twin Dark Chocolate Bed Frame.



Image: Dimensions and weight capacity of the Twin bed frame.

Feature	Detail
Size	Twin
Product Dimensions (L x W x H)	76.8" x 40.55" x 14.8"
Color	Dark Chocolate
Material Type	Acacia Wood, Wood
Finish Type	Polished, Powder Coated
Maximum Weight Recommendation	350 Pounds
Item Weight	44.1 Pounds
Ground To Item Distance (Clearance)	8.3 Inches
Special Features	Easy To Assemble, Lightweight, No Box Spring Needed, No Headboard, Sturdy
Required Assembly	Yes


## 9. WARRANTY AND SUPPORT

Bme is committed to providing excellent customer service and product satisfaction.

- Warranty:** This product comes with a 1-year manufacturer's warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use.
- Returns:** We offer a 30-day return policy from the date of delivery. Please contact the seller for more information and to initiate a return.
- Customer Support:** Our dedicated customer care team is available to assist you with any concerns, questions, or issues you may have regarding your Bme Dinkee bed frame. Please refer to your purchase documentation for contact information or visit the Bme store on Amazon.

© 2023 Bme. All rights reserved. Information subject to change without notice.

### Related Documents - Dinkee Bedframe Twin Dark Chocolate

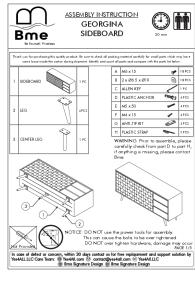	<p><a href="#">Bme Vivian/Ethan with Headboard Assembly Instructions</a></p> <p>Comprehensive assembly instructions for the Bme Vivian/Ethan bed frame with headboard. This guide provides a detailed parts layout, hardware specifications, and step-by-step instructions to ensure a smooth and correct assembly process. Estimated assembly time is 45 minutes. For support or concerns, contact Yes4ALL.LLC within 30 days.</p>
	<p><a href="#">14. BME-Praxisforum: Indirekter Einkauf – Organisation, Prozesse, Digitalisierung</a></p> <p>Informationen zum 14. BME-Praxisforum Indirekter Einkauf am 17. September 2025 in Mannheim. Fokus auf Organisation, Prozesse, Digitalisierung sowie Workshops zu Wertbeiträgen, Kostenmanagement und eLÖSUNGEN im Einkauf.</p>
	<p><a href="#">Bme Georgina Sideboard Assembly Instructions</a></p> <p>Detailed assembly instructions for the Bme Georgina Sideboard, including parts list, step-by-step guidance, and adjustment procedures. Learn how to safely assemble your new sideboard.</p>

	<p><a href="#"><b>PRO:CONNECT25 - 60th Symposium for Purchasing and Logistics</b></a></p> <p>Join the PRO:CONNECT25 event, the 60th Symposium for Purchasing and Logistics, taking place in Berlin from November 11-13, 2025. Discover expert insights, networking opportunities, and innovative solutions in procurement, supply chain, and logistics.</p>
	<p><a href="#"><b>Data Analyst Procurement (BME) Certification Course   BME Akademie</b></a></p> <p>Enroll in the BME Akademie's online certification course for Data Analyst Procurement. Develop essential data analytics skills for procurement processes. Learn practical applications, data handling, and reporting. Course runs from February to June 2026.</p>
	<p><a href="#"><b>Diplomierter Einkaufsmanager (BME)® - Kursübersicht und Zeitplan</b></a></p> <p>Detaillierte Übersicht der Modulbausteine und des Zeitplans für den Lehrgang 'Diplomierter Einkaufsmanager (BME)®', inklusive Themen, Daten und Prüfungsformate.</p>