



Manuals.plus /

› Asidrama /

› Asidrama 10 Pack Brushed Satin Nickel Cabinet Knobs User Manual

Asidrama 10 Pack Cabinet Knobs B0B4CVR6KB

Asidrama 10 Pack Brushed Satin Nickel Cabinet Knobs User Manual

Model: 10 Pack Cabinet Knobs (ASIN: B0B4CVR6KB)

1. PRODUCT OVERVIEW

The Asidrama 10 Pack Brushed Satin Nickel Cabinet Knobs are designed for use on cabinets, drawers, dressers, and wardrobes. These knobs are constructed from zinc alloy with a brushed satin nickel finish, providing a durable and functional hardware solution for various furniture types.



Image 1.1: Asidrama Brushed Satin Nickel Cabinet Knobs installed on white kitchen cabinets and drawers, showcasing their appearance in a typical setting.

1.1 Package Contents

- 10 x Asidrama Brushed Satin Nickel Cabinet Knobs
- Mounting Screws (Break-away type for adjustable length)

2. INSTALLATION INSTRUCTIONS

Follow these steps to properly install your Asidrama cabinet knobs. Ensure you have basic tools such as a screwdriver and pliers (for screw adjustment).

2.1 Required Tools

- Phillips head screwdriver
- Pliers (for adjusting screw length)

- Drill with appropriate bit (if drilling new holes)
- Measuring tape or ruler
- Pencil or marker

2.2 Step-by-Step Installation

1. **Prepare the Surface:** If replacing existing knobs, remove the old hardware. If installing on new cabinets or drawers, mark the desired location for the knob hole using a pencil. Ensure the mark is centered and level.
2. **Drill the Hole (if necessary):** Using a drill with a bit slightly larger than the screw diameter, carefully drill a hole through the marked spot. For existing holes, proceed to the next step.
3. **Select Screw Length:** The included screws are designed to be break-away, allowing adjustment for different material thicknesses.



Image 2.1: Illustration of break-away screws and the method for shortening them with pliers to fit various cabinet or drawer thicknesses.

Measure the thickness of your cabinet door or drawer front. Select the appropriate break point on the screw that allows it to pass through the material and engage sufficiently with the knob. Use pliers to firmly snap off the excess length of the screw at the desired score line.

4. **Attach the Knob:** Insert the adjusted screw from the inside of the cabinet door or drawer, through the drilled hole. Align the knob with the screw on the outside.

5. **Tighten the Screw:** Using a Phillips head screwdriver, turn the screw clockwise until the knob is securely fastened. Do not overtighten, as this may strip the screw or damage the cabinet material.



Image 2.2: Asidrama Brushed Satin Nickel Cabinet Knobs integrated into a kitchen environment, demonstrating their aesthetic contribution.

3. OPERATION

These cabinet knobs are designed for simple and straightforward operation. Grasp the knob firmly and pull to open drawers or cabinet doors. Push to close. Ensure the knob is securely attached to prevent loosening during regular use.



Image 3.1: Asidrama Brushed Satin Nickel Cabinet Knobs on white dresser drawers, illustrating their functional use on furniture.

4. MAINTENANCE


To maintain the appearance and functionality of your Asidrama cabinet knobs, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the knobs regularly with a soft, damp cloth. Avoid using abrasive cleaners, harsh chemicals, or polishes, as these can damage the brushed satin nickel finish.
- **Inspection:** Periodically check the tightness of the screws. If a knob feels loose, gently tighten the screw from the inside of the cabinet or drawer using a Phillips head screwdriver.
- **Avoid Impact:** While durable, avoid striking the knobs with hard objects to prevent dents or scratches.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Knob is loose	Screw is not fully tightened.	Tighten the mounting screw from the inside of the cabinet or drawer using a Phillips head screwdriver.
Knob spins freely	Screw is stripped or hole is too large.	Remove the knob and screw. Inspect the screw for damage. If stripped, replace the screw. If the hole is too large, consider using a larger screw or filling the hole with wood filler and re-drilling.
Difficulty installing screw	Screw length is incorrect for material thickness.	Re-evaluate the cabinet/drawer thickness and adjust the break-away screw length using pliers as per installation instructions.

6. SPECIFICATIONS

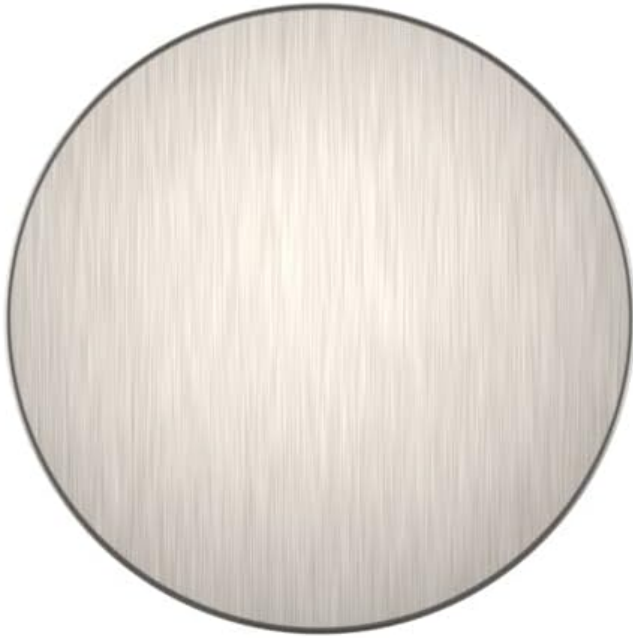

Wide: 1.2 inch(30mm)



High: 1.1 inch(28mm)

Total Length: 0.86inch(22mm)

Image 6.1: Detailed dimensions of the Asidrama cabinet knob, including diameter, base diameter, and height.

- **Material:** Zinc Alloy

- **Finish:** Brushed Satin Nickel
- **Knob Diameter:** 1.2 inches (30mm)
- **Base Diameter:** 0.86 inches (22mm)
- **Height:** 1.1 inches (28mm)
- **Item Weight (per knob):** Approximately 0.053 kg (0.117 lbs)
- **Included Components:** Knob, Mounting Screw
- **Application:** Indoor use for cabinets, drawers, dressers, wardrobes.

7. WARRANTY AND SUPPORT

Asidrama provides assurance regarding the quality of its products. If you encounter any quality problems with your cabinet knobs, the manufacturer will replace them. For support or warranty claims, please contact Asidrama directly through their official channels or the retailer where the product was purchased.

