

[Manuals.plus](#) /

› [KOMFOTT](#) /

› KOMFOTT Queen Size Wood Platform Bed Frame with Headboard - Instruction Manual

KOMFOTT 10196-T-F-Q-HU

KOMFOTT Queen Size Wood Platform Bed Frame with Headboard - Instruction Manual

1. INTRODUCTION

Thank you for choosing the KOMFOTT Queen Size Wood Platform Bed Frame with Headboard. This manual provides essential information for the safe assembly, proper use, and maintenance of your new bed frame. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

Important Safety Information

WARNING: Exceeding the weight capacity of 720 lbs for the Queen size and improper assembly may result in safety hazards and product damage. Always ensure all connections are secure before use.

Keep small parts away from children during assembly. Assemble on a soft, clean surface to prevent scratches. Two people are recommended for assembly.



Image 1.1: The KOMFOTT Queen Size Wood Platform Bed Frame with Headboard, fully assembled in a bedroom.

2. PACKAGE CONTENTS

Please verify that all components are present before starting assembly. If any parts are missing or damaged, contact customer support.

- Headboard Panels
- Side Rails (Left and Right)
- Footboard
- Center Support Beam
- Support Legs (for center beam and frame corners)
- Wooden Slats (Roll-out design)
- Hardware Pack (screws, bolts, washers, Allen wrench)
- User Guide (this document)



Image 2.1: The bed frame components, including the headboard and wooden slats, before mattress placement.

3. SETUP (ASSEMBLY INSTRUCTIONS)

Follow these steps carefully to assemble your KOMFOTT bed frame. It is recommended to have two people for assembly.

1. **Unpack and Identify Parts:** Lay out all components on a clean, soft surface. Compare them with the package contents list to ensure everything is present.
2. **Assemble the Headboard:** Attach the headboard panels together using the provided hardware. Ensure all connections are tight.
3. **Attach Side Rails to Headboard:** Connect the side rails to the assembled headboard using the designated bolts and nuts. Do not fully tighten yet.
4. **Attach Footboard:** Connect the footboard to the other end of the side rails. Once all four corners are connected, gently tighten all bolts.
5. **Install Center Support Beam:** Place the center support beam along the middle of the frame. Attach any required support legs to the center beam and the frame corners.
6. **Position Wooden Slats:** Unroll the wooden slats across the bed frame. The slats are designed for easy assembly. Secure them to the side rails using the pre-drilled holes and screws, if applicable. Ensure slats are evenly spaced and firmly in place to prevent movement and noise.
7. **Final Tightening:** Double-check all bolts and screws to ensure they are fully tightened. This will enhance the stability and durability of the bed frame.



Secured Slats

No Squeaking Noise

Integrated Headboard


Durable & impressive



Slatted Platform Bed

No Box-spring Needed

Image 3.1: Close-up of the secured wooden slats and the integrated headboard design, highlighting key assembly points.




Sturdy Wooden
Construction



Noise-free Sleep



Simple
Maintenance

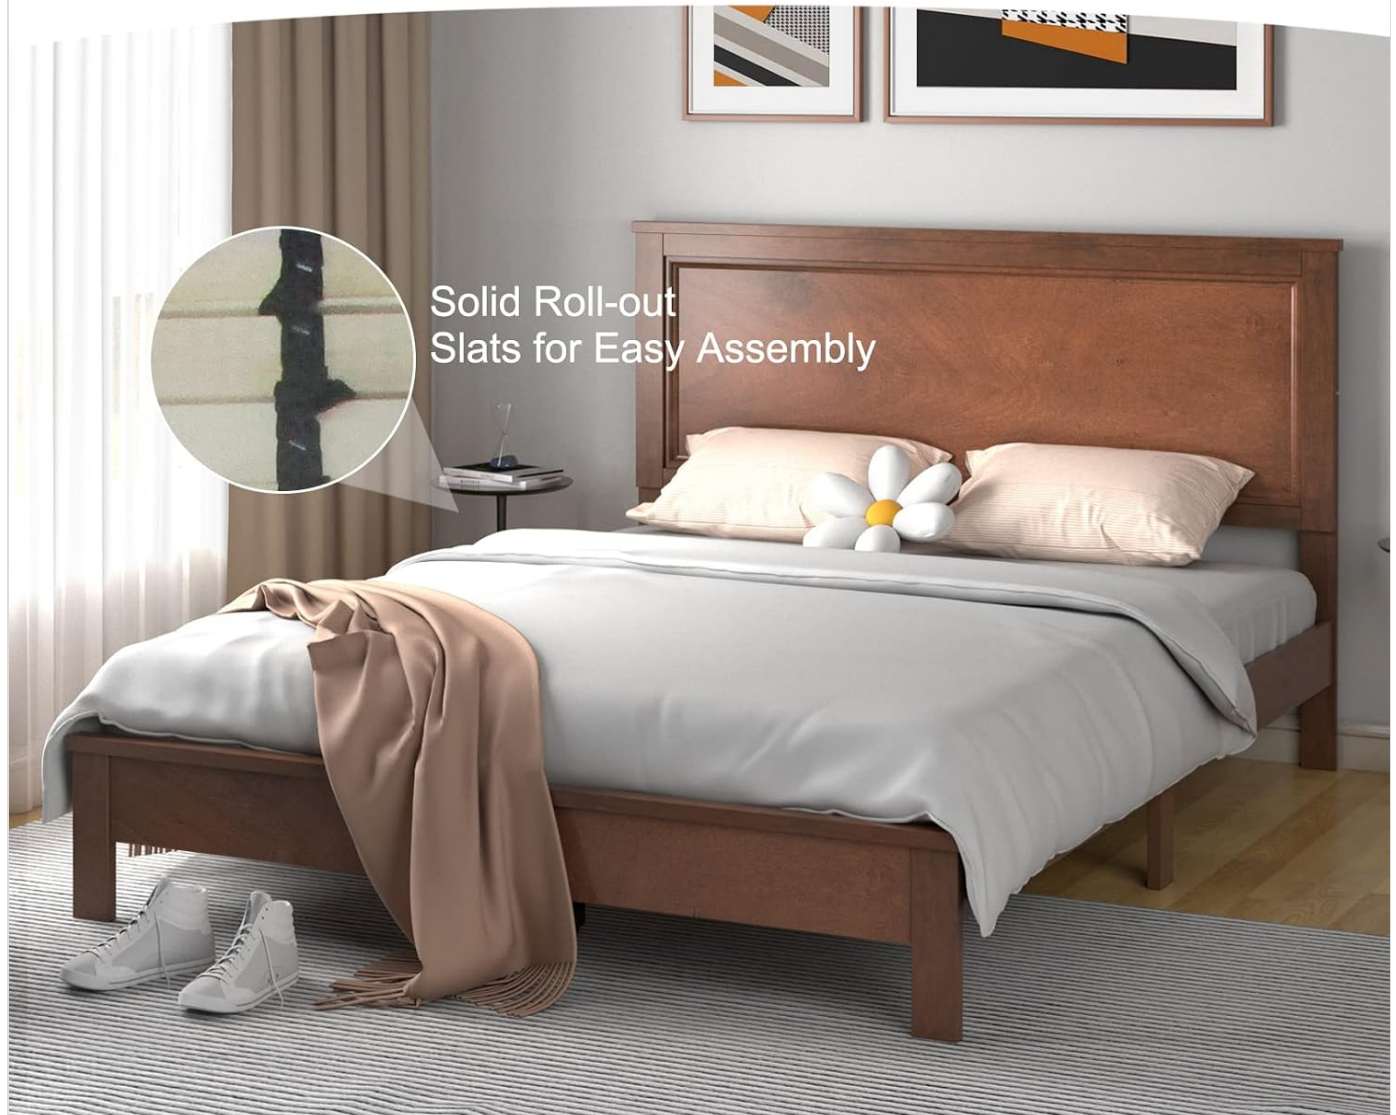

Solid Roll-out
Slats for Easy Assembly

Image 3.2: Visual representation of the bed frame's construction and the roll-out slat system for simplified assembly.

4. OPERATING (USAGE)

Mattress Placement

This platform bed frame is designed to be used without a box spring. Simply place your Queen size mattress directly onto the wooden slats. The raised side rails will help keep the mattress securely in place.

Accommodates Mattresses of Standard Size

The bedframe with raised side rails can keep the mattress in place.



Image 4.1: Demonstrating the placement of a mattress directly onto the bed frame's slats.

Under-Bed Storage

The bed frame offers 5.5 inches of under-bed clearance, providing valuable space for storage. This area can be utilized for boxes, luggage, or other items, helping to keep your room tidy and organized. The clearance also facilitates easier cleaning underneath the bed.



Ample Under-bed Space

Great for storage & cleaning

Image 4.2: Illustration of the 5.5-inch under-bed space, suitable for storage and cleaning access.

5. MAINTENANCE

Cleaning Instructions

To maintain the appearance and longevity of your bed frame, regularly wipe it with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the wood finish. For spills, blot immediately with a clean, damp cloth and then dry thoroughly.

Periodic Checks

Periodically inspect all bolts and screws to ensure they remain tight. Loose connections can lead to instability and potential damage. Tighten any loose hardware as needed.

6. TROUBLESHOOTING

- **Squeaking Noises:** If the bed frame produces squeaking noises, check all connections. Tighten any loose bolts or screws. Ensure the wooden slats are properly seated and not rubbing against the frame. Applying a small amount of furniture wax or lubricant to contact points can sometimes help.
- **Instability/Wobbling:** Ensure the bed frame is assembled on a level surface. Verify that all support legs are making firm contact with the floor. Re-tighten all assembly hardware.
- **Slats Shifting or Falling:** Confirm that the slats are correctly positioned and secured to the side rails. If the slats are designed to be secured with screws, ensure all screws are in place and tightened.
- **Damaged Parts:** If any part of the bed frame is damaged during shipping or assembly, do not attempt to force it. Contact customer support for replacement parts.

7. SPECIFICATIONS

Brand	KOMFOTT
Model Number	10196-T-F-Q-HU
Size	Queen
Color	Walnut
Material	Rubber Wood + Engineered Wood
Overall Dimensions (L x W x H)	82.5" x 63" x 42"
Item Weight	65 pounds
Weight Capacity	720 lbs
Under-Bed Clearance	5.5 Inches
Assembly Required	Yes
Special Feature	No Box Spring Needed

Queen Size



Image 7.1: Dimensional diagram of the KOMFOTT Queen Size Wood Platform Bed Frame.

8. WARRANTY AND SUPPORT

Warranty Information

Please refer to your purchase documentation or contact the retailer for specific warranty details regarding your KOMFOTT bed frame. Keep your proof of purchase for any warranty claims.

Customer Support

For assistance with assembly, missing parts, or any other inquiries, please contact KOMFOTT customer support through the retailer's platform or the official KOMFOTT website. Provide your model number (10196-T-F-Q-HU) and purchase date for faster service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B7JVM5J8>

More documents and user manuals: <https://manuals.plus/>