

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [P PURLOVE](#) /

› [P PURLOVE Twin Size L-Shape Floor Bed Instruction Manual](#)

P PURLOVE B0B8VRYNQP

P PURLOVE Twin Size L-Shape Floor Bed Instruction Manual

Model: B0B8VRYNQP

INTRODUCTION

Thank you for choosing the P PURLOVE Twin Size L-Shape Floor Bed. This manual provides essential information for the safe assembly, operation, and maintenance of your new bed frame. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

IMPORTANT SAFETY INFORMATION

- **Adult Assembly Required:** This product must be assembled by adults.
- **Keep Small Parts Away from Children:** Small parts can pose a choking hazard.
- **Regular Checks:** Periodically check all connectors and fasteners to ensure they are tight and secure.
- **Weight Capacity:** Do not exceed the recommended weight capacity of 250 lbs per bed.
- **Proper Mattress Use:** Use only mattresses of the specified size (Twin size) and recommended thickness (8 inches).
- **Avoid Climbing:** Children should not climb on the bed frame structure, as it is not designed for climbing.
- **Placement:** Ensure the bed is placed on a flat, stable surface.

PACKAGE CONTENTS

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Bed Frame Components (various wood panels, rails, and posts)
- Slats (for mattress support)
- Hardware Pack (screws, bolts, nuts, Allen wrench)
- Assembly Instructions (this manual)

Note: This product is delivered in two packages, which may arrive at different times. Please be patient if they do not arrive simultaneously.

ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your P PURLOVE L-Shape Floor Bed. It is recommended to have two adults for assembly.

Step 1: Unpack and Identify Parts

Carefully unpack all components and lay them out on a soft, clean surface to prevent scratches. Identify each part using the provided parts list (not included in this text, but would be in a physical manual).



Image Description: An exploded view of the bed frame components, showing various wooden pieces, including side rails, headboards, footboards, and roof sections, laid out for assembly.

Step 2: Assemble the Main Bed Frames

Connect the side rails to the headboards and footboards for both twin bed sections using the provided hardware. Ensure all connections are secure but do not fully tighten until the entire frame is assembled.



Image Description: Two separate twin bed frames, one with a full fence and the other with partial rails, are shown partially assembled, ready to be joined.

Step 3: Connect the L-Shape Configuration

Join the two assembled twin bed frames to form the L-shape. Secure the connecting points with the designated hardware. The decorative panel with the window should be positioned at the corner where the two beds meet.



Image Description: A close-up view of the decorative panel featuring a small window, which forms part of the house-shaped structure at the corner of the L-shaped bed.

Step 4: Install the Roof Structure

Attach the roof beams and supports to the top of the bed frame, creating the house-like appearance. Ensure all roof components are aligned and securely fastened.

Step 5: Install Bed Slats

Place the wooden slats across the bed frame supports for both twin beds. Secure each slat according to the instructions to provide a stable foundation for the mattress. Once all slats are in place, fully tighten all previously loosened fasteners on the entire bed frame.



Image Description: A close-up view showing the wooden slats laid across the bed frame, providing support for the mattress. The slats are evenly spaced and secured within the frame.

Step 6: Final Check

Review all connections to ensure they are tight and the bed frame is stable. Place your twin mattresses on the slats. The bed is now ready for use.



Image Description: A fully assembled P PURLOVE Twin Size L-Shape Floor Bed in gray, featuring a house-shaped roof structure and fence rails, with mattresses and bedding in place, set in a child's room.

OPERATING INSTRUCTIONS

The P PURLOVE L-Shape Floor Bed is designed for sleeping and imaginative play. To ensure proper use:

- **Mattress Placement:** Place two standard twin-size mattresses directly onto the wooden slats. No box spring is required.
- **Weight Distribution:** Distribute weight evenly across the bed surface.
- **Play Area:** The house-shaped design encourages imaginative play. Ensure children play safely and do not attempt to climb the roof structure.

CARE AND MAINTENANCE

- **Cleaning:** Wipe the bed frame with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Dusting:** Regularly dust the frame to prevent buildup.
- **Hardware Check:** Periodically (e.g., every 3-6 months) check all screws and bolts to ensure they remain tight. Retighten if necessary to maintain structural integrity.
- **Avoid Excessive Moisture:** Do not expose the bed to excessive moisture or humidity, as this can damage the wood.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bed feels wobbly or unstable.	Loose hardware.	Check and tighten all screws, bolts, and fasteners. Ensure the bed is on a level surface.
Parts missing from package.	Shipping error or two packages arrived separately.	Verify if the second package has arrived. If not, or if parts are still missing, contact customer support with your purchase details.
Slats are not fitting correctly.	Incorrect orientation or frame not fully squared.	Ensure the bed frame is assembled squarely. Re-check slat placement and orientation according to assembly diagrams.

SPECIFICATIONS

- **Brand:** P PURLOVE
- **Model:** L-Shape Floor Bed (ASIN: B0B8VRYNQP)
- **Size:** Twin Size with Double Bed
- **Product Dimensions:** 118.1" L x 76.6" W x 75.1" H
- **Color:** Gray
- **Finish Type:** Wood
- **Included Components:** Slats
- **Compatible Mattress Size:** Twin
- **Weight Capacity:** 250 lbs per bed
- **Recommended Mattress Thickness:** 8 inches
- **Material:** Solid Wood and MDF Board

SIZE:INCH

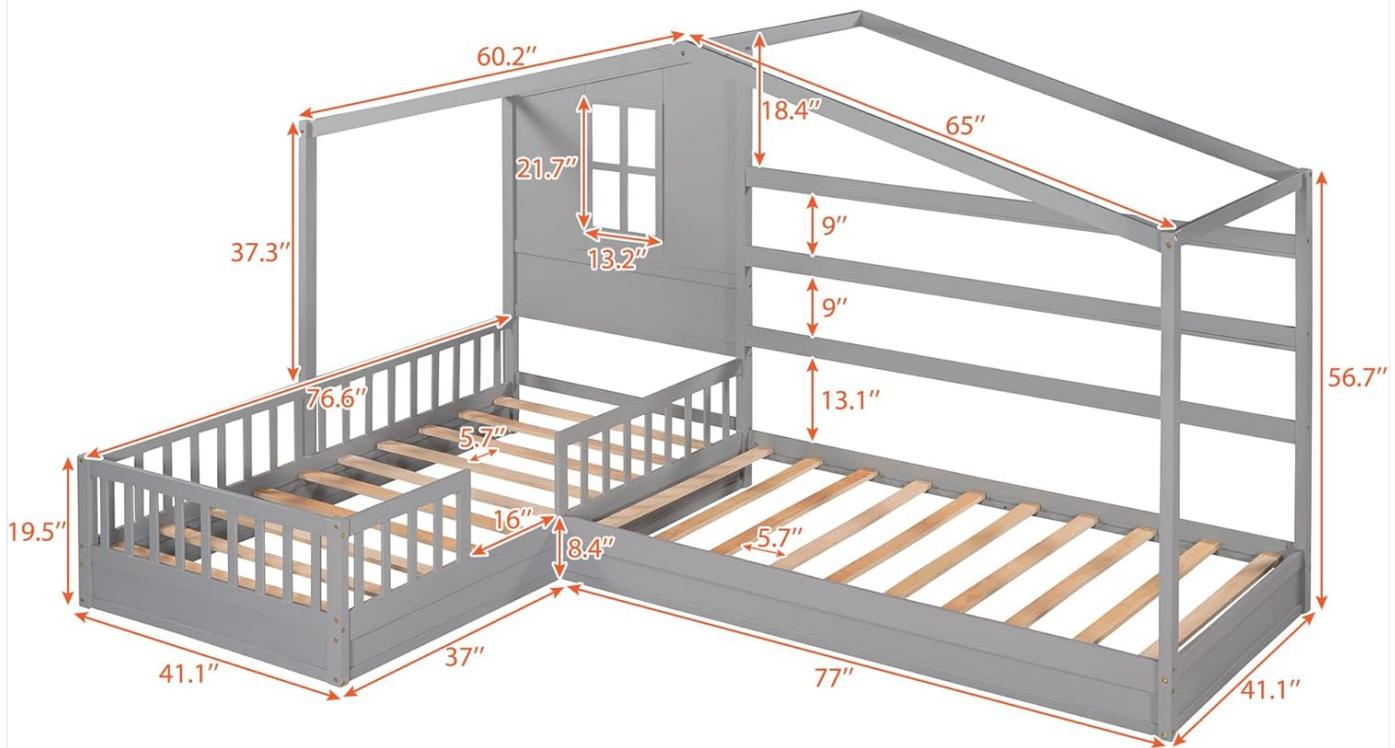


Image Description: A technical diagram illustrating the precise dimensions of the P PURLOVE L-Shape Floor Bed, including length, width, and height measurements for all sections and components.

PRODUCT OVERVIEW VIDEO

Watch this video for a visual overview of the P PURLOVE L-Shape Twin House Bed with Fence.

Your browser does not support the video tag.

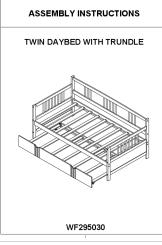
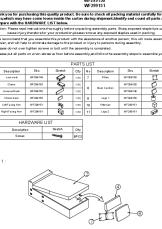

Video Description: A short video showcasing the L-shape twin house bed with fence in a white finish, demonstrating its design and features within a decorated room setting. Please note, the product described in this manual is gray.

WARRANTY AND SUPPORT

For warranty information, missing parts, or any questions regarding your P PURLOVE L-Shape Floor Bed, please contact the retailer or manufacturer directly. Please have your purchase receipt and model number (B0B8VRYNQP) available when contacting support.

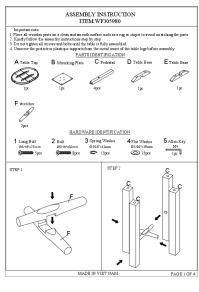
You can visit the official P PURLOVE store for more information:[P PURLOVE Store](#)

Related Documents - B0B8VRYNQP

 <p>WF310647 ASSEMBLY INSTRUCTIONS</p>	<p>WF310647 Cloud Bed Assembly Instructions</p> <p>Step-by-step assembly instructions for the WF310647 cloud-shaped bed frame, including parts list, hardware details, and assembly steps.</p>																																														
 <p>ASSEMBLY INSTRUCTIONS TWIN DAYBED WITH TRUNDLE WF295030</p>	<p>Twin Daybed with Trundle Assembly Instructions - WF295030</p> <p>Detailed assembly instructions for the P PURLOVE Twin Daybed with Trundle (Model WF295030). Includes part list, hardware list, and step-by-step guidance for easy setup.</p>																																														
 <p>ASSEMBLY INSTRUCTION WF316202 WF316203 WF316204 WF316205</p> <p><small>Product Protection This is a high-quality product. Please assemble it with all tools we provided. As the customer is not a professional carpenter, the user manual is provided. Please pay attention to the assembly steps and follow the instructions. Please do not open the box until you are ready to assemble the sofa. If you have any questions, please contact our customer service.</small></p>	<p>P PURLOVE Sectional Sofa Assembly Instructions (WF316202-WF316205)</p> <p>Comprehensive assembly guide for P PURLOVE sectional sofas, including models WF316202, WF316203, WF316204, and WF316205. Features detailed steps, part lists, hardware information, and warranty policy.</p>																																														
 <p>ASSEMBLY INSTRUCTION ITEM NO. WF299149 WF299150 WF299151</p> <p><small>Thank you for choosing to purchase our products. Please read these assembly instructions carefully for your product. Please do not open the box until you are ready to assemble the sofa. If you have any questions, please contact our customer service.</small></p> <table border="1"> <thead> <tr> <th>Part</th> <th>Quantity</th> <th>Size</th> <th>Notes</th> <th>Part No.</th> <th>Size</th> <th>Notes</th> <th>Part No.</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>1</td> <td>100x100x100</td> <td></td> <td>WF316202</td> <td>100x100x100</td> <td></td> <td>WF316203</td> </tr> <tr> <td>2</td> <td>1</td> <td>100x100x100</td> <td></td> <td>WF316203</td> <td>100x100x100</td> <td></td> <td>WF316204</td> </tr> <tr> <td>3</td> <td>1</td> <td>100x100x100</td> <td></td> <td>WF316204</td> <td>100x100x100</td> <td></td> <td>WF316205</td> </tr> <tr> <td>4</td> <td>1</td> <td>100x100x100</td> <td></td> <td>WF316205</td> <td>100x100x100</td> <td></td> <td></td> </tr> </tbody> </table> <p><small>Hardware List</small></p> <table border="1"> <thead> <tr> <th>Hardware</th> <th>Quantity</th> <th>Size</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>1</td> <td>100x100x100</td> </tr> </tbody> </table> <p><small>Step 1</small></p>  <p><small>Page 1 of 1</small></p>	Part	Quantity	Size	Notes	Part No.	Size	Notes	Part No.	1	1	100x100x100		WF316202	100x100x100		WF316203	2	1	100x100x100		WF316203	100x100x100		WF316204	3	1	100x100x100		WF316204	100x100x100		WF316205	4	1	100x100x100		WF316205	100x100x100			Hardware	Quantity	Size	1	1	100x100x100	<p>Assembly Instructions for P PURLOVE Sectional Sofa WF299149, WF299150, WF299151</p> <p>Detailed assembly instructions for the P PURLOVE Sectional Sofa, including parts list, hardware list, and step-by-step visual guides for models WF299149, WF299150, and WF299151.</p>
Part	Quantity	Size	Notes	Part No.	Size	Notes	Part No.																																								
1	1	100x100x100		WF316202	100x100x100		WF316203																																								
2	1	100x100x100		WF316203	100x100x100		WF316204																																								
3	1	100x100x100		WF316204	100x100x100		WF316205																																								
4	1	100x100x100		WF316205	100x100x100																																										
Hardware	Quantity	Size																																													
1	1	100x100x100																																													

[Assembly Instructions for P PURLOVE WF310398 WF310401 WF310402 Murphy Full Bed](#)

Detailed assembly instructions, part lists, and hardware lists for the P PURLOVE WF310398, WF310401, and WF310402 Murphy Full Bed. Learn how to assemble your wall bed step-by-step, including operation and safety notes.



[Assembly Instructions for WF305980 Dining Table](#)

Step-by-step assembly guide for the WF305980 dining table, including parts identification, hardware identification, and assembly steps with detailed textual descriptions of diagrams.