

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Rust-Oleum](#) /


> [Rust-Oleum 384165 Tub And Tile Refinishing 2-Part Kit, Gloss White - Instruction Manual](#)

## Rust-Oleum 384165

# Rust-Oleum 384165 Tub And Tile Refinishing 2-Part Kit, Gloss White - Instruction Manual

### PRODUCT OVERVIEW

The Rust-Oleum Tub and Tile Refinishing Kit provides a durable, porcelain-like finish for bathtubs and bathroom tiles. This 2-part epoxy acrylic formula is designed to withstand moisture and resist corrosion, renewing ceramic, porcelain, fiberglass, acrylic, cast iron, and steel surfaces. It is intended for indoor use.

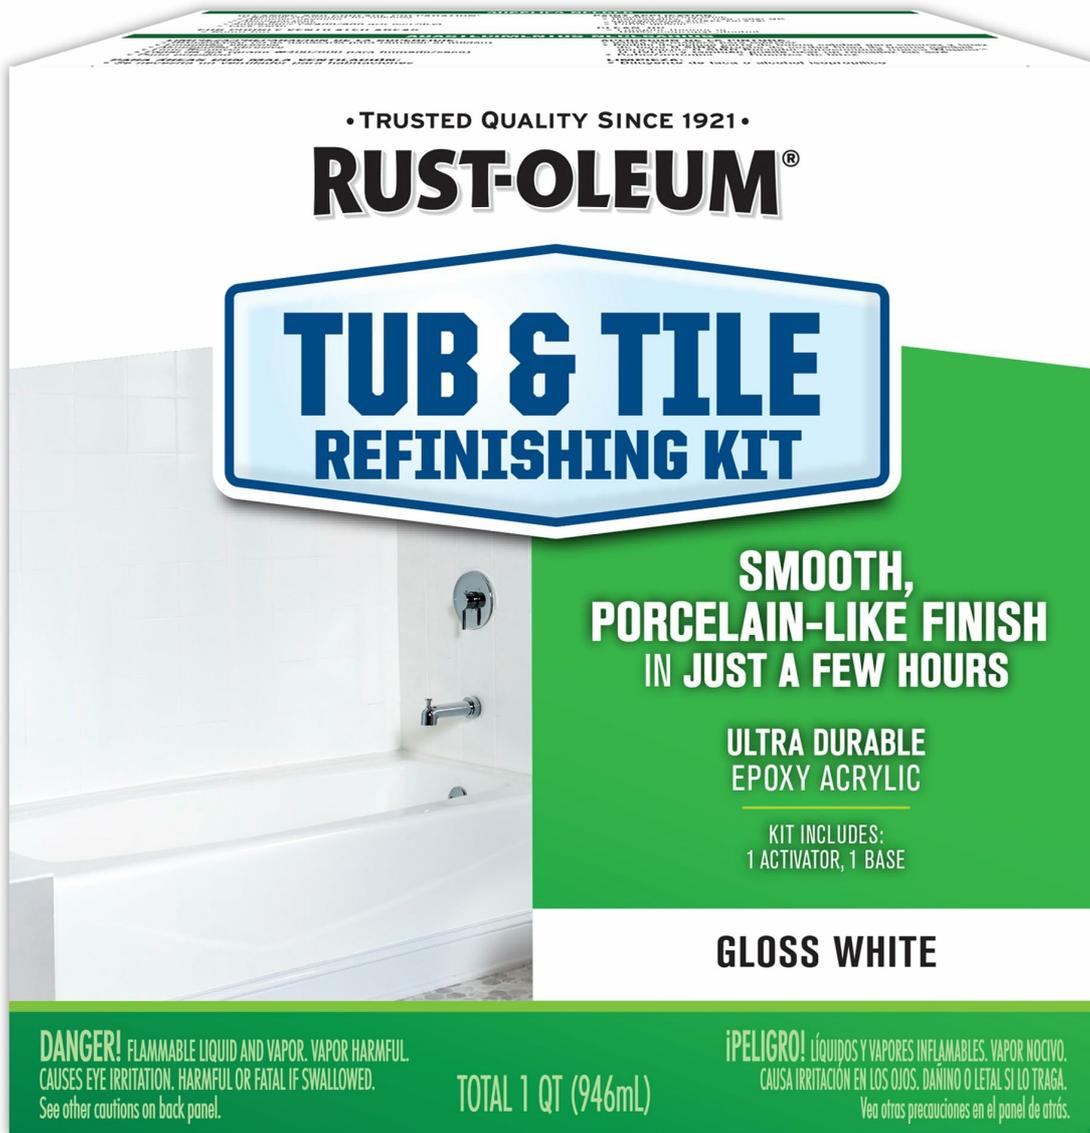

The product packaging for the Rust-Oleum Tub & Tile Refinishing Kit in Gloss White.

Your browser does not support the video tag.

This video demonstrates the process of using the Rust-Oleum Tub & Tile Refinishing Kit, from preparation to final application, showcasing how it transforms surfaces.

## SAFETY INFORMATION

**DANGER!** This product contains flammable liquid and vapor. Vapors are harmful and can cause eye irritation. It is harmful or fatal if swallowed. Ensure adequate ventilation by opening windows and using a fan to circulate air. Wear appropriate personal protective equipment, including a respirator, goggles, and gloves, to prevent skin and eye contact. Avoid prolonged exposure to vapors. If contact occurs, flush immediately with plenty of water and seek medical attention if irritation persists. Keep out of reach of children.

# APPLICATION

1

**Properly Ventilate**

2

**Mix Part A & Part B**



3

**First Coat**



4

**Second Coat after 1-2 Hours**



5

**Cure for 3 Days**

This image displays a comprehensive list of tools and materials required for the refinishing process, categorized for easy reference, including safety gear.

## **SURFACE PREPARATION (SETUP)**

Proper surface preparation is crucial for optimal adhesion and a smooth finish. Follow these steps carefully:

1. **Remove Hardware and Peeling Paint:** Remove any fixtures, drains, or loose paint.
2. **Remove All Caulk:** Completely remove old caulk from around the tub and tile.
3. **Deep Clean Surface:** Thoroughly clean the entire surface with a heavy-duty cleaner and disinfectant. Rinse well.
4. **Sand and Clean Surface:** Sand the surface with 400/600 grit wet/dry sandpaper to create a textured surface for better adhesion. Wipe with a tack cloth to remove all sanding dust.
5. **Mask Off Areas:** Use painter's tape to protect any areas not being painted, such as walls, fixtures, and surrounding surfaces.

# NEW LOOK



SAME  
GREAT  
PRODUCT



A visual comparison showing a bathtub before and after refinishing, highlighting the transformation to a smooth, white finish.

# GREAT FOR



A graphic detailing the five essential steps for surface preparation: removing hardware and peeling paint, removing caulk, deep cleaning, sanding and cleaning, and masking off areas.

## MIXING AND APPLICATION

Once the surface is prepared, proceed with mixing and application:

1. **Ensure Proper Ventilation:** Maintain open windows and use fans to ensure continuous air circulation throughout the application and drying process.
2. **Mix Part A & Part B:** Thoroughly mix Part A (activator) and Part B (base) separately before combining. Once combined, mix for 2 minutes. The mixed product must be used within 6 hours.
3. **Apply First Coat:** Use a high-quality 1/4 inch nap roller for large areas and a small brush for edges and corners. Apply a thin, even coat. Avoid overworking the paint as it can become tacky.
4. **Apply Second Coat:** Allow 1-2 hours for the first coat to dry, then apply a second coat. Two coats are highly recommended for optimal coverage.

## Preparation

- Fan
- Tack Cloth
- Masking Tape



## Protection

- Goggles
- Gloves



# SUPPLIES NEEDED



## Cleaners + Abrasives

- Isopropyl
- Steel Wool Pad
- Bleach
- Spray Bottle



## Application

- Roller
- Brush
- Stir Sticks



A person wearing gloves mixes the two components of the Rust-Oleum Tub & Tile Refinishing Kit in a can.

# SURFACE PREP

**1 Remove hardware and any peeling paint**



**2 Remove all caulk**



**3 Deep clean surface**



**4 Sand and clean surface**



**5 Mask off areas not being painted**



A person applies the first coat of the refinishing kit to the interior surface of a bathtub using a roller.

## CURING AND RE-CAULKING

After applying the final coat, allow the surface to cure completely:

- **Cure Time:** Allow the refinished surface to dry for a minimum of 3 days before exposing it to water or heavy use.
- **Re-Caulk:** Once fully cured, re-caulk all seams and edges with a high-quality bathroom caulk to ensure a waterproof seal.

## MAINTENANCE

To maintain the longevity and appearance of your refinished tub and tile:

- **Regular Cleaning:** Clean the surface regularly with standard, non-abrasive bathroom cleaners. Avoid harsh chemicals or abrasive scrubbers that could damage the finish.
- **Avoid Impact:** Protect the surface from heavy impacts or sharp objects to prevent chipping.

## TROUBLESHOOTING TIPS

- **Strong Odor:** The product has a very strong odor. Ensure maximum ventilation during and after

application. Use a respirator with appropriate filters.

- **Roller Marks/Uneven Finish:** Avoid using foam rollers, as they can dissolve. Use a good quality 1/4 inch nap roller. The product is self-leveling, but consistent pressure and quick application are key.
- **Chipping/Peeling:** This often indicates insufficient surface preparation. Ensure all old caulk, loose paint, and contaminants are removed, and the surface is properly sanded and cleaned before application. For minor chips, Rust-Oleum offers touch-up kits.
- **Paint Drying Too Quickly:** Work efficiently, especially in warm or dry conditions. Once mixed, the product has a limited working time.

## PRODUCT SPECIFICATIONS

Attribute	Value
Brand	Rust-Oleum
Model Number	384165
Color	White
Finish Type	Gloss
Size	32 Fl Oz (Pack of 1)
Paint Type	Acrylic
Specific Uses For Product	Interior
Surface Recommendation	Porcelain, Ceramic, Fiberglass, Acrylic, Cast Iron, Steel
Coverage	Up to 110 sq ft
Full Cure Time	3 Days
Is Waterproof	True

## WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty. For specific details regarding the warranty coverage, please refer to the product packaging or contact Rust-Oleum customer support directly. For further assistance or inquiries, visit the official Rust-Oleum website or contact their customer service department.