

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Modway](#) /

› [Modway Render 36" Wall-Mount Bathroom Vanity Cabinet Instruction Manual](#)

Modway EEI-4339-OAK

Modway Render 36" Wall-Mount Bathroom Vanity Cabinet Instruction Manual

Model: EEI-4339-OAK

INTRODUCTION

This manual provides detailed instructions for the assembly, installation, operation, and maintenance of your Modway Render 36" Wall-Mount Bathroom Vanity Cabinet. Designed with mid-century aesthetics, this vanity features a durable MDF and particleboard frame with smooth oak grain laminate, ample storage space in two full-extension drawers, and a space-saving wall-mount design. Please read this manual thoroughly before beginning assembly or use to ensure proper functionality and longevity of your product.



Figure 1: Modway Render 36" Wall-Mount Bathroom Vanity Cabinet (Sink Basin Not Included)

SAFETY INFORMATION

Always follow basic safety precautions when assembling or using this product to reduce the risk of injury or damage. Keep all small parts and packaging materials away from children. Ensure all connections are secure before use. Do not overload drawers. Wall mounting requires proper anchoring into wall studs or appropriate anchors for your wall type. Consult a professional if unsure about installation.

PACKAGE CONTENTS

Please verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, contact Modway customer support.

- Vanity Cabinet Panels (MDF and Particleboard with Oak Grain Laminate)
- Two (2) Full-Extension Drawer Slides
- Assembly Hardware (screws, dowels, cam locks, etc.)
- Wall Mounting Cleat and Hardware
- Instruction Manual

Note: Sink basin, faucet, and plumbing fixtures are not included with this vanity cabinet.

SETUP AND INSTALLATION

Assembly is required for this vanity cabinet. Follow the step-by-step instructions provided in the included assembly guide. Ensure you have adequate space and the necessary tools before starting.

Tools Required (Not Included):

- Phillips Head Screwdriver
- Hammer
- Drill with appropriate drill bits
- Level
- Measuring Tape
- Stud Finder (recommended for wall mounting)

Assembly Steps:

1. Unpack all components and verify against the package contents list.
2. Assemble the main cabinet frame using the provided hardware. Pay close attention to the orientation of panels.
3. Install the full-extension drawer slides onto the cabinet frame and drawer boxes.
4. Assemble the two drawer boxes. Note that the top drawer is designed with a plumbing cutout to accommodate a sink drain.
5. Insert the assembled drawers into the cabinet.

Wall Mounting:

The vanity is designed for wall-mount installation using a drywall-friendly mounting cleat. Proper installation is crucial for stability and safety.

1. Determine the desired height for your vanity. Consider the height of your sink basin and user comfort.
2. Locate wall studs using a stud finder. It is highly recommended to mount the cleat into at least two wall studs for maximum support. If studs are not available, use heavy-duty wall anchors suitable for your wall material (e.g., toggle

bolts for drywall).

3. Mark the mounting points for the cleat on the wall, ensuring it is level.
4. Securely attach the mounting cleat to the wall using appropriate screws and anchors.
5. Carefully lift the assembled vanity cabinet and hook it onto the wall mounting cleat. Ensure it is fully seated and stable.
6. Secure the vanity to the cleat and wall using any additional securing points provided.



Figure 2: Installed Modway Render Wall-Mount Vanity

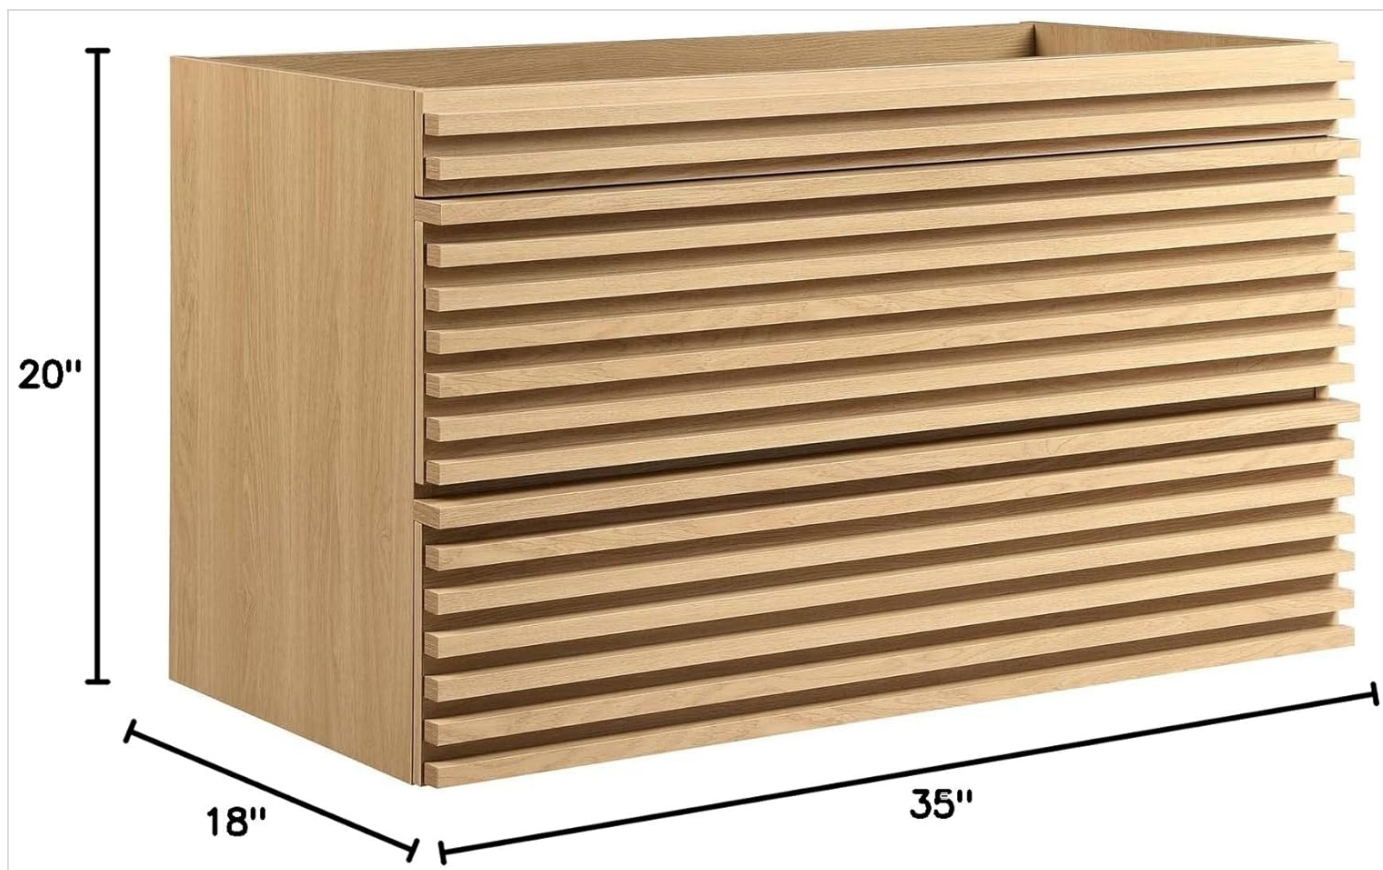


Figure 3: Product Dimensions (36"W x 18"D x 20"H)

OPERATING THE VANITY

Your Modway Render vanity is designed for practical functionality. The two full-extension drawers provide ample storage for bathroom essentials. Simply pull the drawer fronts to open and push to close. The smooth glides ensure easy and quiet operation.

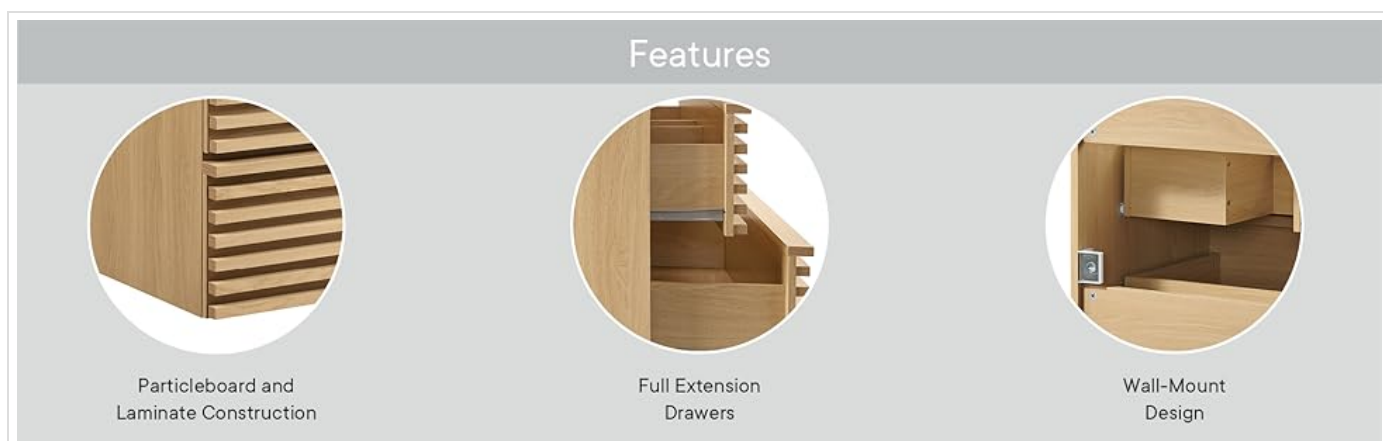


Figure 4: Key Features of the Vanity

MAINTENANCE AND CARE

To maintain the appearance and longevity of your Modway Render vanity, follow these care instructions:

- **Cleaning:** Wipe surfaces with a damp cloth. Avoid harsh abrasive cleaners or solvents that may damage the laminate finish.
- **Spills:** Promptly wipe up any spills to prevent water damage or staining.

- **Humidity:** Maintain a consistent humidity level in your bathroom to prevent warping or cracking of wood components.
- **Drawer Slides:** Periodically check drawer slides for smooth operation. If they become stiff, a silicone-based lubricant can be applied.

TROUBLESHOOTING

If you encounter issues with your Modway Render vanity, refer to the following common solutions:

- **Drawers not closing smoothly:** Check if drawer slides are properly aligned and free of obstructions. Ensure all screws on the slides are tightened.
- **Vanity feels unstable after mounting:** Re-check wall mounting cleat installation. Ensure it is securely fastened to wall studs or appropriate heavy-duty anchors. Verify all securing points between the vanity and cleat are tightened.
- **Plumbing interference with top drawer:** The top drawer has a cutout for plumbing. Ensure your sink's drain and P-trap are aligned within this cutout. Adjust plumbing as necessary; professional plumbing assistance may be required.
- **Scratches or damage to laminate:** Minor scratches may be touched up with a furniture repair marker matching the oak finish. For significant damage, contact customer support for advice.

For issues not listed here, or if problems persist, please contact Modway customer support.

SPECIFICATIONS

Attribute	Detail
Brand	Modway
Model Number	EEI-4339-OAK
Color	Oak
Product Dimensions	18"D x 36"W x 20"H
Mounting Type	Wall Mount
Frame Material	Engineered Wood
Finish Type	Walnut Grain Laminate (<i>Note: Product is Oak color, but laminate type is 'Walnut Grain Laminate' as per source data.</i>)
Item Weight	57 Pounds
Assembly Required	Yes
Included Components	Shelves (<i>Refers to internal drawer structure/dividers, not open shelving</i>)
UPC	889654258841, 889654258834

WARRANTY INFORMATION

Modway offers a one-year warranty against manufacturer defects for this product. This warranty covers defects in




materials and workmanship under normal use. It does not cover damage resulting from improper assembly, misuse, abuse, accidents, or normal wear and tear. Please retain your proof of purchase for warranty claims.


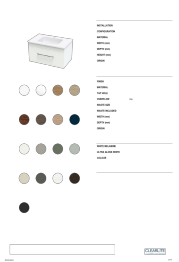
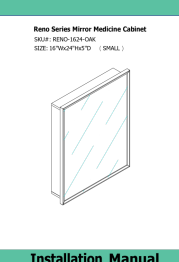
CUSTOMER SUPPORT

For any questions, assistance with assembly, troubleshooting, or warranty claims, please contact Modway customer support. Refer to the Modway official website or your purchase documentation for the most current contact information. We are committed to providing you with a high-quality product and excellent service.

© 2024 Modway. All rights reserved.

Related Documents - EEI-4339-OAK
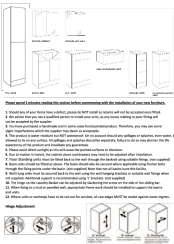
<div><div>ASSEMBLY INSTRUCTIONS</div><div></div><div>Bathroom Vanity</div></div>	<div><div>Corrigan Studio Bathroom Vanity Assembly Instructions</div><div>Comprehensive assembly guide for the Corrigan Studio Bathroom Vanity (model bnlc1724), detailing parts, hardware, and step-by-step instructions for installation and hinge adjustment.</div></div>
<div><div>BATHROOM FURNITURE FITTING GUIDE</div><div></div></div>	<div><div>Bathroom Furniture Fitting and Care Guide - Alpine Oak Units</div><div>This guide provides detailed instructions for installing and maintaining Alpine Oak bathroom furniture. It covers general fitting advice, hinge adjustments, drawer and door installation, securing floor-standing units, and customer care for various finishes, along with regulatory information.</div></div>
<div><div>EVERPURE CLARIS ULTRA Filter cartridges</div><div></div></div>	<div><div>Everpure Claris ULTRA Filter Cartridges Guide</div><div>A guide to the Everpure Claris ULTRA filter cartridges, covering their application, function, installation, technical specifications, and order information.</div></div>

 <p>Diagram showing the dimensions of the vanity set and a list of tools required for assembly: screwdriver, wrench, and drill.</p>	<p>Ebern Designs 30-inch Wall Mounted Bathroom Vanity Set Assembly Instructions</p> <p>Comprehensive assembly and installation guide for the Ebern Designs 30-inch Modern Fias Oak wall-mounted single bathroom vanity set. Includes detailed parts list, hardware list, step-by-step instructions, and important safety warnings. Model: qaco1182.</p>
 <p>Diagram showing the dimensions of the vanity set and a list of finishes: White, Gray, Black, Espresso, and others.</p>	<p>ClearLite Cashmere Grove 750 Single Drawer Wall Vanity: Technical Specifications and Finishes</p> <p>Comprehensive technical specifications for the ClearLite Cashmere Grove 750 Single Drawer Wall Vanity, detailing dimensions, materials, available finishes, product codes, and warranty information. Includes descriptions of technical drawings.</p>
 <p>Diagram showing the dimensions of the medicine cabinet and a list of finishes: White, Gray, Black, Espresso, and others.</p>	<p>Reno Series Mirror Medicine Cabinet Installation Manual</p> <p>Installation manual for the Reno Series Mirror Medicine Cabinet (SKU: RENO-1624-OAK). Includes exploded diagram, assembly instructions, wall mount and recessed mount options, care and maintenance tips, and warranty information.</p>