

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [RSL](#) /

› [RSL Universal 20x64 1-Lite White Door Frame Kit Installation Manual](#)

RSL Universal 20x64 1-Lite Frame (1/2" Glass)

RSL Universal 20x64 1-Lite White Door Frame Kit Installation Manual

Model: Universal 20x64 1-Lite Frame (1/2" Glass)

INTRODUCTION

This manual provides detailed instructions for the installation and maintenance of your RSL Universal 20x64 1-Lite White Door Frame Kit. This frame is designed to fit 1/2 inch thick glass and is compatible with major door brands such as Taylor, Perma Door, Stanley, Castlegate, and Masonite. The material is engineered to resist yellowing and warping, ensuring long-lasting performance. Please read all instructions carefully before beginning installation.

SAFETY INFORMATION

- Always wear appropriate personal protective equipment (PPE) such as safety glasses and gloves during installation.
- Ensure the work area is well-lit and clear of obstructions.
- Use proper lifting techniques when handling the door or glass to prevent injury.
- Keep small parts, such as screws and plugs, out of reach of children.
- If using power tools, follow the manufacturer's safety guidelines.

PACKAGE CONTENTS

Verify that all components are present before starting the installation:

- Both Sides of the Frame (Interior and Exterior)
- Mounting Screws
- Screw Plugs

Whats' Included

Screws



Frame



Plugs



Figure 1: Included components: Frame, Screws, and Plugs.



Figure 2: The door frame kit does not include glass. Glass must be purchased separately.

SPECIFICATIONS

Brand	RSL (Manufacturer) / Generic (Brand)
Model	Universal 20x64 1-Lite Frame
Material	Durable Plastic (designed not to yellow or warp)
Color	White
Glass Thickness Compatibility	1/2 inch
Glass Size (Nominal)	20 inches x 64 inches
Outside Frame Dimensions	21 3/4 inches x 65 3/4 inches
Recommended Door Cut Opening	21 inches x 65 inches (exact)
Door Thickness Compatibility	1 3/4 inches thick door
Item Weight	Approximately 12 pounds
Product Dimensions (Overall)	1.75 x 21.75 x 65.75 inches

20" x 64" Guide

Replacement for Doors with a Glass Insert

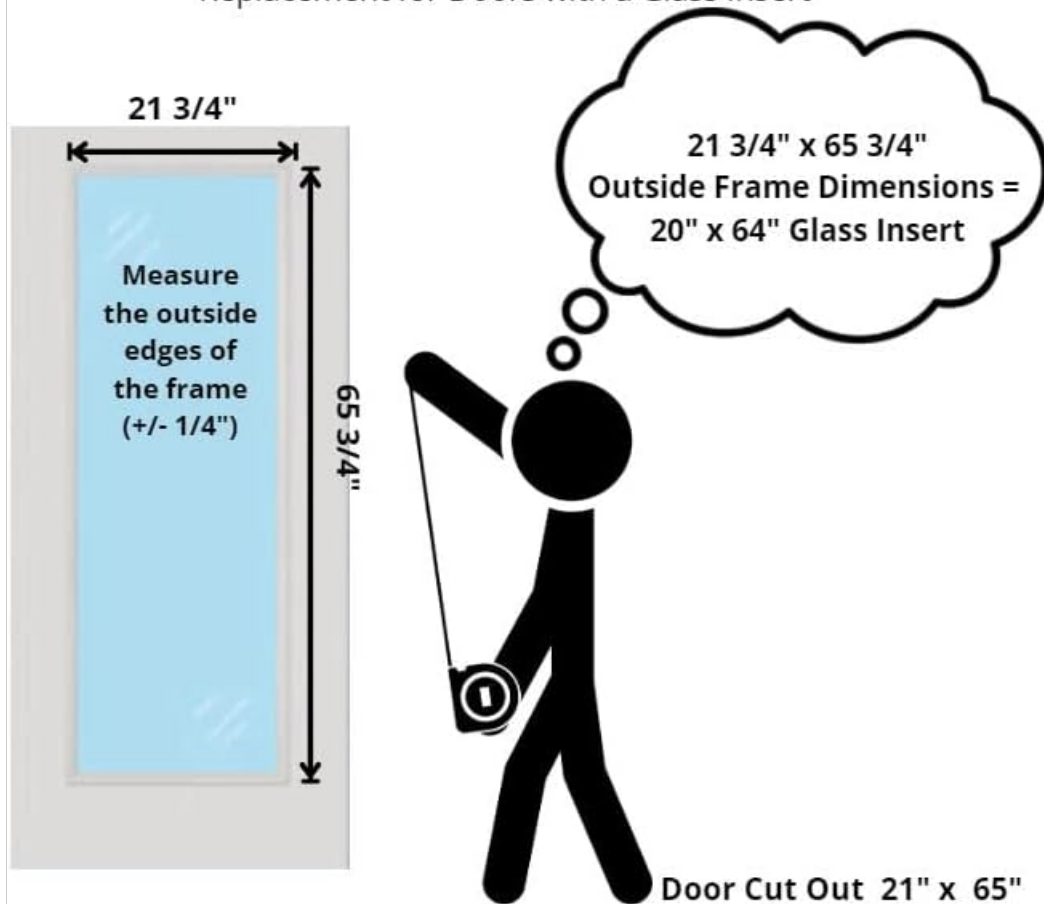


Figure 3: Measurement guide for 20x64 glass insert and corresponding frame dimensions.

SETUP AND INSTALLATION

This door frame kit is designed for ease of assembly and can be painted to match your door. Follow these steps for proper installation:

1. **Prepare the Door:** Ensure your door has a cut opening of exactly 21 inches x 65 inches. The door itself should be $1 \frac{3}{4}$ inches thick.
2. **Glass Thickness Note:** This frame is specifically designed for $\frac{1}{2}$ inch thick glass. Using glass of a different thickness may result in an improper fit.

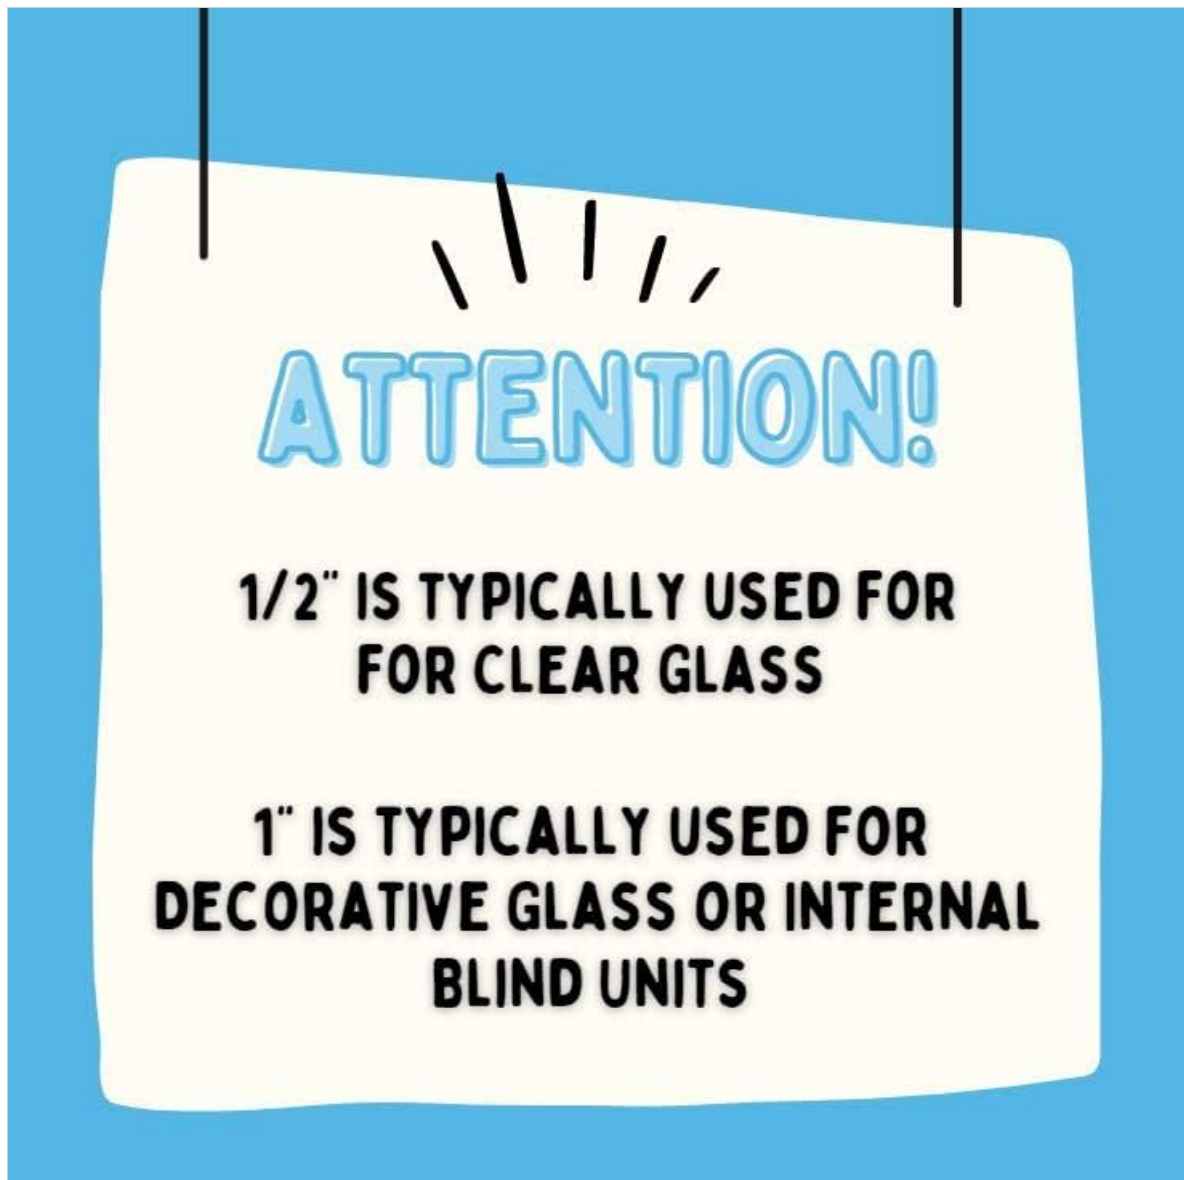


Figure 4: Important note on glass thickness compatibility.

3. **Insert Glass:** Carefully place your 20 inch x 64 inch, 1/2 inch thick glass panel into the door opening.
4. **Position Frame Halves:** Place one half of the frame on the interior side of the door and the other half on the exterior side, aligning them around the glass and the door opening.
5. **Secure with Screws:** Insert the provided screws through the designated holes in the frame. Tighten them evenly to secure both frame halves together, sandwiching the glass and the door. Do not overtighten.
6. **Install Plugs:** Once the frame is securely fastened, insert the screw plugs into the screw holes for a finished appearance.



Figure 5: Detail of the frame connection mechanism.

MAINTENANCE

The RSL Universal Door Frame Kit is designed for low maintenance. The material is resistant to yellowing and warping. To maintain its appearance:

- **Cleaning:** Clean the frame with a soft cloth and mild soap and water. Avoid abrasive cleaners or solvents that could damage the finish.
- **Inspection:** Periodically check the screws for tightness and ensure the plugs are securely in place.
- **Painting:** If desired, the frame is easy to paint. Ensure the surface is clean and dry before applying paint suitable for plastic surfaces.

TROUBLESHOOTING

- **Frame Does Not Fit:** Double-check your door's cut-out dimensions and thickness against the specifications. Ensure the glass thickness is exactly 1/2 inch.
- **Gaps After Installation:** Ensure all screws are tightened evenly. Avoid overtightening, which can cause distortion. If gaps persist, re-check door and glass dimensions.

- **Difficulty Inserting Plugs:** Ensure screws are fully seated and not obstructing the plug holes.

WARRANTY

No specific warranty information is provided with this product. For details regarding returns or defects, please refer to the retailer's return policy or contact the seller directly.

SUPPORT

For further assistance or inquiries regarding your RSL Universal Door Frame Kit, please contact the seller, DIY Door Store, through the platform where the purchase was made.