



Manuals.plus /

› [zunatu](#) /

› [zunatu Full Size Metal Platform Bed Frame - Victorian Style Instruction Manual](#)

zunatu Full Victorian

zunatu Full Size Metal Platform Bed Frame - Victorian Style Instruction Manual

Brand: zunatu | Model: Full Victorian

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your zunatu Full Size Metal Platform Bed Frame. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Image: Fully assembled zunatu Full Size Metal Platform Bed Frame in Victorian style.

2. SAFETY INFORMATION

WARNING:


- Always follow the assembly instructions carefully to prevent instability or collapse.
- Be cautious of sharp edges during assembly and use.
- Do not exceed the maximum weight recommendation of 1000 pounds.
- Ensure all bolts and screws are securely tightened before use.

3. PACKAGE CONTENTS

Verify that all components and tools listed below are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Bed Frame components (Headboard, Footboard, Side Rails, Support Legs, Slats)
- Assembly Manual

- Screws and Bolts (various sizes, pre-packaged and labeled)
- Tools (Allen key, Wrench)

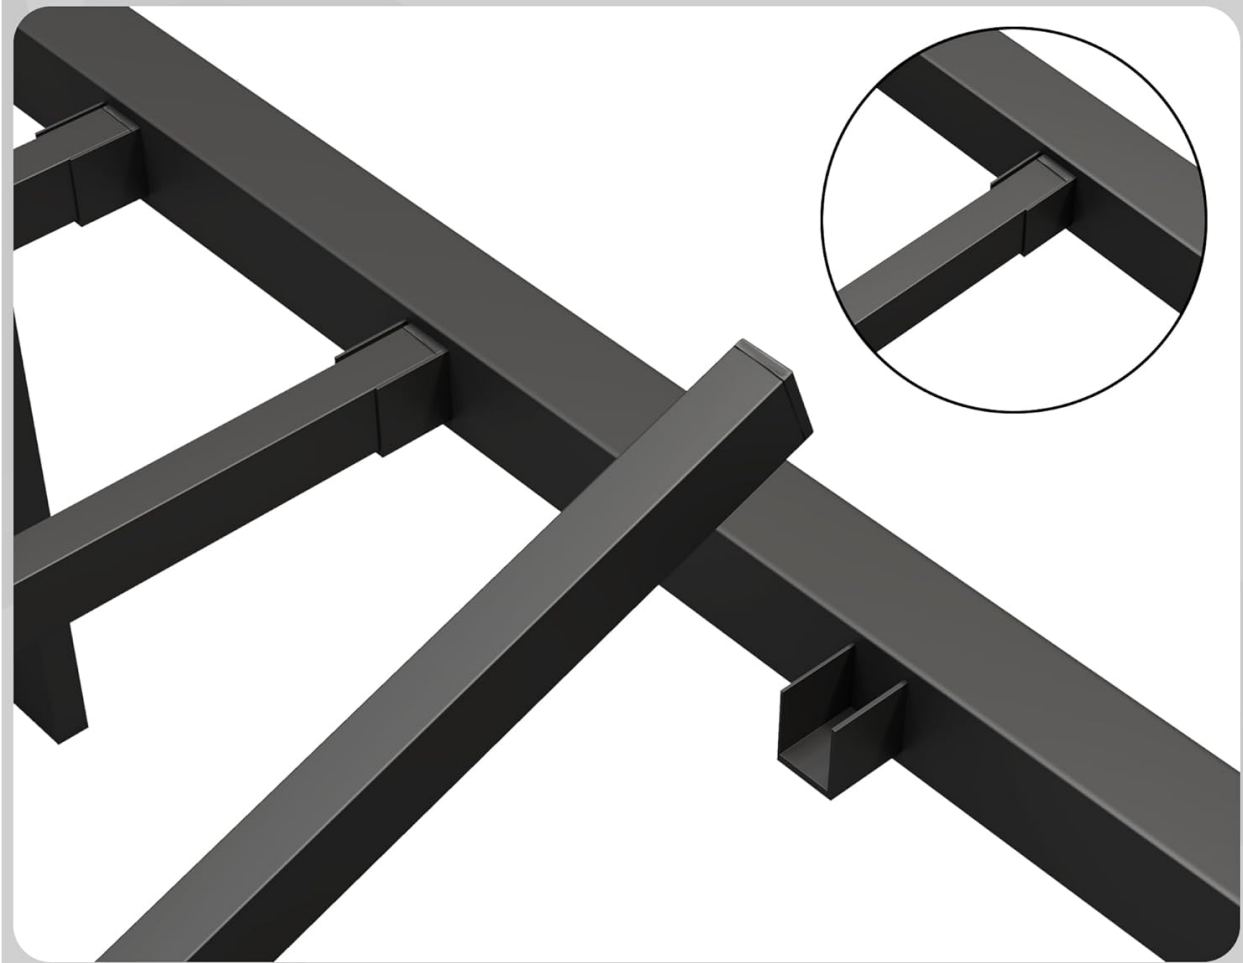

Anti-Noise Pad & Easy Assembly

Image: Close-up view of the anti-noise pad and connection points, highlighting the ease of assembly.

4. ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to have two people for easier and quicker assembly.

1. **Unpack and Identify Parts:** Lay out all components on a soft, clean surface. Refer to the included parts list in the manual and ensure all pieces are present and undamaged. Each part is numbered for easy identification.
2. **Assemble Headboard and Footboard:** Attach the decorative bars to the main headboard and footboard frames using the provided bolts and tools. Ensure all connections are secure but do not fully tighten until the entire frame is assembled.
3. **Attach Side Rails:** Connect the side rails to the assembled headboard and footboard using the designated bolts. Align the holes carefully and insert the bolts.

4. **Install Center Support:** Unfold and position the center support frame. Secure it to the side rails using the appropriate hardware.
5. **Place Slats:** Lay the steel slats across the frame, ensuring they fit securely into the designated slots or attachment points. The slats are designed for optimal mattress support without the need for a box spring.
6. **Final Tightening:** Once all parts are in place and aligned, go back and securely tighten all bolts and screws using the provided tools. This ensures the stability and noise-free operation of the bed frame.

Assembly Video Guide

For a visual guide on the assembly process, please refer to the official quick-assembly video below:

Your browser does not support the video tag.

Video: Official Zunatu Quick-Assembly Bed Frame Guide. This video demonstrates the step-by-step process of assembling the bed frame, including unpacking, identifying parts, and securing connections.



Image: Assembled zunatu Full Size Metal Platform Bed Frame, showing the sturdy steel slat support system.

5. PRODUCT FEATURES AND BENEFITS


- **Victorian Style Design:** Features a stylish headboard and footboard with decorative elements, adding an elegant touch to any bedroom.
- **No Box Spring Needed:** The robust steel slat support system eliminates the need for a traditional box spring, providing direct support for your mattress.
- **Ample Underbed Storage:** With 14 inches of clearance, the frame offers significant space for storage, helping to keep your room tidy and organized.
- **Noise Reduction:** Upgraded mesh steel structure ensures a larger and wider contact surface with the mattress, effectively reducing noise and squeaks for a peaceful sleep environment.
- **Durable Steel Construction:** Made from high-quality steel for long-lasting durability and stability.



Image: Illustration of the 12.6-inch under-bed storage space provided by the bed frame.

6. SPECIFICATIONS

Feature	Detail
Size	Full
Product Dimensions	77.13"L x 54.06"W x 39.7"H
Maximum Weight Capacity	1000 lbs
Material	High Quality Steel
Color	Black
Underbed Clearance	14 inches (approx. 35.5 cm)
Assembly Required	Yes

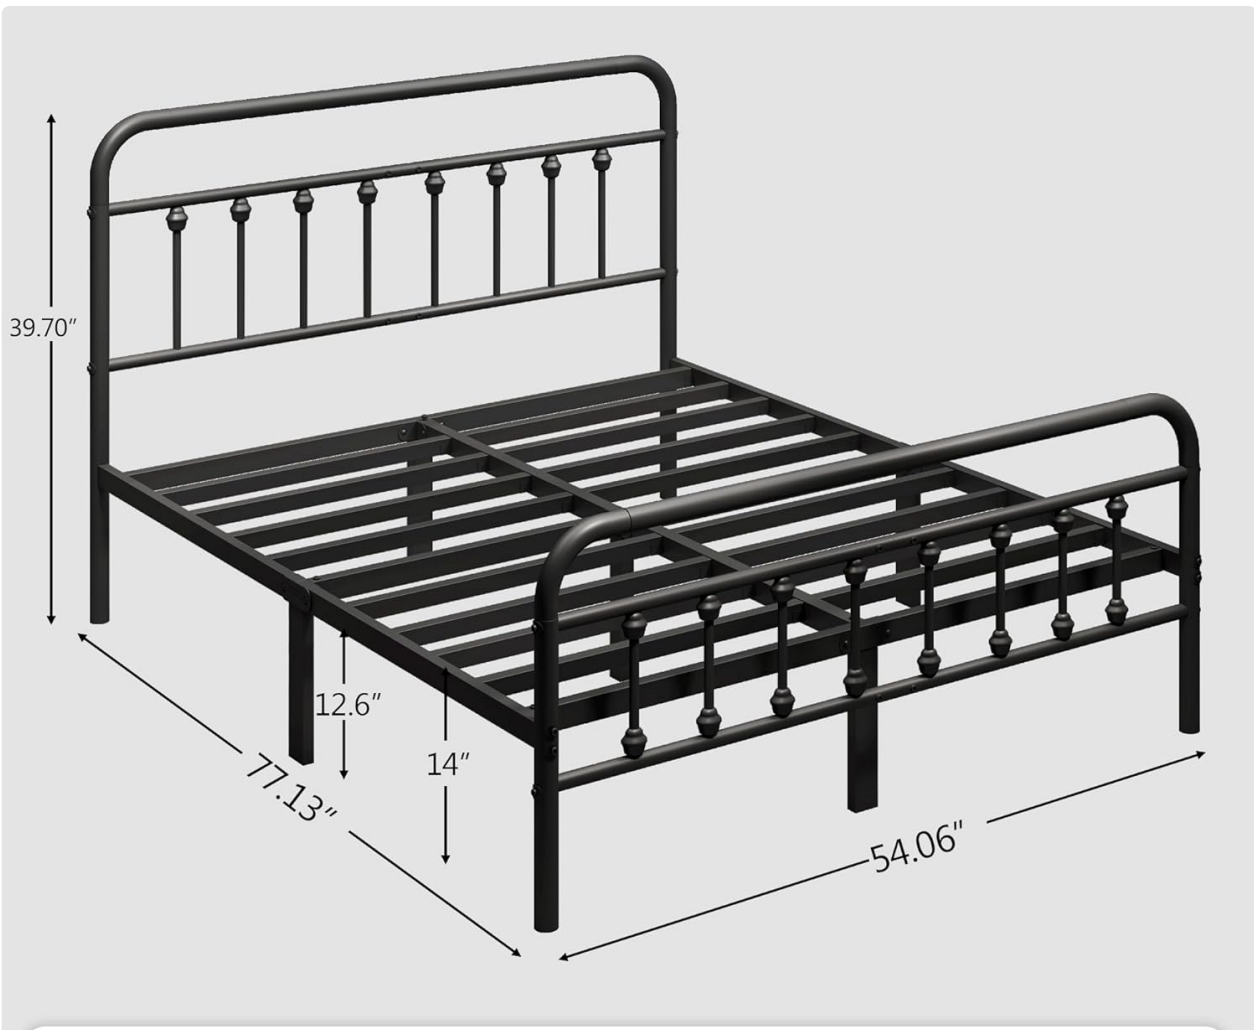

**FULL
SIZE**

Max. Weight
Capacity
1000LB

Applicable
Mattress Size
75"x 54"

Image: Detailed dimensions and maximum weight capacity for the Full Size bed frame.

7. MAINTENANCE

To ensure the longevity and continued performance of your bed frame, follow these maintenance guidelines:

- **Regular Cleaning:** Wipe down the metal frame with a soft, damp cloth to remove dust and dirt. Avoid abrasive cleaners that may damage the finish.
- **Check Connections:** Periodically inspect all bolts and screws to ensure they remain tight. Re-tighten if necessary to prevent wobbling or noise.
- **Avoid Harsh Chemicals:** Do not use harsh chemicals or solvents on the frame, as this can corrode the metal or strip the finish.
- **Weight Distribution:** Distribute weight evenly across the bed frame to prevent undue stress on any single point.

8. TROUBLESHOOTING

If you encounter any issues with your bed frame, refer to the common problems and solutions below:

- **Squeaking Noise:**
 - Ensure all bolts and screws are fully tightened. Loose connections are a common cause of squeaking.
 - Check if the mattress is properly seated on the slats.
- **Instability/Wobbling:**
 - Verify that all frame components are correctly assembled according to the instructions.
 - Confirm that the bed frame is placed on a flat, even surface.
- **Missing Parts:**
 - Refer to the 'Package Contents' section and contact customer support with the specific part number if any components are missing.

9. WARRANTY AND SUPPORT

For any questions, concerns, or warranty claims, please contact zunatu customer support. Refer to your purchase documentation for specific warranty details.

You can visit the official zunatu store for more information: [zunatu Store](#)