Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Polibi /
- > Polibi Full Size Platform Bed with Trundle Instruction Manual

Polibi Full Size Platform Bed with Trundle

Polibi Full Size Platform Bed with Trundle Instruction Manual

Model: Full Size Platform Bed with Trundle

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Polibi Full Size Platform Bed with Trundle. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

SAFETY INFORMATION

- Ensure all parts are present and undamaged before assembly. Do not use damaged parts.
- Assemble the bed on a soft, clean surface to prevent scratches.
- Tighten all screws and bolts securely. Periodically check and re-tighten connections.
- Do not exceed the weight capacity: Main Bed: 350 lbs, Trundle: 350 lbs.
- Keep small parts away from children during assembly to prevent choking hazards.
- Use only the recommended mattress size. No box spring is required for this platform bed.
- Ensure the USB charging ports are properly connected and used with compatible devices. Do not overload the ports.

PACKAGE CONTENTS

Please verify that all components are included in your package:

- Metal Bed Frame components
- Wooden Headboard and Footboard panels
- Trundle Bed frame with wheels
- USB Charging Port unit
- · Slat support system
- Assembly Hardware (screws, bolts, Allen wrench)
- Instruction Manual



Image: The Polibi Full Size Platform Bed with Trundle, showcasing its design and functionality in a room setting.

SETUP AND ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your Polibi Full Size Platform Bed with Trundle. It is recommended to have two people for assembly.

Step 1: Prepare the Components

Unpack all components and lay them out on a clean, soft surface. Identify each part using the provided parts list (if applicable, refer to the diagram in your physical manual).

Your browser does not support the video tag.

Video: CLIBFENG Bed Frame Assembly Instructions. This video demonstrates the general assembly process for a similar bed frame, providing a visual guide for construction steps.

Step 2: Assemble the Headboard and Footboard

Attach the wooden panels to the metal frame sections for the headboard and footboard using the provided screws and Allen wrench. Ensure all connections are secure.



Image: A detailed view of the headboard construction, showing the integration of wood and metal components.

Step 3: Construct the Main Bed Frame

Connect the side rails to the assembled headboard and footboard. Install the central support beams and legs. Ensure all bolts are tightened to create a stable structure.

Step 4: Install Bed Slats

Place the metal bed slats onto the frame. These slats provide direct support for your mattress, eliminating the need for a box spring.

Step 5: Install USB Charging Ports

Locate the designated slot on the headboard for the USB charging port unit. Insert the unit and secure it with the provided screws. Route the power cable neatly.



Image: Detail of the USB charging ports and electrical outlets integrated into the headboard shelf.



Image: The back of the headboard, illustrating the power cable connection for the charging ports.

Step 6: Assemble the Trundle Bed

Assemble the trundle frame, attaching the wheels as instructed. Ensure the wheels with brakes are correctly installed to prevent unwanted movement.



 $Image: A \ close-up \ of \ a \ trundle \ wheel, \ highlighting \ its \ design \ and \ the \ brake \ feature.$

Step 7: Final Placement

Carefully move the assembled bed to its desired location. Insert the trundle bed underneath the main frame.



Image: The Polibi bed with the trundle fully extended, ready for use.



Image: The Polibi bed with the trundle partially retracted, demonstrating its space-saving design.

OPERATING INSTRUCTIONS

Using the Trundle Bed

- To extend the trundle: Gently pull the trundle frame from underneath the main bed. The wheels will allow for smooth movement.
- To secure the trundle: Engage the brakes on the trundle wheels to prevent accidental movement.
- To retract the trundle: Disengage the wheel brakes, push the trundle back under the main bed until it is fully stored.

Using the USB Charging Ports

- · Connect the bed's power cord to a standard wall outlet.
- Plug your devices into the USB ports or AC outlets located on the headboard.
- Ensure devices are compatible with the power output specifications of the ports.

MAINTENANCE

- Cleaning: Wipe the metal and wood surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Hardware:** Periodically check all bolts and screws to ensure they remain tight. Re-tighten as necessary to maintain stability.
- Trundle Wheels: Keep trundle wheels free of debris to ensure smooth operation.
- **Electrical Components:** Ensure the power cord and charging unit are free from damage. Disconnect from power outlet before cleaning or if any damage is observed.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bed feels unstable or wobbly.	Loose hardware.	Check and tighten all screws and bolts. Ensure all support legs are making contact with the floor.
Trundle does not slide smoothly.	Wheels are obstructed or brakes are engaged.	Check for debris around the wheels. Ensure wheel brakes are disengaged.
USB ports or outlets are not working.	Power cord not connected or loose. Device incompatibility.	Ensure the bed's power cord is securely plugged into a working wall outlet. Test with a different device.
Missing parts during assembly.	Packaging error.	Contact Polibi customer support immediately with your purchase details.

SPECIFICATIONS

Brand: Polibi

Model: Full Size Platform Bed with Trundle **Product Dimensions:** 75.2"L x 55.7"W x 39"H

Color: White + Natural (Frame is white, wooden panels are natural wood finish)

Material: Metal and Wood

Weight Capacity (Main Bed): 350 lbs Weight Capacity (Trundle): 350 lbs

Box Spring Required: No

Special Features: Integrated USB Charging Ports and AC Outlets, Movable Trundle, Slat Support

Assembly Required: Yes **UPC:** 196986593305

ASIN: BOBXPCD1QL

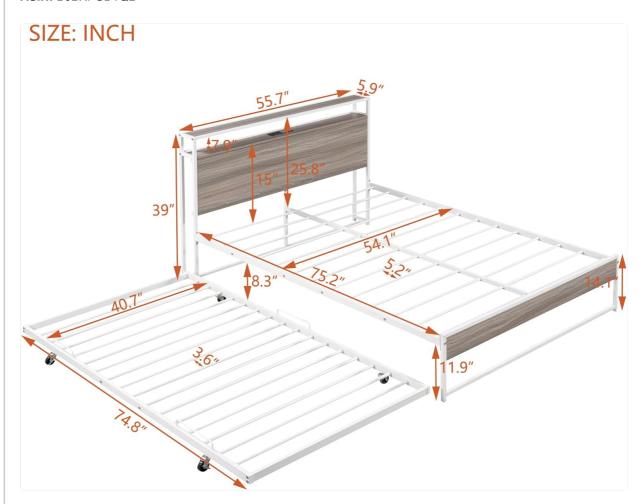


Image: Dimensional diagram of the Polibi Full Size Platform Bed with Trundle, indicating length, width, and height measurements for both the main bed and the trundle.

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact Polibi customer support. If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact our customer service team.

Polibi Customer Support:

Website: Visit the Polibi Store on Amazon

Please refer to your purchase receipt for specific contact details or visit the brand's official website.

Related Documents - Full Size Platform Bed with Trundle



<u>Assembly Instructions for Queen Size Upholstered Wood Platform Bed with Headboard and 2 Drawers</u>

Step-by-step assembly instructions for a gray queen size upholstered wood platform bed with a headboard and two drawers. Includes safety warnings, part lists, hardware lists, and assembly steps.



Assembly Instructions: King Size Platform Bed (SKU: WF283526)

Comprehensive assembly instructions for a King Size Solid Wood Platform Bed, including a detailed parts list, hardware specifications, and step-by-step visual guidance. Safety warnings and essential assembly tips are provided for a smooth setup.



Assembly Instructions for WF197908/WF197909 Bunk Bed

Detailed assembly instructions for the WF197908/WF197909 bunk bed, including part lists, hardware details, and step-by-step guidance. Learn how to assemble your bunk bed safely and correctly.



Assembly Instructions: Polibi Twin/Full Bunk Bed with Desk (WF290950, WF290951)

Comprehensive assembly guide for the Polibi Twin/Full Bunk Bed with Desk, featuring model numbers WF290950 and WF290951. Includes detailed safety warnings, a complete parts list, hardware inventory, and step-by-step visual instructions with textual descriptions.



Polibi Loft Bed Assembly Instructions (WF301849/301850)

Detailed assembly instructions for the Polibi Loft Bed, model numbers WF301849 and WF301850. Includes safety warnings, parts list, hardware list, and step-by-step guidance for building the metal house bunk bed with slide and staircase.



Polibi Bed Warranty Policy - RS519-8972AAK & HARI-232AAM | The Home Depot

This document outlines the 6-month warranty policy for Polibi furniture, including specific models like the RS519-8972AAK Murphy Bed and HARI-232AAM Canopy Platform Bed. It details the process for handling manufacturing defects and lists common exclusions such as accidental damage, unauthorized modifications, and purchases made outside The Home Depot Marketplace.