

## iPormis TIE206

# iPormis Queen Size Metal Bed Frame with Leather Headboard Instruction Manual

Brand: iPormis | Model: TIE206

## 1. INTRODUCTION

---

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your iPormis Queen Size Metal Bed Frame with Leather Headboard. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

## 2. SAFETY INFORMATION

---

### WARNING:

- Follow the provided assembly instructions carefully to ensure stability and safety.
- Check for any sharp edges or potential pinch points during assembly and use.
- Do not exceed the maximum weight capacity of 1000 lbs (453 kg).
- Ensure all bolts and screws are securely tightened before use and periodically check for looseness.
- Keep small parts away from children during assembly to prevent choking hazards.

## 3. PACKAGE CONTENTS

---

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Headboard (Leather upholstered)
- Footboard (Leather upholstered)
- Side Rails (Metal)
- Metal Slats (14 pieces)
- Support Legs (with fluorescent strips)
- Hardware Pack (bolts, nuts, washers, Allen wrench)

- Installation Manual (this document)



Figure 3.1: Exploded view of bed frame components and hardware.

## 4. SETUP AND ASSEMBLY

---

The iPormis bed frame is designed for easy assembly. It is recommended to have two people for assembly.

### 4.1 Preparation

- Clear an open space for assembly.
- Lay out all components on a soft, clean surface to prevent scratches.
- Identify all hardware pieces using the provided diagram in the hardware pack.


### 4.2 Assembly Steps

1. **Attach Side Rails to Headboard and Footboard:** Connect the metal side rails to the pre-drilled holes on the headboard and footboard using the provided bolts and Allen wrench. Ensure a snug fit.
2. **Install Center Support Beam:** Secure the center support beam to the designated points on the side rails. This beam provides additional stability.
3. **Place Metal Slats:** Lay the 14 metal slats across the frame, ensuring they fit into the embedded design for noise-free operation. The slats are designed to provide strong load-bearing capacity.
4. **Secure Slats:** Use the noiseless buckles to secure the slats in place, preventing movement and squeaking.
5. **Attach Support Legs:** Screw in the support legs, including those with fluorescent strips, to the underside of the frame. The fluorescent strips help locate bed legs in low light.
6. **Final Tightening:** Once all parts are in place, re-tighten all bolts to ensure maximum stability.



Figure 4.1: Details of easy assembly, noise-free mute bar, and embedded design for secure slat placement.

### Thoughtful Design of Bed Frame

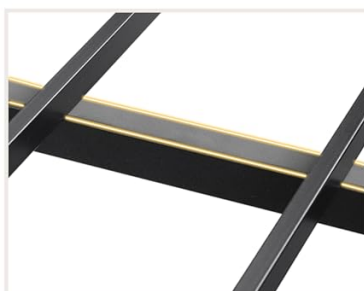

#### EVA Mute Foam

EVA foam on the crossbar blocks the noise, providing you with a quiet sleeping environment.



#### Protective Foot Pads

The foot pads can reduce noise when you move and protect the floor from scratches.



#### Noiseless Buckles

All parts fit precisely, no creaking, or squeaking.

Figure 4.2: Thoughtful design elements including EVA mute foam, protective foot pads, and noiseless buckles for enhanced stability and quiet operation.

Your browser does not support the video tag.

Video 4.1: Official assembly and feature overview for the iPormis Metal Bed Frame with Leather Headboard. This video demonstrates the quick setup, noise-free features, and ample storage space.

## 5. OPERATING INSTRUCTIONS

---

The iPormis bed frame is designed to provide a stable and comfortable foundation for your mattress. No box spring is required.

- Place your mattress directly onto the metal slats.
- Utilize the 12-inch under-bed clearance for convenient storage of boxes, clothes, or shoes, helping to keep your room tidy and organized.
- The leather upholstered headboard provides a soft and comfortable backrest for sitting up in bed.
- The fluorescent strips on the bed legs enhance visibility in low-light conditions, helping to prevent accidental toe stubbing.



Figure 5.1: Illustration of the 12-inch under-bed storage space and the fluorescent strips on the bed legs for safety.

## 6. MAINTENANCE

---

To ensure the longevity and appearance of your bed frame, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the metal frame and leather headboard with a dry cloth. For minor spills on the leather surface, gently blot with a clean, damp cloth and then dry immediately. Avoid harsh chemicals or

abrasive cleaners.

- **Regular Checks:** Periodically inspect all bolts and connections to ensure they remain tight. Re-tighten if necessary to maintain stability and prevent noise.
- **Avoid Excessive Weight:** Do not exceed the stated weight capacity of 1000 lbs.
- **Protect Floors:** The rounded tube support and protective footpads are designed to protect your floors. Ensure these remain intact.



Leather Surface,  
Easy to Clean

Rounded Tube Support,  
Protect Your Floor

Figure 6.1: Details of the easy-to-clean leather surface and rounded tube support designed to protect flooring.

## 7. TROUBLESHOOTING

If you encounter any issues with your bed frame, refer to the following common solutions:

Problem	Possible Cause	Solution
Bed frame is squeaking or noisy.	Loose bolts or connections; slats not properly seated.	Check and re-tighten all bolts. Ensure all metal slats are correctly positioned within the embedded design and secured with noiseless buckles.

Problem	Possible Cause	Solution
Bed frame feels unstable or wobbly.	Incomplete assembly; loose connections; uneven floor.	Verify all assembly steps have been completed correctly. Tighten all bolts. If on an uneven floor, consider using furniture pads or shims under the legs.
Mattress slides on the frame.	Smooth mattress bottom; lack of friction.	Consider placing a non-slip mat between the mattress and the slats.

If the issue persists after attempting these solutions, please contact iPormis customer support.

## 8. SPECIFICATIONS

---

Feature	Detail
Size	Queen
Color	Black
Material	Heavy-duty Metal Frame, Leather Upholstered Headboard and Footboard
Product Dimensions (L x W x H)	82" x 62" x 42"
Under-Bed Clearance	12 inches
Weight Capacity	Up to 1000 lbs (453 kg)
Box Spring Required	No
Special Features	Leather Diamond Tufted Button, Noise-Free, Easy to Assemble, Rounded Edges for Safety, Thicker Metal Slats Support, Fluorescent Leg Strips
Item Model Number	TIE206

# — QUEEN SIZE —

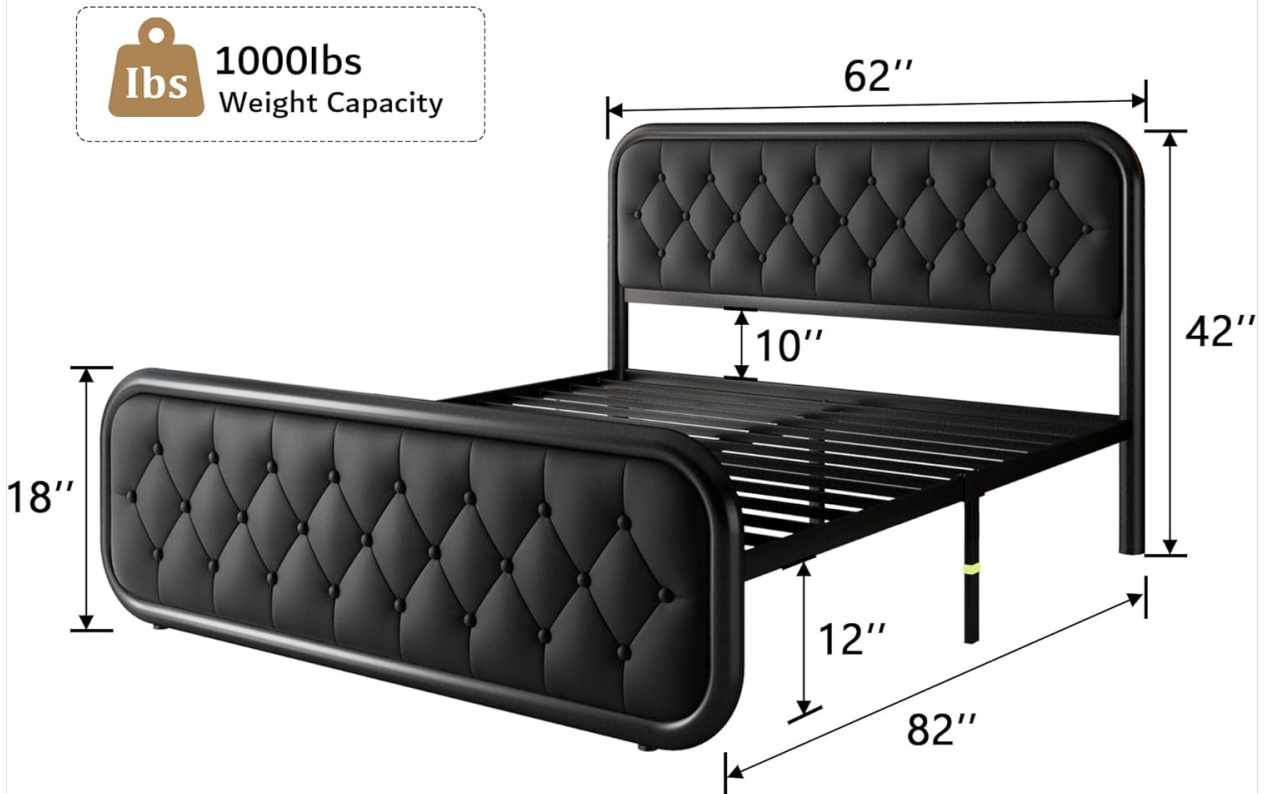


Figure 8.1: Key dimensions and weight capacity for the Queen size bed frame.

**SPECIFICATIONS**

Size:	Queen
Color:	Black
Material:	Leather & Matel
Product Dimensions:	82*62*42in
Box Spring Required:	No
Weight Capacity:	1000 lbs
Package Content:	Bed frame & Instruction

Figure 8.2: Detailed specifications of the iPormis Queen Size Metal Bed Frame.

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact iPormis customer service. Refer to your purchase documentation for specific warranty terms and contact details.

You can also visit the official iPormis store on Amazon for more information and support: [iPormis Amazon Store](#)

