

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [iPormis](#) /

› iPormis King Size Metal Bed Frame with Leather Headboard Instruction Manual

### iPormis B0BZ17CFKX

# iPormis King Size Metal Bed Frame with Leather Headboard Instruction Manual

Model: B0BZ17CFKX

## 1. INTRODUCTION

---

This manual provides detailed instructions for the assembly, operation, and maintenance of your iPormis King Size Metal Bed Frame with Leather Headboard. Please read all instructions carefully before beginning assembly and retain this manual for future reference. This bed frame is designed for a King size mattress and features a heavy-duty metal construction with a faux leather upholstered headboard and footboard.



Image 1.1: Fully assembled iPormis King Size Metal Bed Frame with black faux leather headboard and footboard, showcasing its modern design in a bedroom setting.

## 2. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- **Caution:** The bed frame features rounded edges and a smooth finish for safety.
- Always use the provided protective footpads to prevent floor scratches and enhance stability.
- Ensure all screws and bolts are securely tightened during assembly and periodically check for tightness.
- Do not exceed the maximum weight capacity of 1000 lbs (453 kg).
- Keep small parts away from children during assembly to avoid choking hazards.
- Avoid standing or jumping on the bed frame.
- For cleaning, refer to the "Maintenance" section; use dry cleaning methods only to avoid damage to the faux leather.
- Fluorescent strips are positioned on bed legs to help locate them in low light and prevent stubbing toes.

### 3. PACKAGE CONTENTS

---

Before assembly, verify that all components are present. If any parts are missing or damaged, please contact iPormis customer support.

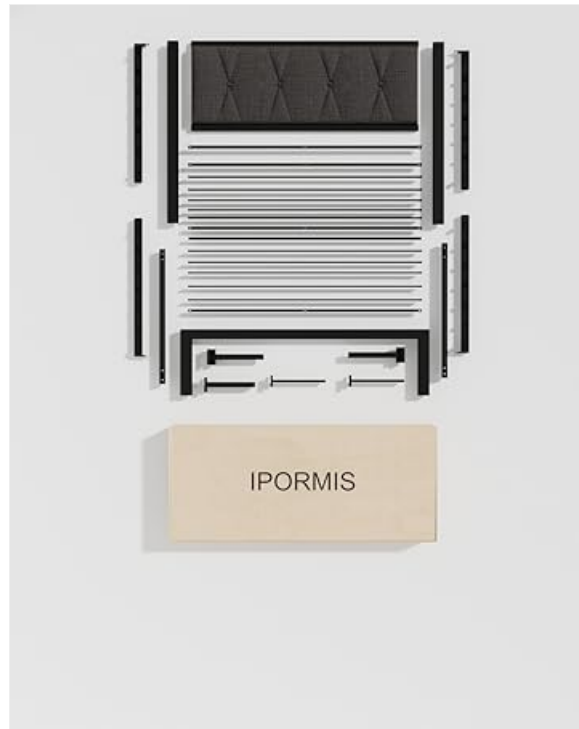


Image 3.1: Overview of disassembled bed frame components, including headboard, footboard, side rails, metal slats, and hardware box.

The package typically includes:

- Headboard (1)
- Footboard (1)
- Side Rails (2)
- Metal Slats (14)
- Crossbars (4)
- Support Legs (various sizes)
- Hardware Pack (screws, bolts, Allen wrench)
- Instruction Manual (this document)

### 4. ASSEMBLY INSTRUCTIONS

---

Assembly is designed to be straightforward and typically takes about 30 minutes for a first-time assembler. All necessary tools are included.

1. **Prepare the Area:** Clear a spacious area for assembly. Lay out all components and hardware.
2. **Attach Side Rails to Headboard:** Connect the side rails to the headboard using the provided bolts and Allen wrench. Ensure the connections are secure but do not fully tighten yet.
3. **Attach Side Rails to Footboard:** Connect the other end of the side rails to the footboard. Again, secure with bolts but do not fully tighten.
4. **Install Center Support Legs:** Attach any required center support legs to the crossbars or directly to the frame, as indicated in the diagram.
5. **Insert Metal Slats:** Place the metal slats across the frame. The embedded design ensures a snug fit and noise-free

operation. Ensure the noise-free mute bars are correctly positioned.

6. **Tighten All Connections:** Once all components are in place, go back and fully tighten all bolts and screws. This ensures the frame's stability and prevents squeaking.
7. **Apply Footpads:** Attach the protective footpads to the bottom of all bed legs.



Easy to Assemble

Noise-Free Mute Bar



Embedded Design

Image 4.1: Close-up views illustrating easy assembly features, noise-free mute bar integration, and the embedded design for slats.

## Thoughtful Design of Bed Frame



### EVA Mute Foam

EVA foam on the crossbar blocks the noise, providing you with a quiet sleeping environment.



### Protective Foot Pads

The foot pads can reduce noise when you move and protect the floor from scratches.



### Noiseless Buckles

All parts fit precisely, no creaking, or squeaking.

Image 4.2: Visual representation of EVA mute foam for noise reduction, protective foot pads to prevent floor scratches, and noiseless buckles for secure, quiet connections.

## 5. OPERATING INSTRUCTIONS

The iPormis bed frame is designed for direct mattress placement; a box spring is not required. Simply place your King size mattress directly onto the metal slats.

- Ensure the mattress is centered on the frame for even weight distribution.
- The 12-inch under-bed clearance provides ample space for storage. Utilize this area for boxes, clothing, or shoes to keep your room tidy.
- The faux leather headboard and footboard offer a comfortable and stylish aesthetic.



Image 5.1: View of the bed frame highlighting the 12-inch under-bed storage clearance and the fluorescent strips on the bed legs for visibility.

## 6. MAINTENANCE

Proper care will extend the life and appearance of your bed frame.

- **Cleaning:** The faux leather upholstery should be cleaned using dry cleaning methods only. Do not use liquid cleaners, abrasive chemicals, or harsh brushes, as these can damage the material.
- **Frame Care:** Wipe the metal frame with a soft, dry cloth to remove dust.
- **Periodic Check:** Periodically inspect all bolts and screws to ensure they remain tight. Re-tighten if necessary to maintain stability and prevent noise.
- **Floor Protection:** Ensure the protective footpads are always in place to prevent scratches on your flooring.

## ELEGANT FAUX LEATHER FINISH

The sleek romantic look faux leather finish is soft and skin-friendly, perfect for bedroom decor



Skin-friendly



Breathabl

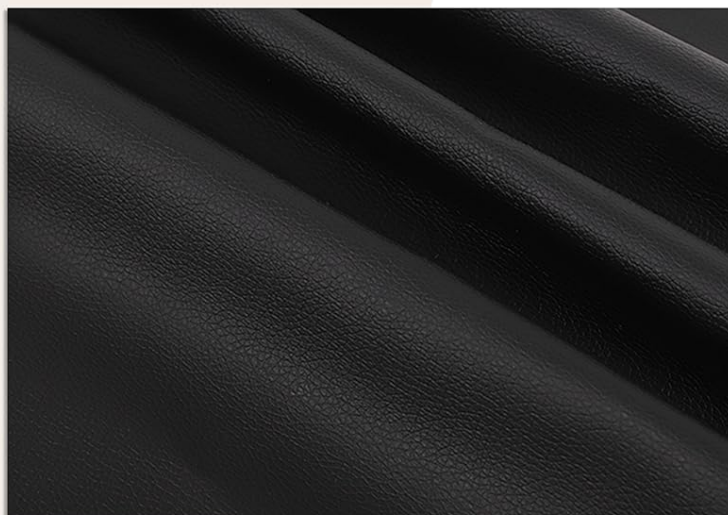


Image 6.1: Detail of the faux leather finish, highlighting its texture and appearance, which requires dry cleaning.

## 7. TROUBLESHOOTING

If you encounter any issues with your bed frame, refer to the following common solutions:

Problem	Possible Cause	Solution
Bed frame squeaks or makes noise	Loose bolts or connections; slats not properly seated.	Re-tighten all bolts and screws. Ensure all metal slats are fully inserted into their designated slots and the noise-free mute bars are correctly positioned.
Bed frame feels unstable or wobbly	Incomplete assembly; uneven floor; loose connections.	Verify all components are correctly assembled and all bolts are fully tightened. Check if the floor is level; use shims if necessary. Ensure all support legs are making firm contact with the floor.
Mattress slides on the frame	Mattress not properly centered or incompatible size.	Ensure your mattress is a King size and is centered on the frame. Anti-slip pads can be placed between the mattress and slats if sliding persists.
Difficulty assembling parts	Misalignment of holes; incorrect part orientation.	Refer to the assembly diagrams carefully. Do not fully tighten any bolts until all major components are loosely connected. If holes do not align, try rotating the part or checking for obstructions.

## 8. SPECIFICATIONS

Key specifications for the iPormis King Size Metal Bed Frame:

- **Size:** King
- **Color:** Black
- **Material:** Metal (frame), Faux Leather (headboard/footboard upholstery)
- **Product Dimensions:** 78"L x 82"W x 42"H
- **Under-Bed Clearance:** 12 inches
- **Weight Capacity:** 1000 lbs (453 kg)
- **Item Weight:** 80 lbs (36.3 kg)

- **Assembly Required:** Yes
- **Box Spring Required:** No
- **Special Features:** Heavy-duty metal frame, leather tufted headboard, noise-free design, rounded edges, fluorescent leg strips.



Image 8.1: Diagram illustrating the key dimensions of the King size bed frame, including length, width, height, and under-bed clearance.

## 9. WARRANTY AND SUPPORT

Your iPormis King Size Metal Bed Frame comes with a limited warranty. For specific details regarding the warranty period and coverage, please refer to the documentation included with your purchase or contact iPormis customer support.

**Manufacturer:** iPormis

For assistance with assembly, missing parts, or any other inquiries, please contact iPormis customer service through the retailer where the product was purchased or visit the official iPormis website.

