



Manuals.plus /

› MUTICOR /

› MUTICOR Queen Size Platform Bed Frame with Wooden Headboard and Footboard Instruction Manual

MUTICOR Queen Size Metal Platform Bed Frame with Wooden Headboard and Footboard

MUTICOR Queen Size Platform Bed Frame with Wooden Headboard and Footboard Instruction Manual

Model: Queen Size Metal Platform Bed Frame with Wooden Headboard and Footboard (ASIN: B0C2HCXWRM)

IMPORTANT SAFETY INFORMATION

Please read and understand all instructions carefully before assembly and use. Keep this manual for future reference. Ensure all components are present and undamaged before beginning assembly. Do not use power tools for assembly as this may overtighten fasteners and damage the frame.

- Always assemble the bed frame on a soft, clean surface to prevent scratches.
- Ensure all bolts and screws are securely tightened before use. Periodically check and re-tighten all fasteners.
- Do not exceed the maximum weight capacity of 1000 pounds.
- Keep small parts away from children during assembly.
- This bed frame is designed for use with a mattress; a box spring is not required.

PACKAGE CONTENTS

Verify that all parts listed below are included in your package. If any parts are missing or damaged, please contact MUTICOR customer support.

Part	Description	Quantity
A	Headboard Panel	1
B	Footboard Panel	1
C	Side Rails	2
D	Center Support Beam	1
E	Metal Slats	Multiple
F	Support Legs	6
G	Hardware Pack (bolts, washers, Allen wrench)	1

Note: The exact number of slats and hardware pieces may vary slightly. Refer to the detailed parts list included in your physical package.

SETUP INSTRUCTIONS

- Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface. Check against the package contents list.
- Attach Headboard and Footboard to Side Rails:** Connect the side rails (C) to the headboard (A) and footboard (B) using the provided bolts and Allen wrench from the hardware pack (G). Ensure the rounded edges of the headboard and footboard are facing outwards. Do not fully tighten bolts yet.
- Install Center Support Beam:** Attach the center support beam (D) to the designated brackets on the headboard and footboard. Secure with bolts, but do not fully tighten.
- Attach Support Legs:** Screw the support legs (F) into the pre-drilled holes on the center support beam and side rails. Ensure they are firmly attached.
- Place Metal Slats:** Lay the metal slats (E) across the side rails. The slats are designed to fit into specific slots or have rubber latches for secure placement. Ensure they are evenly spaced and secured.
- Final Tightening:** Once all components are in place, go back and securely tighten all bolts and screws using the Allen wrench. Do not overtighten.
- Add Mattress:** Carefully place your queen-size mattress onto the assembled bed frame. No box spring is needed.

PRODUCT INFORMATION

Weight capacity: 800lbs

Size: 83.6" x 62.8" x 40.7"

.....

Queen Size

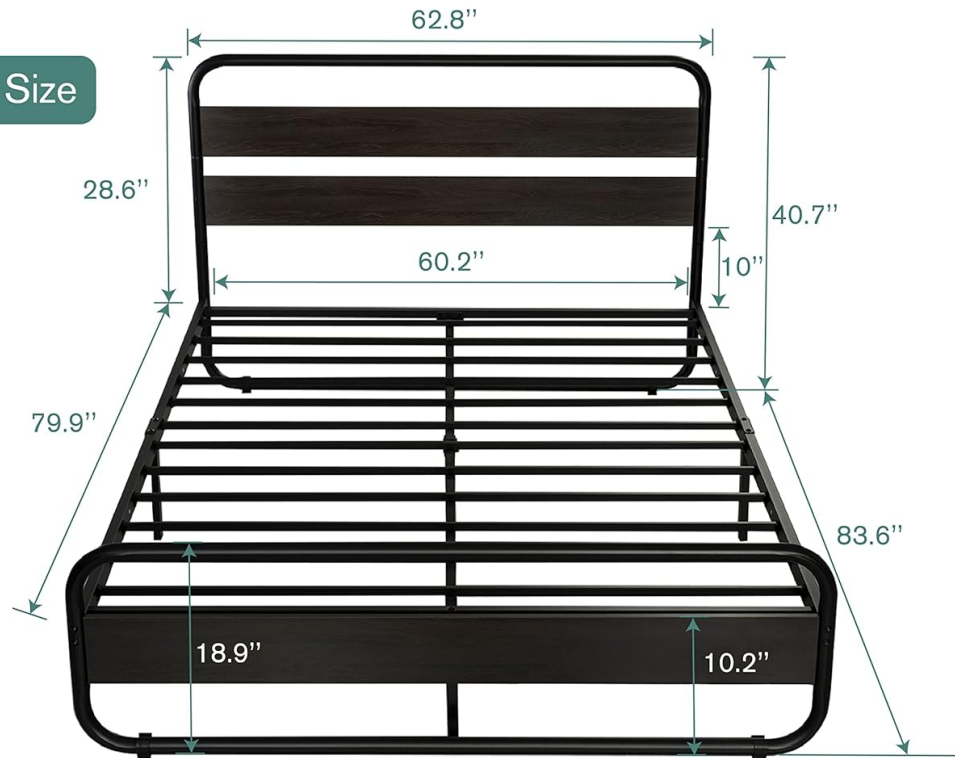


Figure 1: Product dimensions and weight capacity for the Queen Size bed frame.

DETAIL
01

Headboard

The Collision of Steel and Wood



Figure 2: Detail of the wooden headboard, showcasing the blend of metal and wood design.

DETAIL
02

Footboard

*Round Edges Design for More Safe
and More Assured*



Figure 3: Detail of the rounded wooden footboard, designed to secure the mattress and prevent noise.

OPERATING INSTRUCTIONS

The MUTICOR bed frame is designed for stable and comfortable use. Once assembled, no specific "operation" is required beyond standard bed use.

- **Mattress Placement:** Ensure the mattress is centered on the frame to distribute weight evenly. The footboard helps prevent mattress sliding.
- **Under-Bed Storage:** Utilize the 10.2-inch clearance beneath the frame for storage. This space is ideal for bins, boxes, or other items to keep your room tidy.

UNDER-BED STORAGE SPACE

.....



Figure 4: Illustration of the generous 10.2-inch under-bed storage space.

MAINTENANCE

Regular maintenance will ensure the longevity and continued stability of your bed frame.

- **Cleaning:** Wipe the metal and wood surfaces with a damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Fastener Check:** Periodically (e.g., every 3-6 months) check all bolts and screws to ensure they remain tight. Re-tighten as necessary to prevent wobbling or squeaking.
- **Slat Inspection:** Inspect the metal slats for any signs of damage or bending. Ensure rubber latches (if present) are intact to prevent noise and mattress movement.
- **Floor Protection:** The frame includes rubber skid rings under the footboard legs to protect your floors. Ensure these remain in place.

DETAIL
03

Rubber Ring

Rubber Ring for Protecting Your Beloved Floor



Figure 5: Detail of the non-slip mat or rubber ring on the bed frame leg, designed for floor protection.

DETAIL
04

Strong Metal Slats

Strong metal slats for heavy duty



Figure 6: View of the strong metal slats, highlighting their robust construction and 1000 lbs weight capacity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bed frame is wobbly or unstable.	Loose bolts or screws.	Check and tighten all fasteners on the headboard, footboard, side rails, and support legs.
Squeaking noises.	Loose connections, slats rubbing against frame, or mattress movement.	Ensure all bolts are tight. Verify slats are properly seated and rubber latches are in place. Adjust mattress position.
Mattress slides on the frame.	Improper mattress placement or lack of friction.	Ensure the mattress is fully against the footboard. The footboard is designed to hold the mattress in place.
Missing parts during assembly.	Packaging error.	Contact MUTICOR customer support with your purchase details and the specific missing parts.

SPECIFICATIONS

- **Size:** Queen
- **Material:** Metal, Wood
- **Product Dimensions (L x W x H):** 83.6" x 62.8" x 40.7"
- **Under-Bed Clearance:** 10.2 inches
- **Weight Capacity:** 1000 Pounds
- **Color:** Black (for this variant)
- **Features:** Fade Resistant, Squeak Resistant, Stain Resistant (due to thoughtful design and materials)
- **Assembly Required:** Yes
- **Box Spring Required:** No



Figure 7: The MUTICOR Queen Size Metal Bed Frame, showcasing its modern design and sturdy construction.

WARRANTY AND SUPPORT

MUTICOR provides a limited warranty for this product against manufacturing defects. For specific warranty terms, duration, and to make a claim, please refer to the warranty card included in your package or contact MUTICOR customer support directly.

Customer Support:

- For assistance with assembly, missing parts, or product inquiries, please visit the [MUTICOR Store](#) on Amazon or refer to the contact information provided in your product packaging.