



[Manuals.plus](#) /

> [iPormis](#) /

> iPormis Queen Bed Frame with 4 Storage Drawers, Upholstered Platform Bed Frame with Type-C & USB Ports, Wingback Storage Headboard, Solid Wood Slats

iPormis B0C7LHML99

iPormis Queen Bed Frame Instruction Manual

Comprehensive guide for assembly, operation, and maintenance of your iPormis Queen Bed Frame with storage and charging features.

1. INTRODUCTION

Thank you for choosing the iPormis Queen Bed Frame. This manual provides detailed instructions to ensure safe assembly, proper use, and effective maintenance of your new bed frame. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

2. IMPORTANT SAFETY INFORMATION

- **Weight Capacity:** Do not exceed the maximum weight capacity of the bed frame, as this may result in damage or injury.
- **Assembly:** Improper assembly can lead to instability or collapse, causing harm. Follow all assembly instructions precisely.
- **Pinch Points & Sharp Edges:** Exercise caution during assembly to avoid pinch points and sharp edges.
- **Under-Bed Space:** Due to the low ground-to-item distance, ensure small children or pets do not hide under the bed to prevent potential entrapment or injury.
- **Electrical Outlets:** The integrated electrical outlets are designed for standard use. Avoid overloading them. If any electrical component buzzes or malfunctions, discontinue use immediately and contact customer support.

3. PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. Refer to the included parts list in your package. The package typically includes:

- Metal Bed Frame (x1)
- Wingback Storage Headboard (x1)
- Solid Wood Slats (x12)
- Storage Drawers (x4)
- Installation Accessories (screws, bolts, etc.)
- Tools (Allen wrench, etc.)
- Instruction Manual



Figure 1: Fully assembled iPormis Queen Bed Frame with storage drawers and charging headboard.

4. ASSEMBLY INSTRUCTIONS

Assembly is designed to be straightforward and can typically be completed in under 40 minutes with the provided tools and instructions. It is recommended to have two people for easier assembly, especially when handling larger components.

4.1 Unpacking

Carefully open the packaging. The box can be heavy, especially for King size models. It is advisable to unpack components in the room where the bed will be assembled to avoid carrying heavy, bulky items upstairs or through narrow doorways. Be cautious when using cutting tools to avoid damaging the fabric components.

Your browser does not support the video tag.

Video 1: Unboxing the iPormis Bed Frame. This video demonstrates the unpacking process and shows how components are organized within the box.

4.2 Frame Assembly

Follow the step-by-step diagrams provided in your instruction manual. Ensure all bolts are securely tightened, but avoid overtightening to prevent damage. The parts are labeled for easy identification.

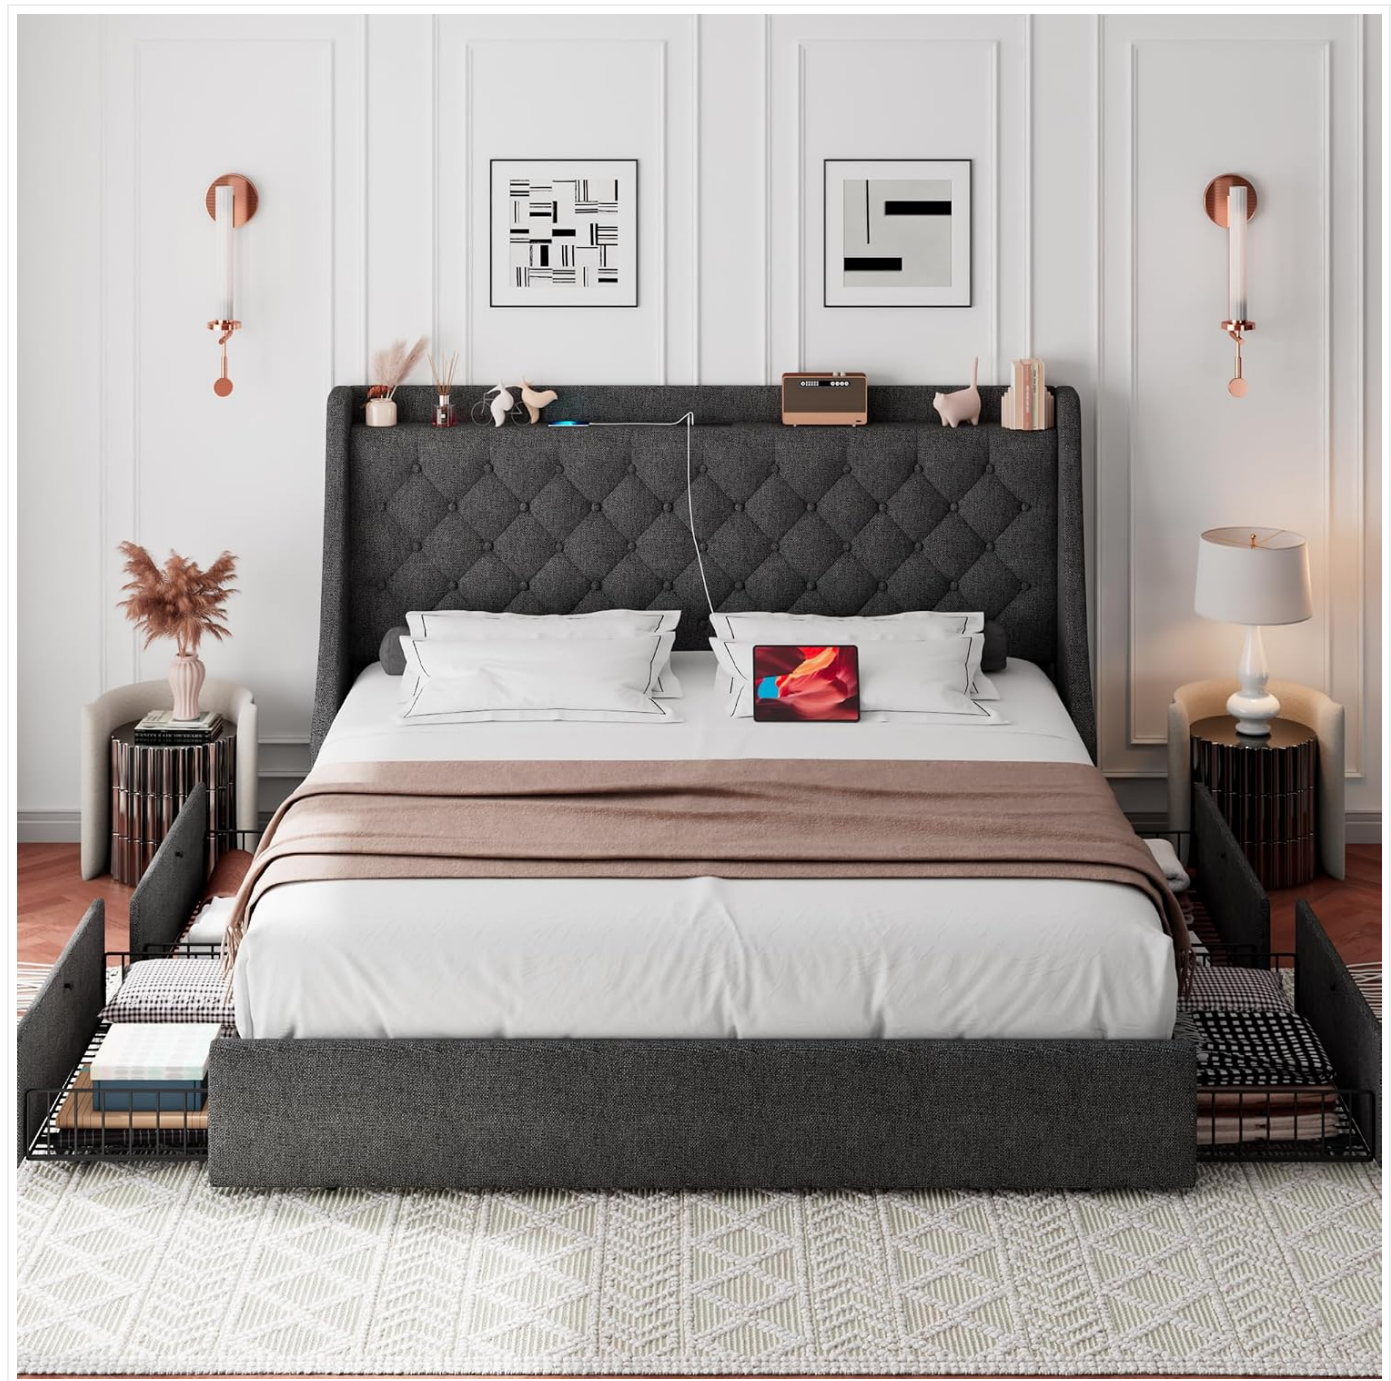


Figure 2: Diagram showing the dimensions and key components of the Queen size bed frame, including the headboard, side rails, and slats.

4.3 Slat Installation

The solid wood slats feature a one-click installation mechanism. Ensure they are properly seated and locked into place for optimal mattress support and noise reduction. Some slats may have foam padding; these should face upwards to prevent noise from the mattress rubbing against the metal frame.

Smooth Mute Wheels

Built-in 4 stable wheels under the drawers. Easily slide in and out without any noise.



Figure 3: Detailed view of the one-click slat installation system and the EVA foam on slats designed to reduce noise.

4.4 Drawer Assembly

The four storage drawers require minor assembly, including attaching the wheels. Once assembled, they slide smoothly into the designated spaces under the bed frame. Ensure the latch system is engaged to keep them securely closed.



Figure 4: An assembled storage drawer pulled out from under the bed frame, demonstrating its capacity for bedding and other items.

5. FEATURES OVERVIEW

- **4 Storage Drawers:** Smooth-gliding drawers provide ample space for clothes, bedding, and other items, optimizing bedroom organization.
- **Fast Charging Ports:** Integrated 20W Type-C and USB-A ports, along with two standard outlets, are built into the headboard for convenient device charging.
- **Wingback Headboard:** The 14-inch wingback design prevents mattress sliding and enhances stability, while leaving space for nightstands.
- **Solid Wood Slats:** Provides robust support for your mattress without the need for a box spring, ensuring durability and noise-free use.
- **Low Profile Design:** A low center of gravity structure makes it easy to get in and out of bed and helps keep items from accumulating underneath.

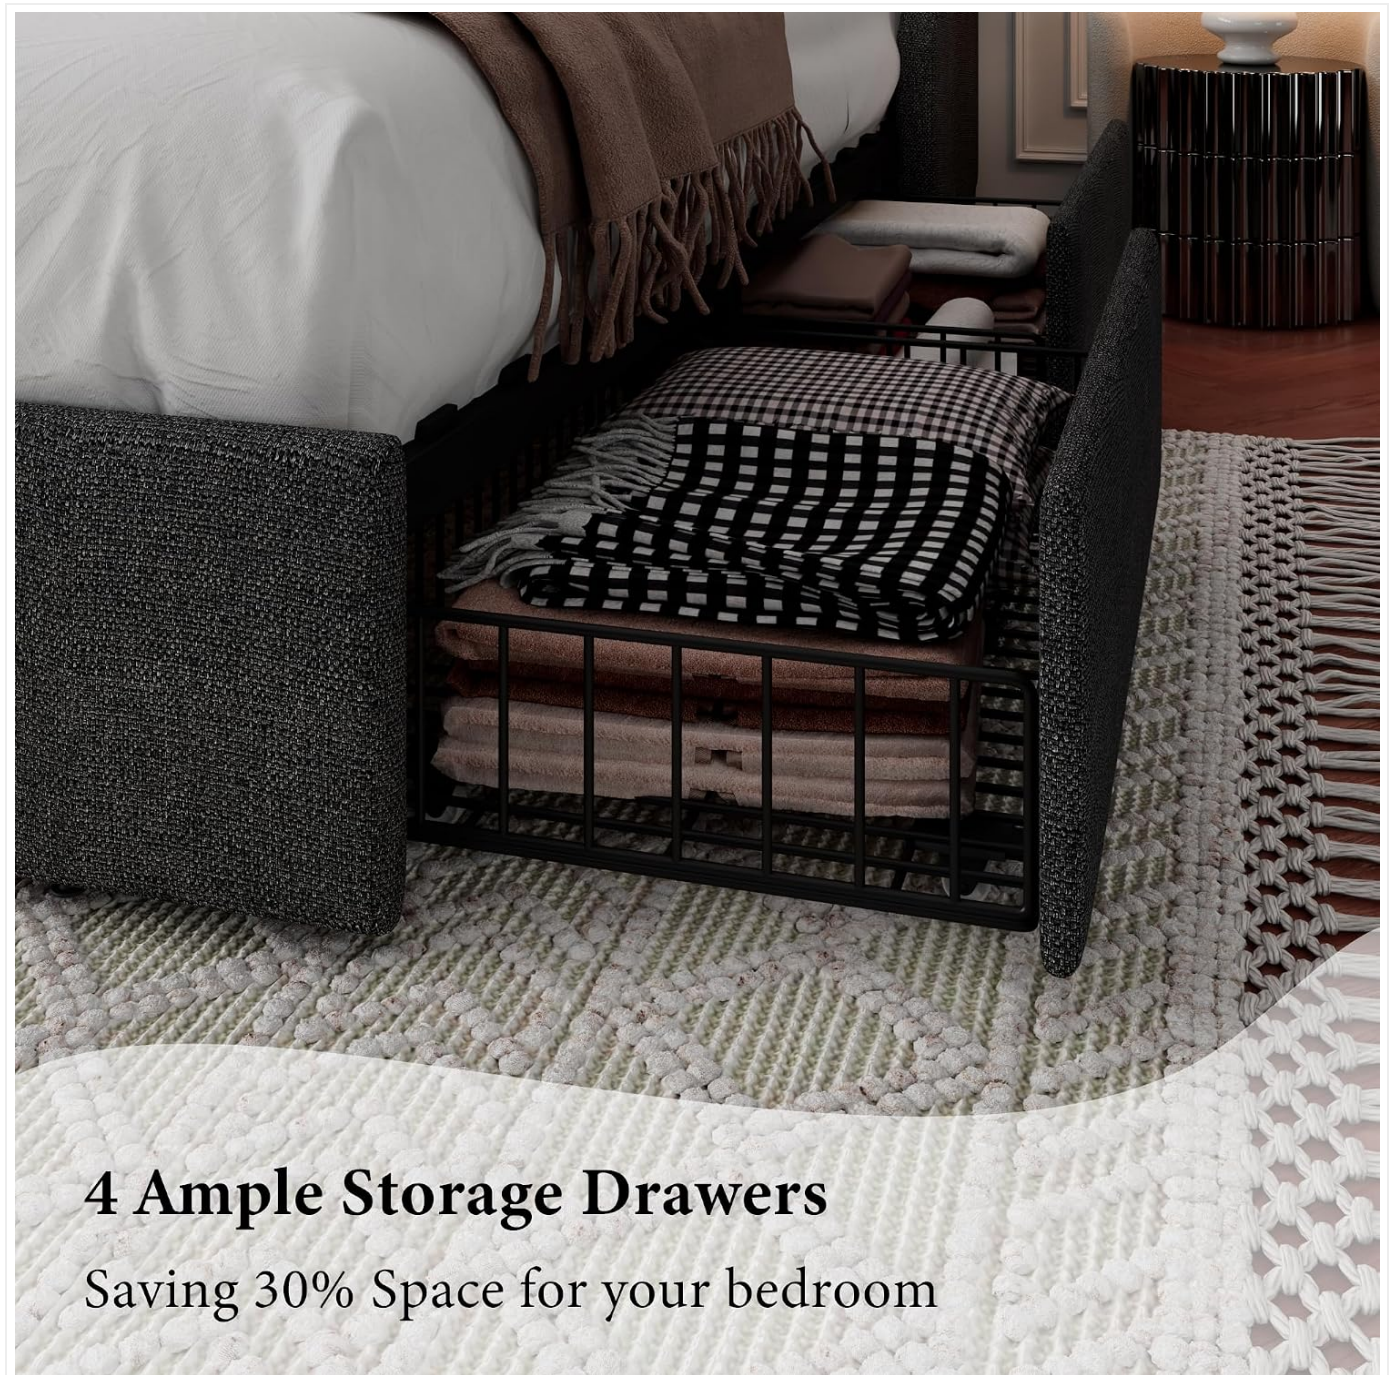


Figure 5: The headboard's integrated charging station, featuring USB, Type-C, and standard AC outlets for convenient device power.

Your browser does not support the video tag.

Video 3: Overview of the iPormis Upholstered Platform Storage Bed Frame, highlighting its key features including storage drawers, wingback design, and charging ports.

6. OPERATING INSTRUCTIONS

6.1 Using the Storage Drawers

To open a drawer, gently pull the front panel. To close, push the drawer back until it clicks into place, engaging the latch system. This ensures the drawers remain securely under the bed.



Figure 6: Close-up of the drawer latch mechanism, designed for secure closure.

6.2 Using the Charging Ports

Plug the bed frame's power cord into a wall outlet. You can then use the integrated Type-C, USB-A, and standard AC outlets on the headboard to charge your electronic devices. Avoid connecting high-power appliances to prevent overloading.

7. MAINTENANCE

- **Cleaning:** For the upholstered parts, use a soft, damp cloth and mild soap if necessary. Avoid harsh chemicals. For metal parts, wipe with a dry cloth.
- **Fasteners:** Periodically check all bolts and screws to ensure they remain tight. Retighten if necessary.
- **Slats:** Ensure slats are always properly seated in their holders to maintain mattress support and prevent noise.

8. TROUBLESHOOTING

- **Bed Frame Squeaks:** Check all connections and ensure bolts are tight. Verify that all slats are correctly installed and seated. The EVA foam on the slats is designed to prevent noise.
- **Drawers Not Closing Securely:** Ensure the latch mechanism on the drawers is properly aligned and engaged. Check for any obstructions preventing full closure.
- **Electrical Outlets Not Working:** Ensure the bed frame's main power cord is securely plugged into a functional wall outlet. Check for any tripped circuit breakers. If buzzing or other electrical issues occur, unplug immediately and contact customer support.
- **Mattress Gap:** Some mattresses, particularly non-standard sizes, may leave a small gap at the headboard or footboard. This is often resolvable with a wedge pillow or by adjusting mattress position.

9. SPECIFICATIONS

Brand	iPormis
Model	B0C7LHML99
Size	Queen
Product Dimensions	86"L x 63"W x 46"H
Color	Dark Gray
Material	Upholstered Fabric, Solid Wood Slats, Metal Frame

Special Features	20W Fast Charging Type-C & USB Ports, 2 AC Outlets, 4 Storage Drawers, Wingback Headboard, Noise-Free Design
Assembly Required	Yes (Approx. 40 mins)
Item Weight	99 pounds
Recommended Mattress Height	8" - 14"

10. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact iPormis customer support directly. If you encounter any issues or have questions regarding your bed frame, please visit the [iPormis Store on Amazon](#) or contact their customer service for assistance.

