

[Manuals.plus](#) /

> [iPormis](#) /

> iPormis Full Bed Frame Instruction Manual with Wingback and Charging Station

iPormis B0C996MYXD

iPormis Full Bed Frame Instruction Manual

MODEL: B0C996MYXD

Upholstered Platform Bed with Wingback, Charging Station, and Storage Headboard

Important Safety Information

- Always follow the assembly instructions carefully to prevent instability or collapse.
- Be cautious of sharp edges on the wingback headboard and button design during assembly and use.
- Do not exceed the maximum weight capacity of **1000 lbs**.
- Ensure all connections are securely tightened before use. Periodically check and retighten fasteners as needed.
- Keep small parts away from children during assembly.

Product Overview

The iPormis Full Bed Frame is designed for comfort and convenience, featuring a 16-inch wingback headboard with button tufting and rivet accents. It includes an integrated charging station and a storage shelf for personal items. The frame is constructed with solid wood slats and a heavy-duty metal frame for robust support, eliminating the need for a box spring. EVA foam and Velcro are incorporated to minimize noise.



Image: iPormis Full Bed Frame in Beige, showcasing the wingback headboard, charging station, and overall design.

Package Contents

Before beginning assembly, verify that all components listed below are present and undamaged. All assembly tools and hardware are packaged within the box.

- Headboard (with integrated charging station and storage shelf)
- Side Rails (Left and Right)
- Footboard
- Support Legs (9 total)
- Wooden Slats (12 total)
- Center Support Beam
- Hardware Pack (screws, bolts, washers, Allen wrench)
- Assembly Instructions Manual



Modern & Chic Wing



High-Quality Frame



Heavy Duty Feet

Image: Visual representation of the main components of the bed frame, including the headboard, frame parts, and support legs.

Assembly Instructions

Before You Begin

- Clear a spacious area for assembly.
- It is recommended that two people assemble the bed frame for ease and safety.
- Unpack all components and verify against the package contents list.
- Keep the included Allen wrench and other tools handy.

Step-by-Step Assembly

1. **Attach Side Rails to Headboard:** Connect the left and right side rails to the headboard using the provided bolts and Allen wrench. Do not fully tighten bolts until all major components are connected.
2. **Attach Side Rails to Footboard:** Connect the other ends of the side rails to the footboard. Ensure proper alignment before tightening.
3. **Install Center Support Beam:** Secure the center support beam to the designated points on the headboard and

footboard, or to the side rails as per the specific diagram in your manual.

4. **Attach Support Legs:** Screw the 9 support legs into their respective positions on the frame and center beam.
5. **Install Wooden Slats:** Lay the 12 wooden slats across the frame. The slats feature a Velcro design for quick setup and to hold them tightly in place. Ensure the EVA foam side of the slats faces upwards to prevent noise and friction.

FULL SIZE



Charging Station



Weight Capacity



30 Mins Assembly

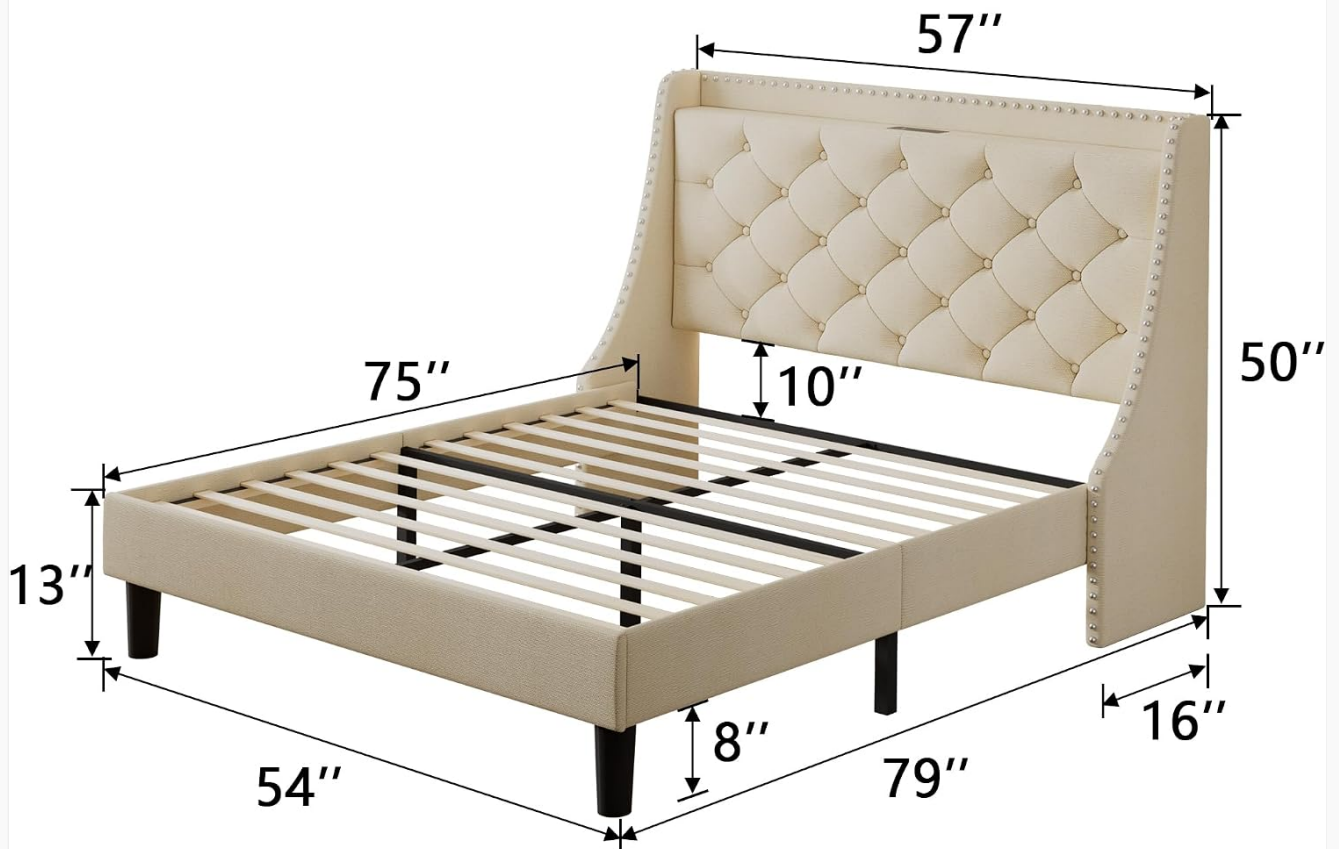


Image: Diagram illustrating the dimensions of the iPormis Full Bed Frame, useful for understanding component placement during assembly.





VELCRO DESIGN

Quick Setup & Hold Tightly

EVA FOAM

Noise Free & Anti Friction

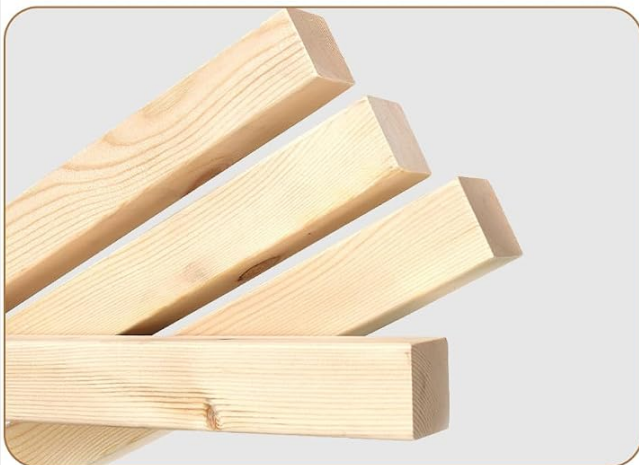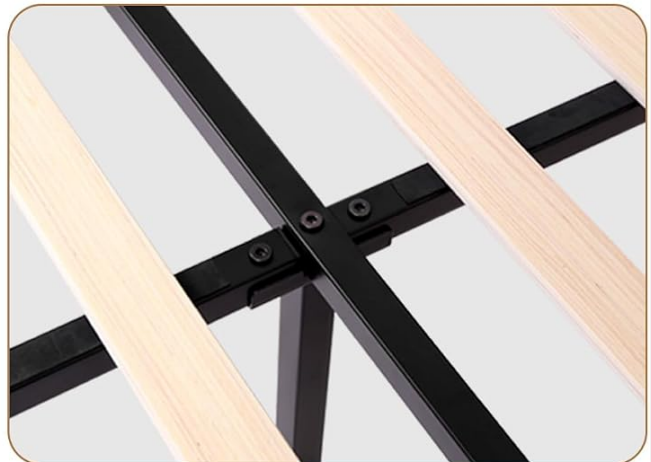

WOOD SLATS

Well Built & Eco-friendly

Image: Close-up view of the wooden slats, highlighting the Velcro design for secure placement and EVA foam for noise reduction.

Post-Assembly Check

- Once all components are assembled, go back and fully tighten all bolts and screws.
- Gently shake the frame to ensure it is stable and does not wobble.
- Confirm that all slats are evenly spaced and securely attached.

Operating Instructions

Charging Station Usage

The integrated headboard features a convenient charging station to power your electronic devices.

- The charging station includes **two 110V/12A AC outlets**, **one Type-C port**, and **one USB port**.
- Plug the bed frame's power cord (approximately 6.6 feet long) into a standard wall outlet.
- Connect your devices to the appropriate ports on the headboard for charging.
- The 4-inch wide storage shelf provides a convenient space to place your phone, tablet, or other small items while

they charge.

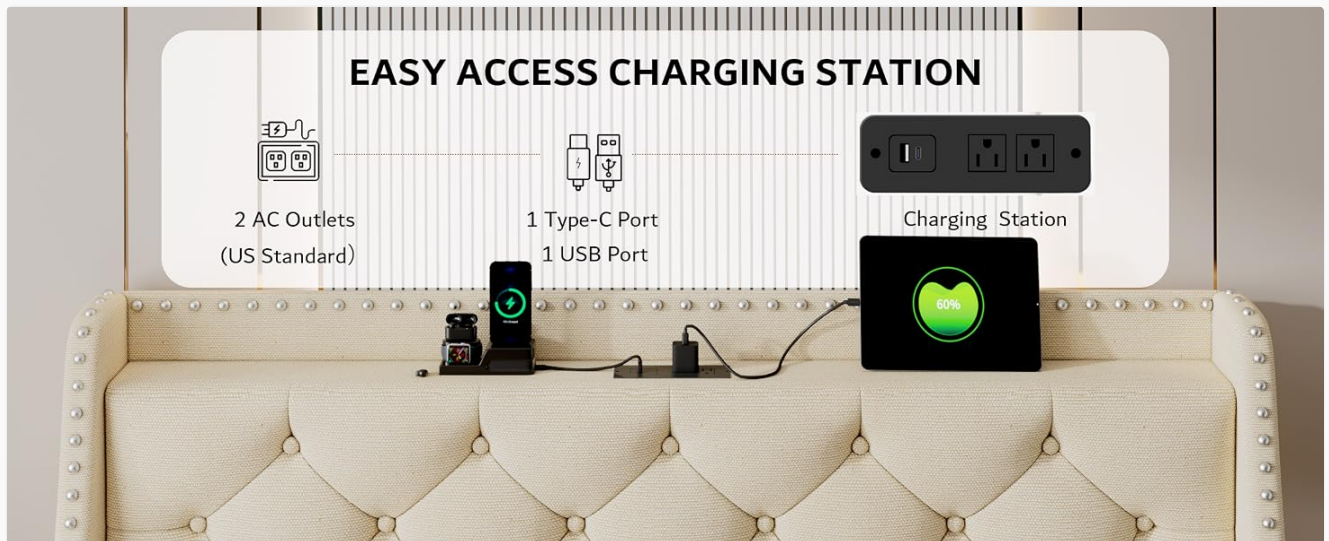


Image: Close-up view of the headboard's charging station, showing the AC outlets, USB, and Type-C ports.

Under-Bed Storage

The bed frame provides **8 inches of clearance** underneath, offering ample space for storage.

- Utilize this space for storing boxes, luggage, or other items to keep your room tidy.
- The clearance also facilitates easy cleaning under the bed.



Image: Illustration of the 8-inch under-bed clearance, demonstrating its suitability for storage.

Maintenance

To maintain the appearance and longevity of your iPormis bed frame, follow these care instructions:

- For general cleaning, wipe the upholstered surfaces with **adamp cloth**.
- Immediately follow with a **dry cloth** to prevent moisture damage.
- Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these may damage the fabric or finish.
- Periodically check all bolts and screws and retighten them to ensure the frame remains stable and secure.

Troubleshooting

Issue	Possible Cause	Solution
-------	----------------	----------

Issue	Possible Cause	Solution
Bed frame is noisy or squeaks.	Loose connections; slats shifting; lack of friction dampening.	Ensure all bolts and screws are fully tightened. Verify that the wooden slats are properly seated and the EVA foam is correctly positioned to prevent friction.
Difficulty aligning parts during assembly.	Components are not oriented correctly; manufacturing tolerance variations.	Double-check the instruction manual diagrams for correct part orientation. Do not fully tighten any bolts until all major components are loosely connected. If parts remain misaligned, contact customer support.
Charging station not working.	Power cord not plugged in; faulty outlet; damaged charging unit.	Ensure the bed frame's power cord is securely plugged into a functional wall outlet. Test the wall outlet with another device. If the issue persists, contact customer support.
Bed frame feels unstable.	Loose fasteners; uneven floor; missing support legs.	Retighten all bolts and screws. Ensure all 9 support legs are installed and making firm contact with the floor. If your floor is uneven, consider using furniture pads or shims under the legs.

Specifications

Feature	Detail
Size	Full
Product Dimensions (L x W x H)	79" x 57" x 50"
Headboard Height	50"
Wingback Width	16"
Top Storage Ledge Width	4"
Under-Bed Space	8"
Weight Capacity	1000 lbs
Charging Ports	2x 110V/12A AC Outlets, 1x Type-C Port, 1x USB Port
Power Cord Length	6.6 Feet
Frame Material	Heavy-Duty Metal, Solid Wood Slats
Upholstery Material	Soft and Breathable Fabric
Color	Beige
Assembly Required	Yes
Special Features	Button Tufted Headboard, Squeak Resistant, Noise-Free, No Box Spring Needed

Warranty Information

iPormis products are manufactured with quality and durability in mind. For specific warranty terms and conditions applicable to your bed frame, please refer to the warranty card included in your product packaging. If no specific warranty information is provided, please contact iPormis customer support for details regarding coverage and claims.

Customer Support

Should you have any questions, require assistance with assembly, or encounter any issues with your iPormis Full Bed Frame, please do not hesitate to contact our customer support team.

- **Online Support:** Visit the official iPormis brand store on Amazon for FAQs and contact options.[iPormis Store](#)
- **Email Support:** Refer to your product packaging for a direct customer service email address.
- When contacting support, please have your model number (B0C996MYXD) and purchase date readily available.

