

[Manuals.plus](#) /

› [iPormis](#) /

› iPormis Queen Bed Frame User Manual

iPormis B0C998DW3L

iPormis Queen Bed Frame User Manual

Model: B0C998DW3L

Brand: iPormis

PRODUCT OVERVIEW

The iPormis Queen Bed Frame is designed for comfort and convenience, featuring a stylish 16-inch wingback headboard with button tufting and rivet accents. It includes an integrated charging station and a practical storage shelf, providing a modern and functional solution for your bedroom.

Constructed with solid wood slats and a heavy-duty frame, this platform bed offers robust support without the need for a box spring, ensuring a stable and noise-free sleeping experience.



Figure 1: Overall view of the iPormis Queen Bed Frame in light grey, showcasing its wingback headboard and integrated features.

SAFETY INFORMATION

Please read and understand all safety warnings before assembly and use. Failure to follow these instructions may result in injury or product damage.

- Always follow the assembly instructions carefully to prevent instability or collapse.
- Be cautious around sharp edges, especially the 16-inch wingback headboard and button design with rivet jewelry.
- Do not exceed the maximum weight recommendation of 1000 lbs (approximately 453 kg).
- Ensure all connections are securely tightened before use and periodically check for looseness.
- Keep small parts away from children during assembly to prevent choking hazards.

SETUP AND ASSEMBLY

The iPormis Queen Bed Frame is designed for easy assembly, typically completed within 30 minutes with the provided tools and clear instructions. All necessary parts are labeled and packaged in one box.

Before You Begin:

- Unpack all components and verify against the parts list in your included manual.

- Ensure you have sufficient space for assembly.
- It is recommended to have two people for assembly to ensure stability and ease of handling larger components.

Assembly Steps (General Guide):

1. Attach the side rails to the headboard and footboard using the provided hardware.
2. Install the central support beam and its legs.
3. Lay out the wooden slats across the frame. The slats feature a velcro design for quick setup and secure holding, and EVA foam to prevent noise.
4. Secure the slats to the frame as per the instructions.
5. Connect the charging station unit to the designated slot on the headboard and plug it into a wall outlet.
6. Place your mattress on the assembled frame.



Figure 2: Visual guide illustrating the simplified assembly process of the bed frame.



Figure 3: Close-up view of the wooden slats, highlighting the velcro and EVA foam features designed for noise reduction and secure fit.

OPERATING INSTRUCTIONS

Charging Station:

The integrated charging station is located on the top storage ledge of the headboard. It features 2 AC outlets (US Standard), 1 Type-C port, and 1 USB port, allowing convenient charging of your electronic devices such as phones and tablets.

- Ensure the bed frame's power cord (6.6 feet long) is securely plugged into a functional wall outlet.
- Insert your device's charging cable into the appropriate USB, Type-C, or AC outlet.
- The charging station is designed for easy access and keeps your devices within reach while you relax.




Figure 4: Detailed view of the headboard's charging station, showing the AC outlets, USB, and Type-C ports.

Storage Shelf:

The headboard also features a 4-inch wide storage ledge, ideal for placing small items like glasses, phones, or books, keeping your essentials organized and easily accessible.

Under-Bed Storage:

The bed frame provides 8 inches of clearance underneath, offering ample space for storing boxes, luggage, or for easy vacuum cleaning.

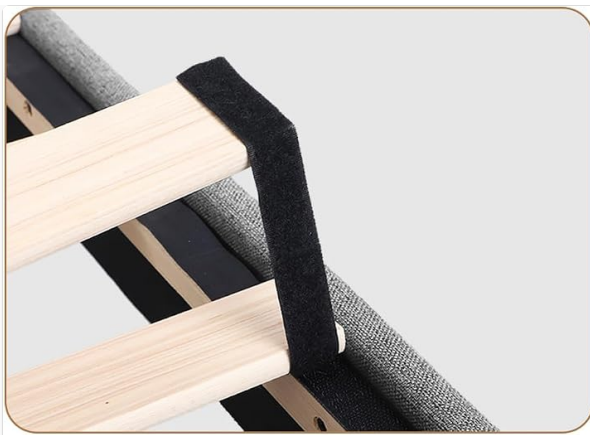


VELCRO DESIGN

Quick Setup & Hold Tightly

EVA FOAM

Noise Free & Anti Friction

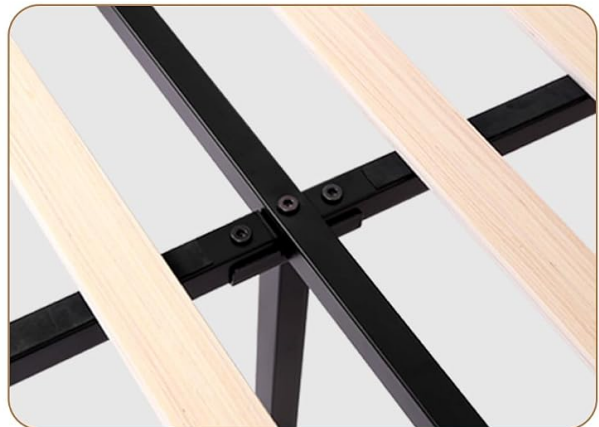

WOOD SLATS

Well Built & Eco-friendly

Figure 5: Illustration of the 8-inch under-bed clearance, demonstrating space for storage or cleaning.

MAINTENANCE

Proper care will extend the life and appearance of your iPormis bed frame.

- **Cleaning the Upholstery:** For general cleaning, wipe the upholstered surfaces with a dry cloth. For minor spills or stains, gently wipe with a damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these may damage the fabric.
- **Frame and Slats:** Periodically check all bolts and screws to ensure they remain tight. Re-tighten if necessary to maintain stability and prevent squeaking.
- **Charging Station:** Keep the charging ports free from dust and debris. Do not expose the charging station to liquids.

TROUBLESHOOTING

This section addresses common issues you might encounter with your bed frame.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Bed frame is wobbly or unstable.	Loose bolts or incorrect assembly.	Ensure all bolts are securely tightened. Review the assembly instructions to confirm all parts are correctly installed.
Squeaking noises from the bed.	Loose connections, friction between parts, or improperly placed slats.	Tighten all hardware. Verify that the wooden slats are properly seated and that the EVA foam is intact. Ensure the mattress is correctly positioned.
Charging station not working.	Power cord not plugged in, loose connection, or power outage.	Check if the power cord is fully plugged into a functional wall outlet. Ensure the charging unit is properly connected to the headboard. Test the wall outlet with another device.
Parts do not align during assembly.	Manufacturing defect or incorrect orientation of parts.	Double-check the part labels and orientation against the manual. If parts are clearly misaligned or defective, contact iPormis customer support for assistance.

SPECIFICATIONS

Feature	Detail
Brand	iPormis
Model	B0C998DW3L
Size	Queen
Color	Light Grey
Product Dimensions	84"L x 63"W x 50"H
Headboard Height	50 inches
Wingback Width	16 inches
Top Storage Ledge Width	4 inches
Under-Bed Clearance	8 inches
Weight Capacity	1000 lbs
Charging Ports	2 AC Outlets, 1 Type-C Port, 1 USB Port
Power Cord Length	6.6 feet
Material	Upholstered fabric, solid wood slats, heavy-duty metal frame
Assembly Required	Yes
Special Features	Wingback headboard, button tufted, rivet jewelry, charging station, storage ledge, noise-free (EVA foam & velcro), no box spring needed

QUEEN SIZE



Charging Station



Weight Capacity



30 Mins Assembly

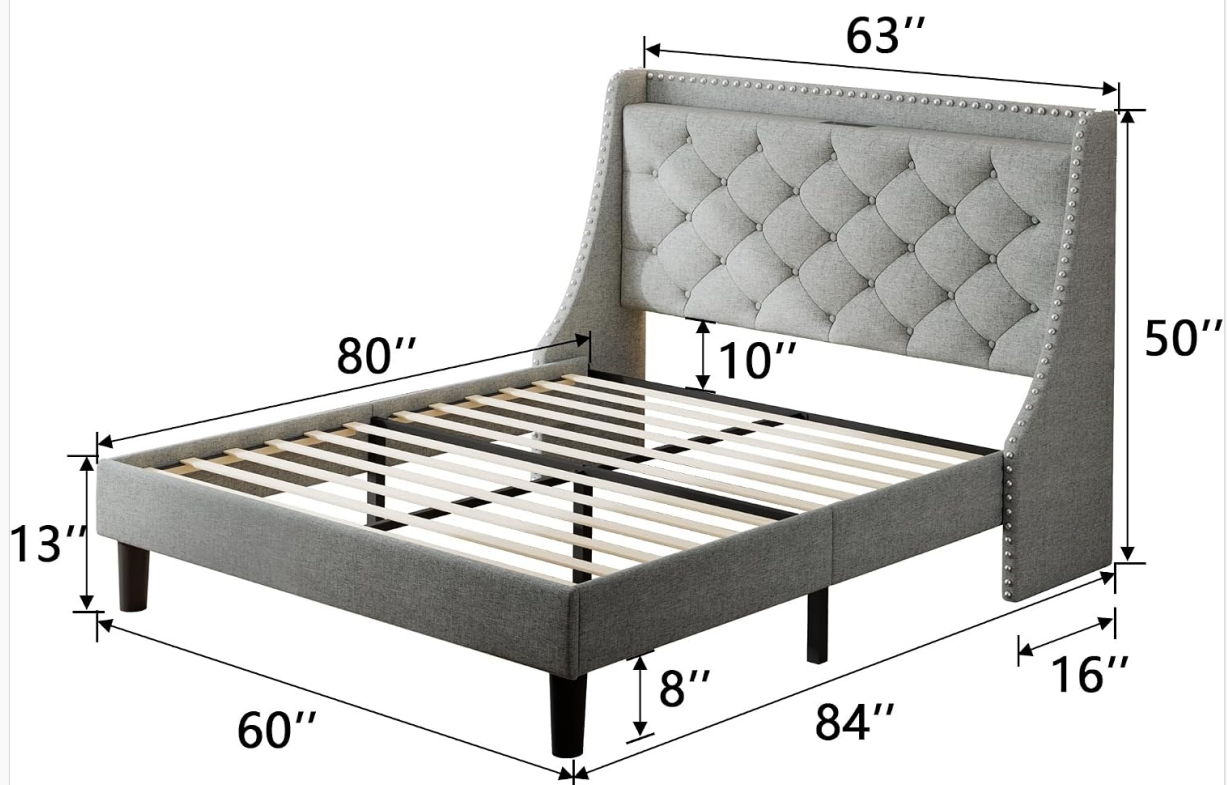


Figure 6: Detailed dimensions of the iPormis Queen Bed Frame.

WARRANTY AND SUPPORT

For any questions, concerns, or issues regarding your iPormis Queen Bed Frame, please contact iPormis customer support. While specific warranty details are not provided in this manual, please refer to your purchase documentation or contact the seller directly for warranty information and service requests.

You can typically find contact information for iPormis on their official website or through the retailer where you purchased the product.

For online purchases, you may also reach out to the seller "Ipormis" via the platform's messaging system for assistance.