

JUBEST KDA03N

JUBEST 36in x 84in Glass Sliding Barn Door (Model KDA03N) Instruction Manual

Brand: JUBEST | Model: KDA03N | Dimensions: 36in x 84in

1. INTRODUCTION

This manual provides detailed instructions for the assembly, installation, operation, and maintenance of your JUBEST 36in x 84in Glass Sliding Barn Door, Model KDA03N. This product features a 3-panel black aluminum frame with clear tempered glass, designed for modern interior spaces. Please read all instructions carefully before proceeding with assembly and installation.



A JUBEST 36x84 inch glass sliding barn door installed in a modern interior, separating a dining area from another room. The door features a black aluminum frame with three clear tempered glass panels.



An image highlighting key features of the JUBEST glass barn door: high-quality metal construction, easy installation, wide applicability, and clear tempered glass.

2. IMPORTANT SAFETY INFORMATION

- Always handle glass panels with extreme care to prevent breakage and potential injury.
- Wear appropriate safety gear, including gloves and eye protection, during all stages of assembly and installation.
- Ensure the installation surface (wall) is structurally sound and capable of safely supporting the combined weight of the door and the sliding hardware system.
- This door panel requires a separate sliding hardware kit for installation. Ensure the hardware kit is compatible and installed strictly according to its specific instructions.
- Assembly and installation should ideally be performed by two or more individuals due to the size and weight of the door panels.
- Keep children and pets away from the work area during installation to prevent accidents.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, please contact JUBEST customer service for assistance.

- 3-Panel Glass Door Sections (pre-drilled for assembly)
- Assembly Screws and Fasteners
- Adjustable Floor Guide
- Installation Instructions (this document)

Note: The sliding barn door hardware kit (track, rollers, hangers, etc.) is sold separately and is not included with this door panel. You must acquire a compatible hardware kit for full installation.

4. SETUP AND INSTALLATION

This section outlines the assembly of the door panel itself. For instructions on installing the sliding track and hangers, please refer to the separate manual provided with your sliding hardware kit.

Step 1: Unpack and Inspect


Carefully unpack all components from the packaging. Inspect the glass panels and aluminum frames for any signs of damage, scratches, or defects. Report any issues to customer service before proceeding.

Step 2: Assemble Door Panels

The door consists of three main sections. Carefully align the pre-drilled holes on each section and secure them together using the provided assembly screws and fasteners. A power drill equipped with an appropriate Allen key bit is recommended to expedite this process. Ensure all connections are tight and secure.

EASY TO INSTALL

completed within 10 minutes

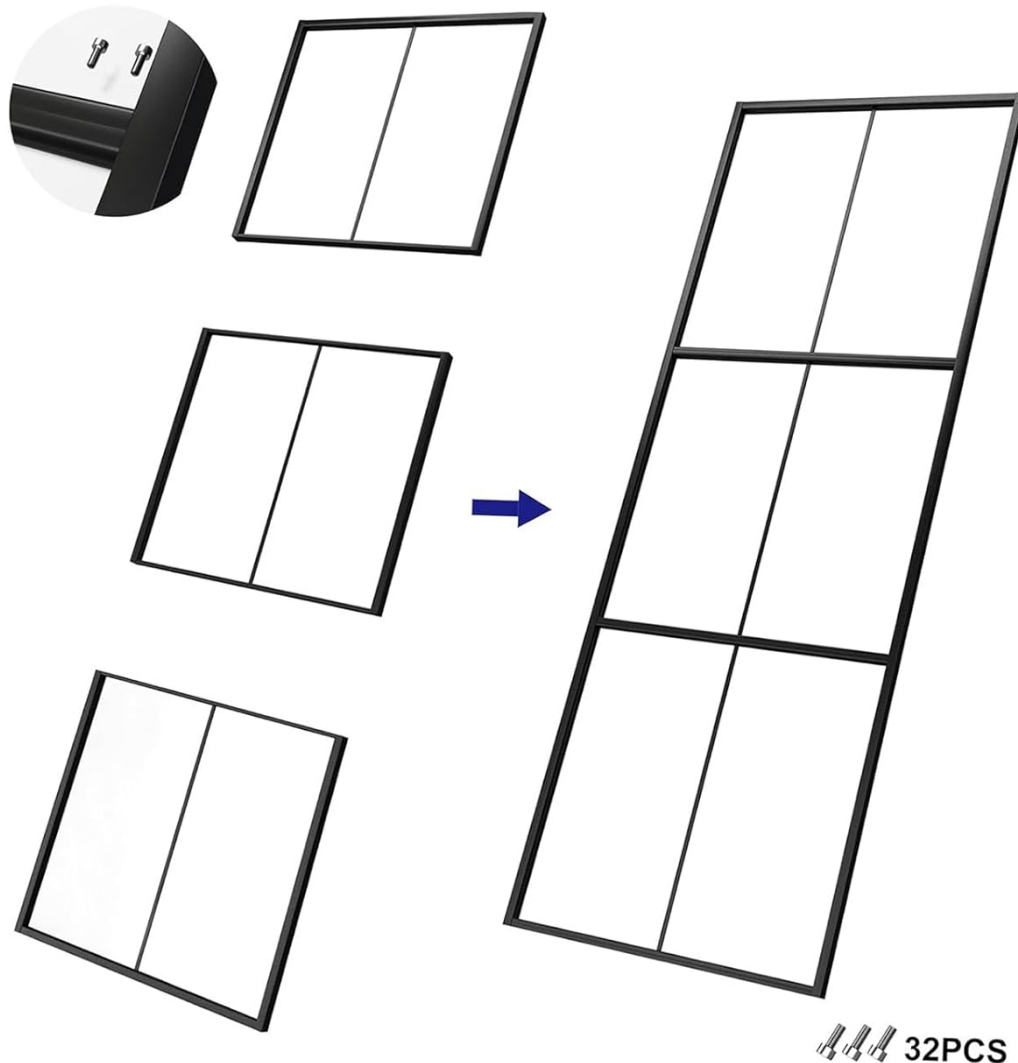

A visual guide showing the three main sections of the JUBEST glass barn door being assembled into a single unit using screws. This illustrates the modular design for easier installation.

Step 3: Install Floor Guide

Attach the adjustable floor guide to the bottom edge of the assembled door panel. This guide is crucial for stabilizing the door and ensuring smooth, controlled movement during operation. Follow the specific instructions for the floor guide's placement and secure it firmly.

Step 4: Attach to Sliding Hardware (Not Included)

Once the door panel is fully assembled, attach it to your compatible sliding barn door hardware kit. This typically involves mounting hangers to the top of the door and then placing the hangers onto the installed track. Follow the specific instructions provided with your hardware kit for proper mounting, alignment, and adjustment. Ensure the door hangs level and slides smoothly along the track without binding.

5. OPERATING INSTRUCTIONS

To open the door, gently push or pull the door panel along the track until it reaches the desired open position. To close, slide the door back until it fully covers the opening. Always operate the door with a smooth, controlled motion.

Avoid forcing the door or allowing it to slam against the wall or door frame, as this can cause damage to the door, hardware, or surrounding structure.

6. MAINTENANCE

Cleaning the Glass Panels

Use a soft, lint-free cloth and a non-abrasive glass cleaner to clean the clear tempered glass panels. Spray the cleaner onto the cloth first, then wipe the glass. Avoid spraying cleaner directly onto the frame or hardware. Do not use harsh chemicals, abrasive pads, or sharp objects that could scratch the glass or damage the frame finish.



A close-up image showcasing the clear tempered glass of the JUBEST barn door, emphasizing its high hardness, anti-scratch, and wear-resistant properties.

Cleaning the Aluminum Frame

Wipe the black aluminum frame with a soft, damp cloth. For more stubborn marks or grime, a mild soap solution can be used, followed by thoroughly drying with a clean, soft cloth to prevent water spots.

Hardware Maintenance

Periodically check the sliding hardware (track, rollers, hangers, and floor guide) for any loose screws or components. Tighten them as necessary, but do not overtighten. Lubricate the track and rollers as recommended by the hardware kit manufacturer to ensure continued smooth and quiet operation.

7. TROUBLESHOOTING

Door Does Not Slide Smoothly

- Check the sliding track for any obstructions, debris, or dirt that might impede movement. Clean the track thoroughly.
- Ensure the rollers are properly seated on the track and are not misaligned.
- Verify that the track itself is level and securely mounted to the wall. An unlevel track can cause binding.
- Lubricate the rollers and track if necessary, following the recommendations in your hardware kit instructions.

Door is Difficult to Open/Close


- Inspect the floor guide for proper alignment and ensure it is not causing excessive friction with the bottom of the door. Adjust if needed.
- Check for any instances where the door panel might be rubbing against the wall or door frame. Adjust door stops or track position if possible.

Loose Components

- Periodically check all assembly screws and fasteners on the door panel and tighten them if they have become loose. Do not overtighten, as this can strip threads or damage the frame.

8. PRODUCT SPECIFICATIONS

SLIDING DOOR SIZE CHART

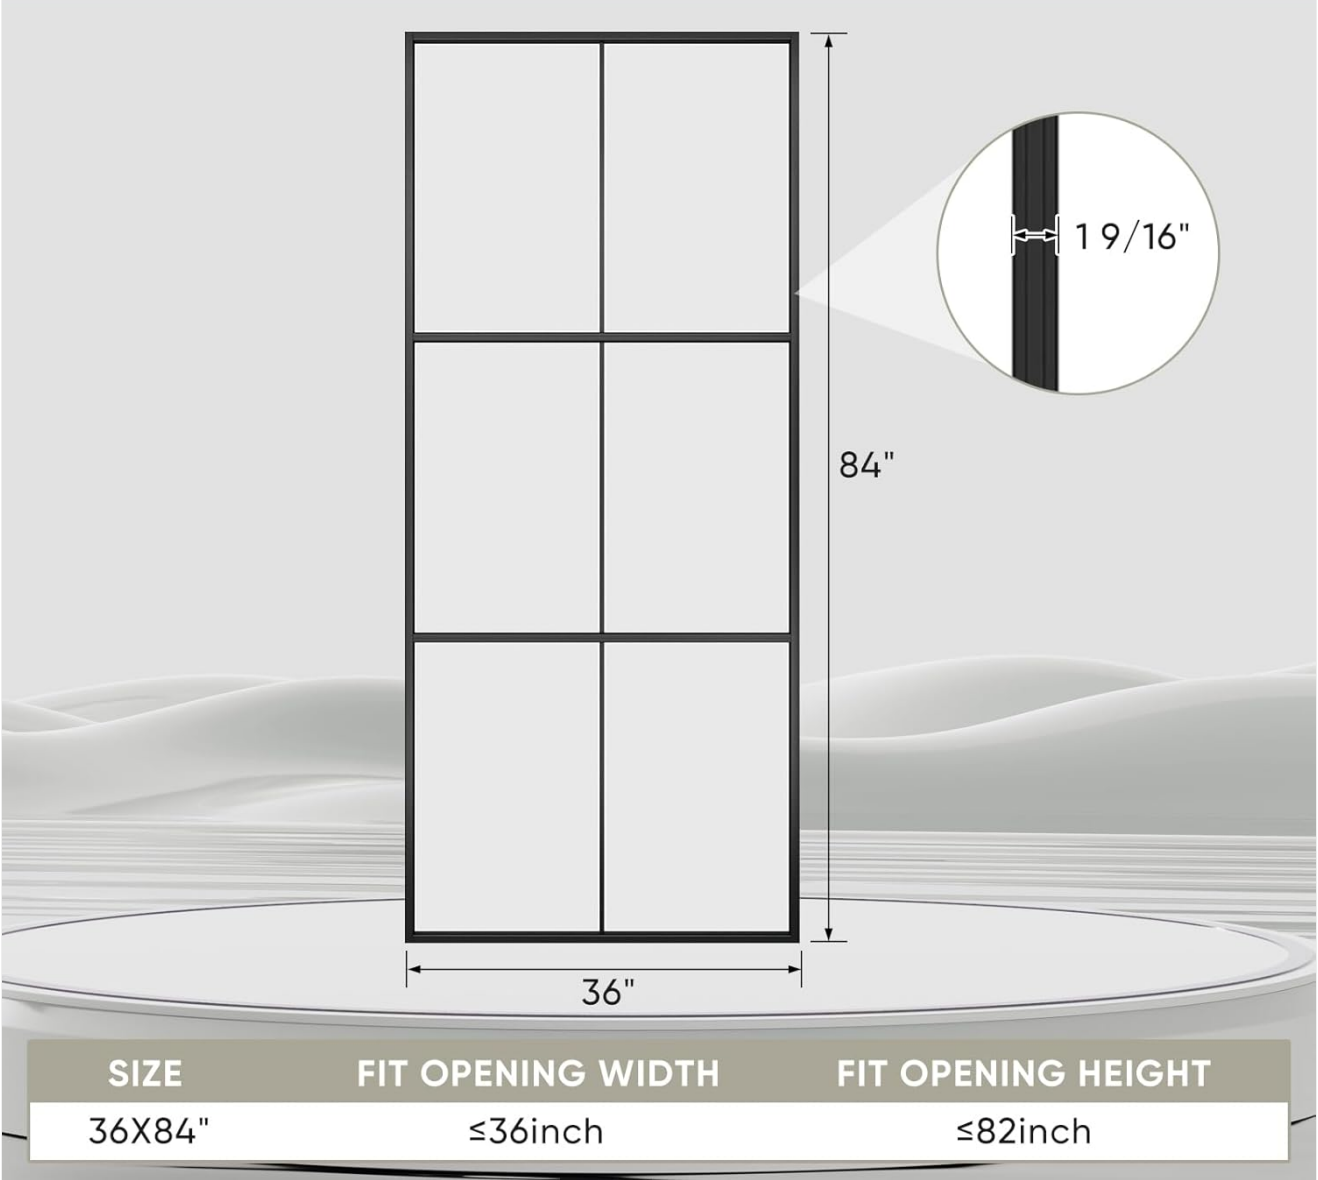


A detailed size chart for the JUBEST 36x84 inch glass sliding barn door, indicating the door's dimensions (36 inches wide, 84 inches high) and the recommended fit for opening widths (≤36 inches) and heights (≤82 inches).

Feature	Detail
Brand	JUBEST
Model	KDA03N
Dimensions (Door Panel)	36 inches (Width) x 84 inches (Height)
Product Dimensions (Overall)	1.37 x 36 x 84 inches
Material	Aluminum Frame, Tempered Glass
Color	Black Frame, Clear Glass
Style	Modern

Item Weight	46.7 Pounds
Assembly Required	Yes
Number of Panels	3-Panel Design

UNIQUE DESIGN

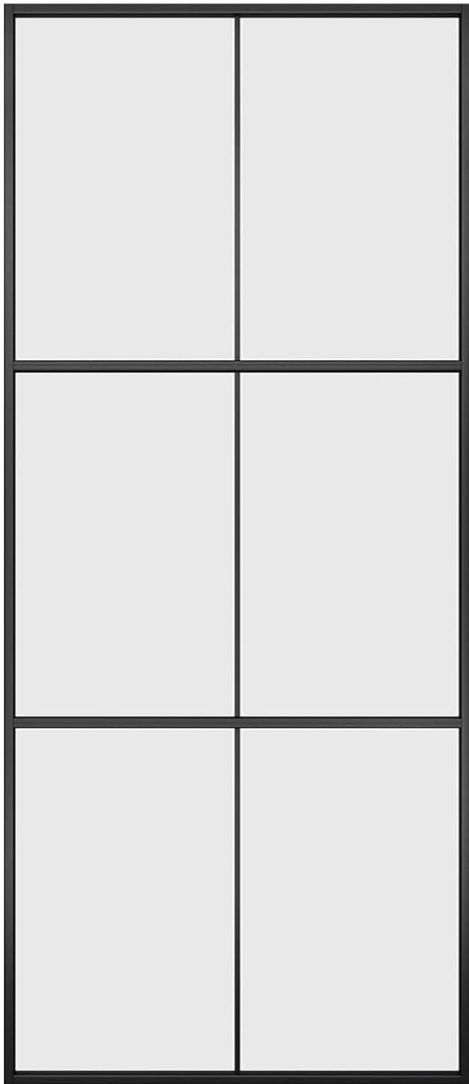

Aluminum Frame Panels



Solid Construction



Adjustable Floor Guide




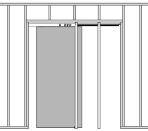
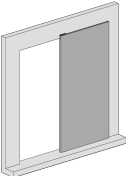
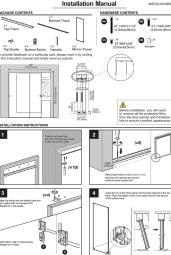
An image detailing the unique design elements of the JUBEST glass barn door, including the aluminum frame panels, solid construction, and an adjustable floor guide.

9. WARRANTY AND CUSTOMER SUPPORT

JUBEST is committed to providing high-quality products and excellent customer service. For any quality issues, missing parts, or assistance with installation, please do not hesitate to contact our professional customer service team.

Our customer service team is available to assist you with any inquiries or concerns regarding your JUBEST product. Please refer to your purchase documentation or the JUBEST official website for specific warranty details and contact information.

Related Documents - KDA03N

<div><div>Installation Manual</div><div>Any questions please contact us info@jubest.com</div><div></div></div>	<p>JUBEST MYSD1P-36x84IN Sliding Barn Door Installation Manual</p> <p>Comprehensive installation guide for the JUBEST MYSD1P-36x84IN sliding barn door hardware kit, including tools required, hardware list, and step-by-step assembly instructions.</p>
<div><div>WF-TSQ14BK-6FT+TKM02-F</div><div>WF-TSQ14BK-6FT+TKM02-F</div><div><div>Kit Components</div><div></div><div><div>Tools Required</div><div></div></div><div><div>IMPORTANT NOTES</div><div><p>1. Please read the instructions carefully before installation.</p><p>2. The door must be installed on a level surface.</p><p>3. The door must be installed on a wall that is at least 1/2 inch thick.</p><p>4. The door must be installed on a wall that is made of wood or drywall.</p><p>5. The door must be installed on a wall that is not painted or covered with wallpaper.</p><p>6. The door must be installed on a wall that is not made of brick or concrete.</p><p>7. The door must be installed on a wall that is not made of stone or masonry.</p><p>8. The door must be installed on a wall that is not made of metal.</p><p>9. The door must be installed on a wall that is not made of glass.</p><p>10. The door must be installed on a wall that is not made of plastic.</p><p>11. The door must be installed on a wall that is not made of fabric.</p><p>12. The door must be installed on a wall that is not made of paper.</p><p>13. The door must be installed on a wall that is not made of cardboard.</p><p>14. The door must be installed on a wall that is not made of foam.</p><p>15. The door must be installed on a wall that is not made of insulation.</p><p>16. The door must be installed on a wall that is not made of anything else.</p></div></div></div></div>	<p>Barn Door Hardware Kit Installation Guide - WF-TSQ14BK-6FT+TKM02-F</p> <p>Detailed installation guide for the WF-TSQ14BK-6FT+TKM02-F Barn Door Hardware Kit by JuBest, covering component identification, tools required, and step-by-step instructions for concrete and drywall installation.</p>
<div><div>Installation Manual</div><div>TSQALW03</div><div></div></div>	<p>JUBEST TSQALW03-W34 Sliding Pocket Door Frame Kit Installation Manual</p> <p>Detailed installation guide for the JUBEST TSQALW03-W34 sliding pocket door frame kit, including component lists, pre-installation steps, cutting instructions, and assembly procedures.</p>
<div><div>Installation Manual</div><div>TSQAL22</div><div></div></div>	<p>TSQAL22-38IN Concealed Barn Door Hardware Installation Manual</p> <p>Detailed installation guide for the JUBEST TSQAL22-38IN concealed barn door hardware kit, featuring a soft close mechanism and wall-mounted invisible sliding track. Includes component lists, preparation steps, and assembly instructions for 42-inch doors.</p>
<div><div>Installation Manual</div><div>MSD03</div><div></div></div>	<p>JUBEST MSD03-60x80IN Sliding Mirror Closet Door Installation Manual</p> <p>Comprehensive installation manual for the JUBEST MSD03-60x80IN sliding mirror closet door system. Includes package contents, hardware details, step-by-step assembly instructions, and care guidelines.</p>

MYSD2P-36x84IN+MYSD2P-36x84IN-HD

INSTALLATION GUIDE

Main Components

To provide feedback on a particular part, please email it by writing to the installation manual and verify email on a phone.

Tools Required

IMPORTANT BEFORE YOU BEGIN

IF INSTALLING DIRECTLY INTO A NON-CONCRETE WALL, DO NOT ATTEMPT TO INSTALL THE RAIL SOLELY TO THE CEMENT WALL OR ANY WALL SURFACE AS THIS MAY NOT SUPPORT THE WEIGHT OF THE RAIL AND MOUNTED DOOR. THE RAIL MUST BE PROPERLY SECURED INTO A SOLID WOOD BLOCKING PACKAGE NOT PROTECTED BY A SHIELDING SURFACE PACKAGE NOT INCLUDED. ENSURE THE SOLID WOOD BLOCKING IS SECURED INTO THE STRUCTURAL SURFACE. USE A 1/2" DRILL BIT WHEN NECESSARY TO LOCATE STUDS AND SECURE SAFELY. TYPICAL SOLID WOOD BLOCKING SHOULD BE 3 1/4" x 8" x 4".

NOTE: SEPARATE BLOCK TRANSPORTED FOR 1/2" DOORS AND LONGER BOLT PROVIDED FOR 1/2" DOORS. IF NOT AVAILABLE, THEN INTERNAL DOOR MOUNTED DOOR GUIDE. THE DOOR MUST BE MOUNTED 1/4" WIDER OF DEEP CENTRALLY.

[JUBEST MYSD2P-36x84IN+MYSD2P-36x84IN-HD Barn Door Hardware Kit Installation Guide](#)

Detailed installation guide for the JUBEST MYSD2P-36x84IN+MYSD2P-36x84IN-HD Barn Door Hardware Kit, covering component identification, tools required, and step-by-step assembly instructions for various wall types.

Documents - JUBEST – KDA03N

TSQ22BK-6FT+Bracket01-MBKx5

+KDA03N-36INCH-C

INSTALLATION GUIDE

Main Components

To provide feedback on a particular part, please email it by writing to the installation manual and verify email on a phone.


Tools Required

IMPORTANT BEFORE YOU BEGIN

IF INSTALLING DIRECTLY INTO A NON-CONCRETE WALL, DO NOT ATTEMPT TO INSTALL THE RAIL SOLELY TO THE CEMENT WALL OR ANY WALL SURFACE AS THIS MAY NOT SUPPORT THE WEIGHT OF THE RAIL AND MOUNTED DOOR. THE RAIL MUST BE PROPERLY SECURED INTO A SOLID WOOD BLOCKING PACKAGE NOT PROTECTED BY A SHIELDING SURFACE PACKAGE NOT INCLUDED. ENSURE THE SOLID WOOD BLOCKING IS SECURED INTO THE STRUCTURAL SURFACE. USE A 1/2" DRILL BIT WHEN NECESSARY TO LOCATE STUDS AND SECURE SAFELY. TYPICAL SOLID WOOD BLOCKING SHOULD BE 3 1/4" x 8" x 4".

NOTE: SEPARATE BLOCK TRANSPORTED FOR 1/2" DOORS AND LONGER BOLT PROVIDED FOR 1/2" DOORS. IF NOT AVAILABLE, THEN INTERNAL DOOR MOUNTED DOOR GUIDE. THE DOOR MUST BE MOUNTED 1/4" WIDER OF DEEP CENTRALLY.

[\[pdf\]](#) Guide

Installation Assembly Glass Bypass Barn Door With Hardware Kit JUBEST jest1100 WF KDA03x2
BPJUBEST BPkda03n 36in bpsecure ag wfc dn dm document fd01ded7 365b 48a9 8b12
9ca7d72023f6 kda03n bp |||
x2 Rail x4 Roller Hanger Aluminum frame door screw x8 M6x12mm 15/64 x15/32 x4
Anti-jump Block x4 M4x6mm 5/32 x15/64 x1 Right Stopper x1 Left Stopper x5 Wall
Spacer x5 Washers x5 x10 8mmx60mm 5/16 x2 23/64 Wall Screw x5 8mmx60mm
5/16 x2 23/64 x4 4.2mm x 25mm 3/16 x 1 Floor Scre...
lang:en score:13 filesize: 12.4 M page_count: 7 document date: 2024-09-09