Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- BRAKE /
- > BRAKE Chrome Plated Mirror Covers for 17 Profia and Air Loop Profia Trucks

BRAKE 10005888-INF2956

Instruction Manual: Chrome Plated Mirror Covers

Brand: BRAKE | Model: 10005888-INF2956

1. PRODUCT OVERVIEW

This manual provides essential information for the installation and maintenance of your BRAKE Chrome Plated Mirror Covers, designed specifically for 17 Profia and Air Loop Profia trucks equipped with left and right heated side under mirrors. These covers enhance the aesthetic appeal of your vehicle with their high-quality chrome finish.



Image 1.1: Overview of the BRAKE Chrome Plated Mirror Covers. This image displays the full set of mirror covers, showcasing their reflective chrome finish and various shapes designed for different parts of the truck's side mirrors.

2. PRODUCT FEATURES

- **Premium Chrome Finish:** Crafted from ABS resin and treated with a double chrome plating process, these covers offer a brilliant, glossy finish that adds a luxurious touch to your truck.
- **Dedicated Design:** Engineered with precision to ensure a perfect fit and maintain the original design integrity of your truck's mirrors, including beautifully curved surfaces even at the corners.
- **Heated Mirror Compatibility:** Designed to be compatible with both left and right heated side under mirrors, ensuring full functionality is retained.



Image 2.1: Close-up of the chrome finish. This image highlights the high-quality, reflective chrome plating on the mirror covers, emphasizing its elegant and glossy appearance.

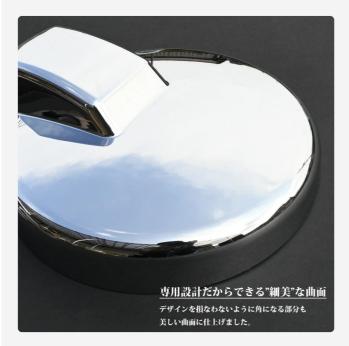


Image 2.2: Detail of the curved design. This image showcases the intricate and smooth curved surfaces of the mirror covers, demonstrating the dedicated design that ensures a seamless fit without compromising aesthetics.

3. COMPATIBILITY

These mirror covers are designed for the following truck models:

- Air Loop Profia: September 2010 April 2017 models.
- 17 Profia: May 2017 onwards models.

Important Note: These covers are specifically for vehicles equipped withheated side under mirrors. Both left and right side under mirrors must have heating functionality for proper compatibility.



適合車種

エアループプロフィア(平成22年9月~平成29年4月) 17プロフィア(平成29年5~)

> ※ヒーター付サイドアンダーミラー車 ※サイドアンダー左右ともヒーター付仕様です

> > 材質:ABS樹脂

- ※適合は2023年6月現在のものです。モデルチェンジ等により適合に変更が生じる場合が ございます。
- ※輸入品のためバリや小傷等はご了承ください。※取付説明書は付属しておりません。

Image 3.1: Compatibility and Material. This image provides a visual summary of the compatible truck models and the ABS resin material used for the mirror covers. It also reiterates the requirement for heated side under mirrors.

4. PACKAGE CONTENTS

The package includes:

- BRAKE Chrome Plated Mirror Covers (Full Set)
- Pre-applied double-sided adhesive tape

5. Installation Guide

Follow these steps for proper installation:

- 1. **Prepare the Surface:** Thoroughly clean the surface of your truck's existing mirrors where the covers will be applied. Ensure it is free of dust, dirt, grease, and wax. Use an alcohol wipe for best results and allow it to dry completely.
- 2. **Test Fit:** Before removing the adhesive backing, carefully place each cover onto its corresponding mirror to ensure a perfect fit and alignment.
- Apply Adhesive: While double-sided tape is pre-applied, it is highly recommended to add additional strong
 automotive-grade double-sided tape to the back of the covers to ensure secure attachment and prevent
 detachment over time.
- 4. **Remove Backing:** Peel off the protective film from the double-sided tape on the back of the cover.
- 5. **Attach Covers:** Carefully align the cover with the mirror and press firmly into place. Apply even pressure across the entire surface for at least 30 seconds.
- 6. **Curing Time:** Avoid washing the vehicle or exposing the installed covers to excessive moisture for at least 24-48 hours to allow the adhesive to fully cure.



Image 5.1: Adhesive Tape Application Area. This image shows the reverse side of the mirror covers, indicating the areas where double-sided adhesive tape is pre-applied. It visually supports the recommendation to add more tape for enhanced security.

6. SPECIFICATIONS

Feature	Detail
Model Number	10005888-INF2956
Material	ABS Resin
Finish	Chrome Plated
Compatibility	17 Profia (May 2017-), Air Loop Profia (Sept 2010 - April 2017) with heated side under mirrors



Image 6.1: Product Dimensions. This diagram illustrates the approximate inner dimensions of each individual mirror cover piece, providing precise measurements for fitment verification.

7. MAINTENANCE

To maintain the pristine condition of your chrome plated mirror covers:

- Regularly clean the covers with a soft cloth and mild, non-abrasive automotive cleaner.
- Avoid using harsh chemicals, abrasive pads, or high-pressure washers directly on the covers, as these can damage the chrome finish.
- Polish with a chrome-specific polish periodically to maintain shine and protect the surface.

8. TROUBLESHOOTING

Issue: Covers are not adhering securely.

- Ensure the surface was thoroughly cleaned and dry before installation. Any residue (dust, wax, oil) can prevent proper adhesion.
- · Verify that sufficient pressure was applied during installation.
- Consider adding additional high-strength automotive double-sided tape, as recommended in the installation guide, especially if the vehicle operates in harsh conditions or experiences frequent vibrations.
- Ensure installation was performed in a warm environment (above 15°C / 59°F) for optimal adhesive performance.

9. IMPORTANT NOTES

- Compatibility information is accurate as of June 2023. Please be aware that compatibility may change due to future model changes or updates by the vehicle manufacturer.
- As these are imported products, minor burrs or small scratches may occasionally be present. These are generally not visible once installed and do not affect product functionality.

10. WARRANTY AND SUPPORT

For any questions regarding product defects, installation issues, or general inquiries, please contact the seller or manufacturer directly through your purchase platform. Please retain your proof of purchase for any warranty claims.

© 2024 BRAKE. All rights reserved.

Related Documents - 10005888-INF2956



Husqvarna 572 XP/XPG Chainsaw Spare Parts List

Comprehensive spare parts list for Husqvarna 572 XP and 572 XPG chainsaws (2018-08), detailing components for chain brake, clutch, cylinder, crankshaft, muffler, carburetor, fuel tank, starter, and more.



Jonway YY150T-12 Parts Catalog and Diagrams

Comprehensive parts catalog for the Jonway YY150T-12 scooter, detailing components for exhaust, frame, wheels, brakes, engine, electrical systems, and accessories. Includes part numbers, descriptions, and textual representations of assembly diagrams.



BD Universal Remote Mount Vacuum Exhaust Brake Installation Manual

Installation, operation, and troubleshooting guide for the BD Universal Remote Mount Vacuum Exhaust Brake system, compatible with Dodge, Ford, and Chevrolet trucks. Includes part numbers, wiring diagrams, and calibration instructions.

BD Remote Mount Exhaust Brake Installation and Operation Manual for 2001-2004 GMC/Chevy Duramax LB7

Comprehensive installation and operation guide for the BD Remote Mount Exhaust Brake, designed for 2001-2004 GMC/Chevy Duramax LB7 trucks. Includes part numbers, installation steps, wiring diagrams, calibration, testing, and warranty information.



KTM 640 LC4 Supermoto Prestig EU 2006 Spare Parts Manual

Comprehensive spare parts manual for the KTM 640 LC4 Supermoto Prestig EU 2006, detailing components for chassis, front fork, rear wheel, and more with part numbers and descriptions.



2005 Nissan Titan Brake System Service Manual

Comprehensive guide detailing the inspection, removal, installation, and troubleshooting procedures for the brake system of the 2005 Nissan Titan. Covers components like the brake pedal, fluid, piping, master cylinder, booster, vacuum lines, front and rear disc brakes, and includes service data and specifications.