

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Novogratz](#) /

> [Novogratz Louis King Upholstered Bed Frame Instruction Manual](#)

Novogratz 4660349N

Novogratz Louis King Upholstered Bed Frame Instruction Manual

Model: 4660349N

IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before beginning assembly and use. Keep this manual for future reference.

- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Assembly should be performed by two adults.
- Place the bed frame on a soft, non-abrasive surface during assembly to prevent scratches.
- Do not overtighten screws or bolts. Hand-tighten until snug, then use the provided tool for final tightening.
- Regularly check all connections to ensure they remain tight.
- This bed frame is designed to support a maximum weight of 1000 lbs (including mattress).
- A box spring is not required for this platform bed frame.
- Compatible with all mattress types; a minimum 8-inch deep mattress is advised.

PACKAGE CONTENTS

Verify that all components listed below are included in your package. Tools and instructions are included in two boxes.

- Upholstered Headboard (High Tufted Wingback Design)
- Upholstered Side Panels
- Upholstered Footboard
- Metal Support Rails and Center Legs
- Preassembled Plywood Slats
- Hardware Pack (Screws, Bolts, Allen Wrench)
- 5-inch Tall Black Conical Plastic Legs

SETUP AND ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to have two people for assembly.

Step 1: Unpack and Identify Components

Carefully unpack all components from the boxes. Lay them out on a clean, soft surface to prevent damage. Identify each part using the provided parts list.



**NOV
OGR
ATZ**

*louis upholstered
wingback bed*

Image: The Novogratz Louis Upholstered Wingback Bed fully assembled in a bedroom setting, showcasing its elegant design.

Step 2: Attach Legs to Headboard and Footboard

Attach the 5-inch tall black conical plastic legs to the designated points on the headboard and footboard. Ensure they are securely tightened.

Your browser does not support the video tag.

Video: This video demonstrates the assembly process for a similar upholstered platform bed, including attaching legs and side rails.

Step 3: Connect Side Rails to Headboard and Footboard


Align the metal side rails with the brackets on the headboard and footboard. Insert the bolts and tighten them using the provided Allen wrench. Ensure a secure connection on all four corners.




Image: A close-up view of the upholstered headboard, highlighting the wide horizontal channel tufting.

Step 4: Install Center Support Legs and Rails


Attach the center support legs to the metal center rail. Then, connect the center rail to the headboard and footboard rails, ensuring it is evenly spaced for optimal mattress support.

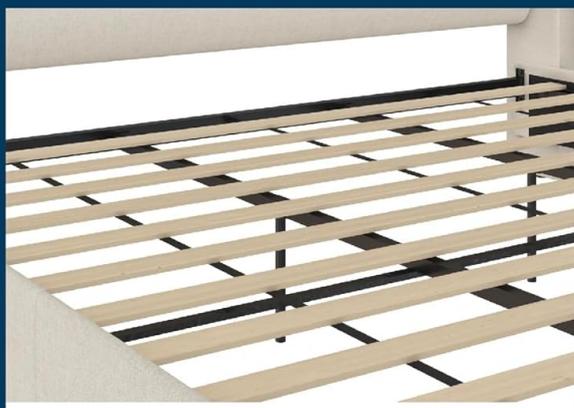


PREASSEMBLED WOOD SLATS
ARE EASY TO UNROLL AND INSTALL

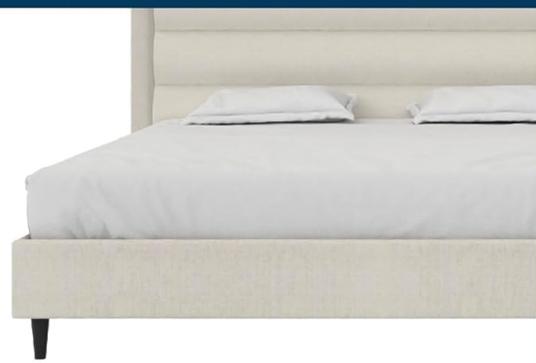

NO BOX SPRING NEEDED
& CAN SUPPORT UP TO 1000 LBS

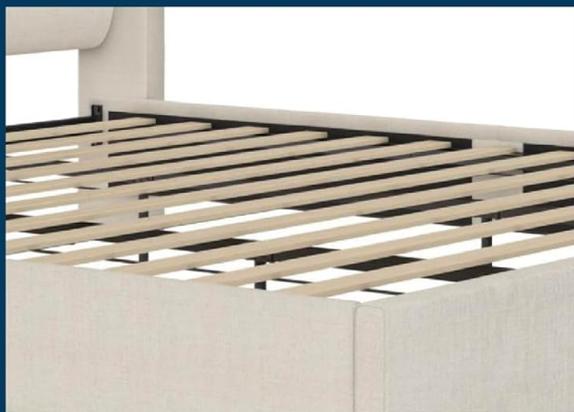

RAISED SIDES KEEP THE
MATTRESS IN PLACE

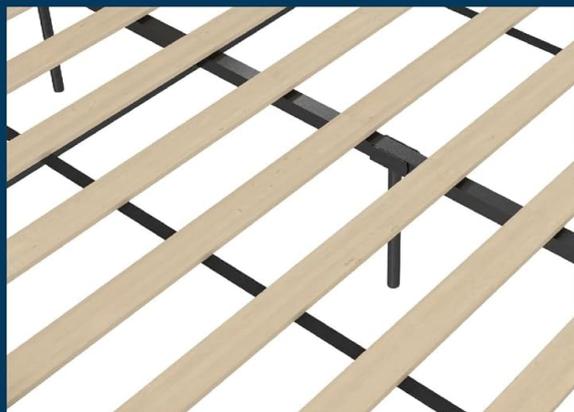

REINFORCED METAL SIDE
AND CENTER RAILS AND LEGS

Image: Detailed view of the bed frame's reinforced metal side and center rails, along with the support legs, designed for stability.

Step 5: Unroll and Secure Plywood Slats

Unroll the preassembled plywood slats across the bed frame. Ensure they are evenly distributed and secured to the side rails using the provided fasteners. This step eliminates the need for a box spring.

FITS ONE KING SIZE MATTRESS (NOT INCLUDED)



*SHOWN WITH AN 8" MATTRESS



Weight Limit



No Boxspring



Trendy Design

Image: The bed frame with its wooden slats laid out, demonstrating the platform support system.

Step 6: Final Check

Once all components are assembled, double-check all bolts and screws to ensure they are tight. Place your mattress on the frame. The bed frame is now ready for use.

WHY YOU'LL LOVE THIS



Image: A full view of the assembled bed frame, ready for a mattress.

OPERATING INSTRUCTIONS

The Novogratz Louis Upholstered Bed Frame is designed for straightforward use.

- **Mattress Placement:** Simply place your mattress directly onto the wooden slats. No box spring is needed.
- **Weight Capacity:** The bed frame is engineered to support up to 1000 lbs. Do not exceed this weight limit.
- **Headboard Use:** The high padded wingback headboard provides comfortable support for lounging, reading, or watching television.



Image: A diagram illustrating the dimensions of the King size bed frame, including height, width, and length.

MAINTENANCE

Proper care will extend the life and appearance of your bed frame.

- **Cleaning:** The textured canvas fabric can be cleaned by wiping with a gently damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Hardware Check:** Periodically inspect all bolts and screws to ensure they are secure. Tighten if necessary.
- **Avoid Excessive Moisture:** Protect the upholstered surfaces from spills and excessive moisture.

TROUBLESHOOTING

If you encounter any issues, refer to the following common solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Bed frame feels unstable or wobbly.	Loose hardware.	Check and tighten all bolts and screws on the headboard, footboard, side rails, and center supports.
Squeaking noises.	Loose connections or friction between parts.	Ensure all hardware is tightened. Apply a small amount of lubricant (e.g., silicone spray) to connection points if squeaking persists.
Mattress sags or feels unsupported.	Improper slat placement or damaged slats.	Verify that all plywood slats are correctly positioned, evenly spaced, and securely fastened. Replace any damaged slats.

If problems persist, contact customer support.

SPECIFICATIONS

- **Model:** 4660349N
- **Size:** King
- **Product Dimensions:** 86"L x 82.5"W x 56"H
- **Material:** Wood frame, Textured Canvas upholstery
- **Color:** Ivory
- **Weight Limit:** 1000 lbs
- **Assembly Required:** Yes
- **Box Spring Required:** No
- **Manufacturer:** Novogratz
- **UPC:** 029986466013

WARRANTY AND SUPPORT

The Novogratz Louis Upholstered Bed Frame comes with a 1-year limited warranty. For detailed warranty information, please refer to the product description or store page where you made your purchase.

For any questions, missing parts, or assistance with assembly, please contact Novogratz customer support. Contact information can typically be found on the manufacturer's website or through your retailer.

You can also visit the official Novogratz store for more information: [Novogratz Store](#)