

BOTLOG BOT-HFUP-063

BOTLOG Queen Upholstered Platform Bed Frame Instruction Manual

Model: BOT-HFUP-063

INTRODUCTION

Thank you for choosing the BOTLOG Queen Upholstered Platform Bed Frame. This manual provides essential information for the safe assembly, proper use, and effective maintenance of your new bed frame. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

SAFETY INFORMATION

- Always assemble the bed frame on a soft, clean surface to prevent damage to the product or your floor.
- Ensure all bolts, screws, and connectors are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not exceed the maximum weight capacity of 1200 pounds.
- Keep small parts away from children during assembly to prevent choking hazards.
- Do not stand or jump on the bed frame.
- Use only the parts provided by the manufacturer. Substituting parts may compromise safety and void the warranty.

PACKAGE CONTENTS

Please verify that all components listed below are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Headboard (Velvet Petal Design)
- Footboard
- Side Rails (Left and Right)
- Wooden Slats with EVA Silent Strips
- Center Support Bar(s)

- Support Legs (8 total)
- Hardware Pack (bolts, washers, nuts, Allen wrench)
- Assembly Instructions Manual

SETUP AND ASSEMBLY

Assembly of the BOTLOG Queen Bed Frame is designed to be straightforward. All components are labeled, and detailed instructions are included in the package. It is recommended to have two people for assembly.

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out on a soft, clean surface and compare them against the parts list in the included assembly instructions.
2. **Attach Side Rails to Headboard and Footboard:** Connect the side rails to the headboard and footboard using the provided bolts and Allen wrench. Ensure all connections are firm but do not overtighten initially.
3. **Install Center Support:** Secure the center support bar(s) and any additional support legs to the frame as indicated in the assembly guide.
4. **Place Wooden Slats:** Lay the wooden slats across the frame. The slats are equipped with EVA silent strips to prevent noise. Ensure they are evenly spaced and secured according to the instructions.
5. **Final Tightening:** Once all components are in place, go back and securely tighten all bolts and screws.



Figure 1: Fully assembled BOTLOG Queen Upholstered Platform Bed Frame in a bedroom setting.

The bed frame features a petal-shaped velvet headboard with high-gloss metal surrounds and soft velvet fabric, providing both comfort and an elegant aesthetic. The footboard also includes upholstered velvet panels.



Figure 2: Detailed view of the upholstered velvet petal headboard and soft velvet fabric.



Figure 3: The bed frame features rounded edges for enhanced safety and a sleek design.

OPERATING INSTRUCTIONS

This platform bed frame is designed to support your mattress directly, eliminating the need for a box spring.

- **Mattress Placement:** Place your mattress directly onto the wooden slats. The durable slats and metal frame are designed to support and extend the life of your mattress.
- **Recommended Mattress Thickness:** For optimal comfort and aesthetic, a mattress thickness of 8-12 inches is recommended.
- **Under-Bed Storage:** The frame provides approximately 10.6 inches of clearance underneath, offering convenient storage space for items such as boxes, luggage, or shoes. This space also allows for easy cleaning with a vacuum cleaner or robot vacuum.

No Box Spring Needed

Recommended Mattress Deep : 8 -12"

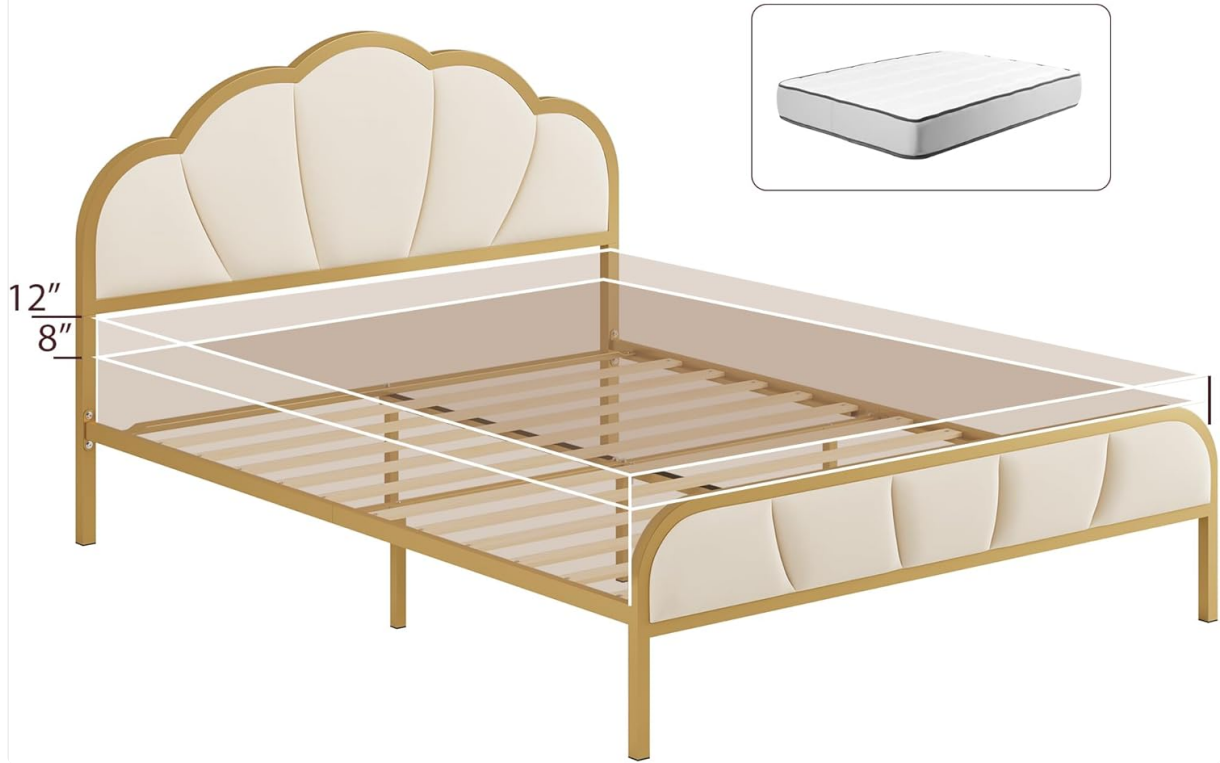


Figure 4: The bed frame supports mattresses directly, no box spring needed. Recommended mattress depth is 8-12 inches.



Figure 5: The 10.6-inch under-bed clearance provides ample storage space.

MAINTENANCE

- **Frame Cleaning:** Wipe the metal frame with a soft, damp cloth. Avoid harsh chemicals that may damage the finish.
- **Velvet Upholstery Care:** The velvet headboard and footboard upholstery should be dry cleaned only. For minor spills, gently blot with a clean, dry cloth. Do not rub.
- **Regular Inspection:** Periodically check all bolts and connections to ensure they remain tight. Re-tighten as needed to maintain stability and prevent noise.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bed frame is squeaking.	Loose connections or friction between slats and frame.	Ensure all bolts are securely tightened. The wooden slats are equipped with EVA silent strips to minimize noise; verify they are correctly positioned.

Problem	Possible Cause	Solution
Bed frame feels unstable.	Incomplete assembly or loose hardware.	Re-check all connections and ensure every bolt is fully tightened. Verify all 8 support legs are properly installed and making contact with the floor.
Mattress slides on the frame.	Not a common issue with this design, but can occur with certain mattress types.	Consider placing a non-slip mat between the mattress and the slats.




Figure 6: The wooden slats include EVA silent strips for a noise-free experience, and the frame is designed for sturdiness.

SPECIFICATIONS

Model Number:	BOT-HFUP-063
Size:	Queen
Material:	Metal (Frame), Velvet (Headboard/Footboard)

Product Dimensions (L x W x H):	83" x 62.4" x 43" (210.8 cm x 158.5 cm x 109 cm)
Under-Bed Clearance:	10.6 inches (26.9 cm)
Maximum Weight Capacity:	1200 Pounds
Item Weight:	77 Pounds
Color:	Off-white, Gold
Assembly Required:	Yes
Special Features:	Squeak Resistant, Upholstered Petal Headboard, No Box Spring Needed

Product Dimension

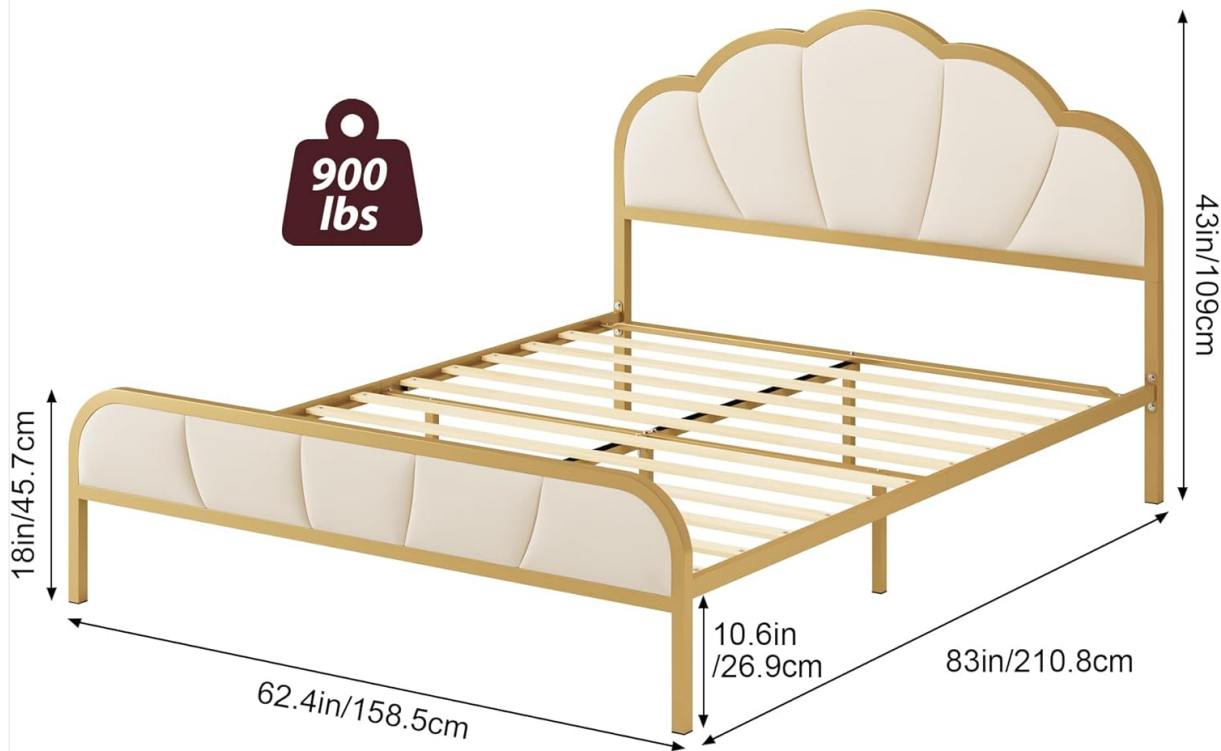

Weight Capacity

900lbs

Dimensions

83" x 62.4" x 43"

Specification

QUEEN Size

Figure 7: Product dimensions and weight capacity details.

WARRANTY AND SUPPORT

For specific warranty information regarding your BOTLOG Queen Upholstered Platform Bed Frame, please refer to the documentation included with your purchase or contact the retailer where the product was acquired.

Warranty terms typically cover manufacturing defects.

If you encounter any issues during assembly or use, or if you have questions about your product, please contact BOTLOG customer support through their official website or the retailer's customer service channels. When contacting support, please have your model number (BOT-HFUP-063) and purchase details readily available.