

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Dolonm](#) /

› [Dolonm Queen Size Upholstered Platform Bed Frame \(Model W142-ZJL-868617\) Instruction Manual](#)

Dolonm W142-ZJL-868617

Dolonm Queen Size Upholstered Platform Bed Frame

Model: W142-ZJL-868617

Brand: Dolonm

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Dolonm Queen Size Upholstered Platform Bed Frame. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

SAFETY INFORMATION

- Keep all small parts away from children during assembly.
- Ensure all bolts and screws are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not use power tools for assembly unless specifically instructed, as over-tightening may damage components.
- Assemble the bed frame on a soft, clean surface to prevent scratches.
- Do not stand on the bed frame or use it as a ladder.
- This bed frame is designed to support a maximum weight of 700 pounds. Exceeding this limit may cause damage or injury.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly. All parts, tools, and instructions are included in the package.

- Headboard (Upholstered, Grey Linen)
- Footboard (Upholstered, Grey Linen)
- Side Rails (Metal, Gold finish)
- Wooden Slats (11 thickened solid wood strips)
- Center Support Bar(s)
- Support Legs
- Hardware Pack (Bolts, Screws, Allen Wrench)

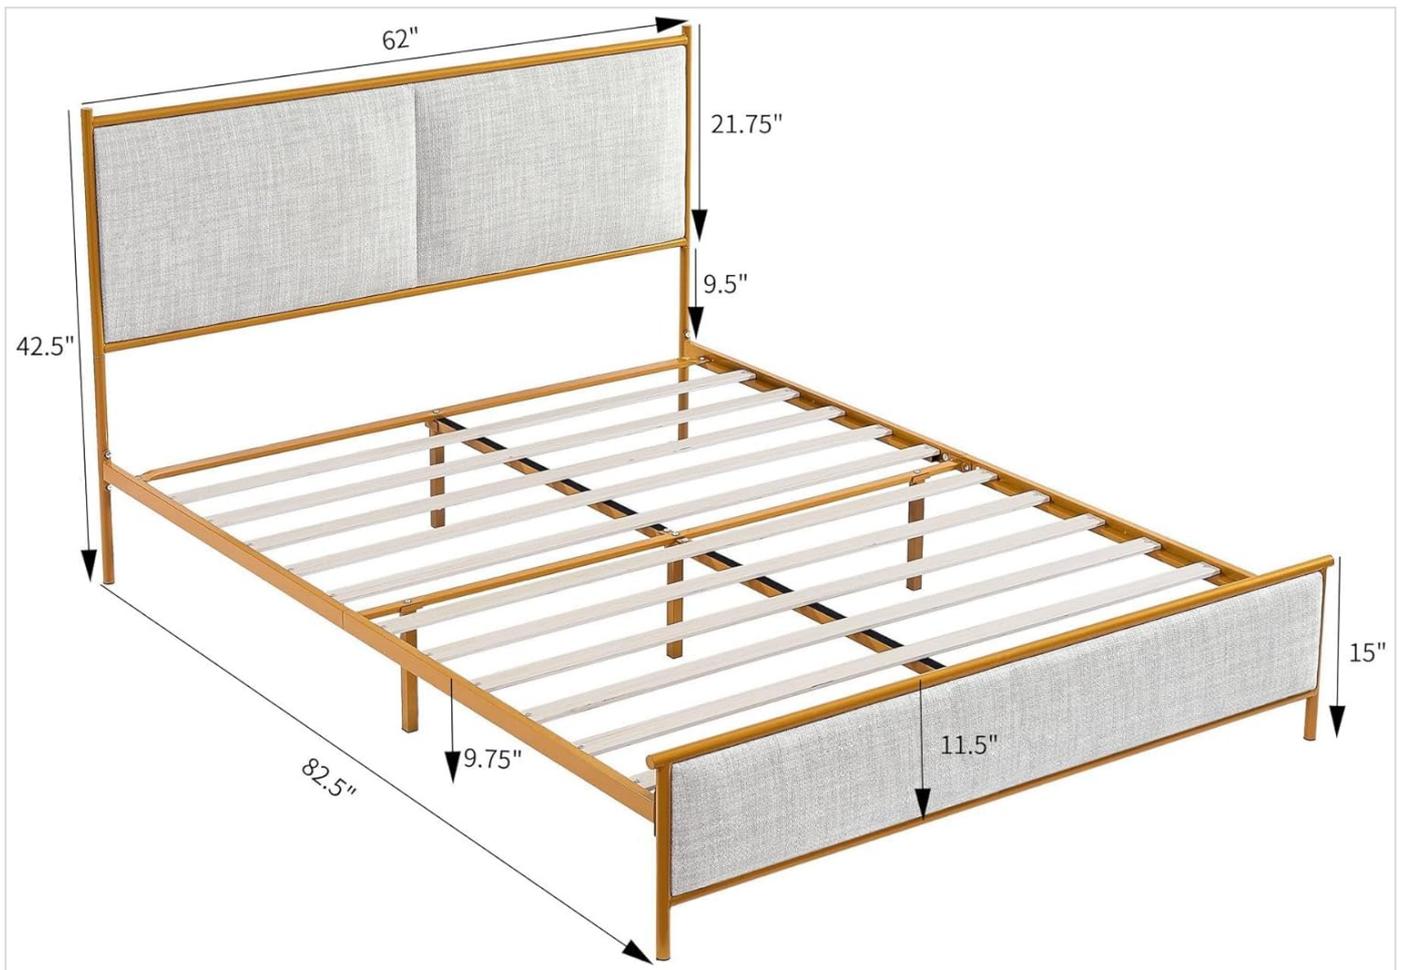


Image: All components of the Dolonm Queen Size Upholstered Platform Bed Frame.

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly typically takes approximately 40 minutes with two individuals. Follow the steps below carefully.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a soft, clean surface to avoid damage.
2. **Attach Side Rails to Headboard:** Connect the metal side rails to the upholstered headboard using the provided bolts and Allen wrench. Do not fully tighten bolts until all connections are made.
3. **Attach Side Rails to Footboard:** Connect the other end of the metal side rails to the upholstered footboard. Ensure the upholstered panels face outwards.
4. **Install Center Support Bar(s):** Secure the center support bar(s) to the bed frame. These bars provide additional stability for the wooden slats.
5. **Attach Support Legs:** Screw the support legs into the designated points on the center support bar(s) and potentially the side rails.
6. **Place Wooden Slats:** Lay the wooden slats across the bed frame. The slats are equipped with Velcro and EVA sound bars to reduce noise. Ensure they are evenly spaced and secured.
7. **Final Tightening:** Once all components are in place and aligned, fully tighten all bolts and screws.



Image: The Dolonm Queen Size Upholstered Platform Bed Frame fully assembled.



Image: Detail of the upholstered headboard and footboard fabric.

OPERATING AND USAGE

Your Dolonm platform bed frame is designed for optimal comfort and support without the need for a box spring.

- **Mattress Placement:** Place your mattress directly onto the wooden slats. The recommended mattress thickness is 8 to 12 inches for optimal aesthetics and comfort.
- **Noise Reduction:** The integrated Velcro and EVA sound bars on the slats are designed to minimize friction and noise, ensuring a quiet sleeping environment.
- **Weight Capacity:** The bed frame can support up to 700 pounds, accommodating various mattress types and users.



Image: The Dolonm bed frame with a mattress and bedding, ready for use.

MAINTENANCE

- **Cleaning Fabric:** The upholstered fabric should be dry cleaned only. Do not use liquid cleaners or harsh chemicals.
- **Cleaning Metal Frame:** Wipe the metal frame with a soft, damp cloth. Avoid abrasive cleaners.
- **Regular Checks:** Periodically inspect all connections and tighten any loose bolts or screws to maintain stability and prevent noise.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bed frame is wobbly or unstable.	Loose bolts or screws.	Check and tighten all assembly bolts and screws. Ensure all support legs are firmly on the ground.

Problem	Possible Cause	Solution
Squeaking noises from the bed.	Friction between slats and frame, or loose connections.	Ensure slats are properly seated and the EVA sound bars are intact. Re-tighten all frame connections.
Parts missing or damaged upon arrival.	Shipping damage or packaging error.	Contact Dolonm customer support immediately for replacement parts.

SPECIFICATIONS

Feature	Detail
Model	W142-ZJL-868617
Size	Queen
Color	Grey
Product Dimensions (L x W x H)	78.35" x 57.87" x 43.31"
Weight Capacity	700 pounds
Recommended Mattress Thickness	8" - 12"
Material	Linen, Metal, Wood
Assembly Required	Yes (Approx. 40 minutes for two people)
Special Feature	No Box Spring Needed, Noise-reducing Slats



Image: Dimensional diagram of the Dolonm Queen Size Platform Bed Frame.

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or contact Dolonm customer service through their official website or the retailer where the product was purchased.

For assistance with missing parts or assembly issues, please have your model number (W142-ZJL-868617) and purchase details ready.