

Giantex GT10569-HU

Giantex Twin Upholstered Platform Bed Frame Instruction Manual

Model: GT10569-HU

Brand: Giantex

1. INTRODUCTION

Thank you for choosing the Giantex Twin Upholstered Platform Bed Frame. This manual provides essential information for safe assembly, operation, and maintenance of your new bed frame. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

Key Features:

- **Sturdy & Stable Construction:** Features 10 thick wood slats and solid wood legs for robust support. Additional middle legs ensure even pressure distribution and enhanced stability.
- **Button Tufted Upholstered Headboard:** Designed with breathable fabric and high-density sponge padding for a comfortable and skin-friendly touch.
- **Sufficient Under-Bed Storage Space:** Offers a 6-inch clearance, ideal for easy cleaning with sweepers and for storing shoes or storage boxes.
- **No Box Spring Needed:** Closely spaced slats provide strong support, allowing direct mattress placement. The embedded design keeps the mattress securely in place.
- **Easy Assembly & Maintenance:** Includes all necessary parts and clear instructions for straightforward assembly. The fabric upholstery is designed for easy cleaning and upkeep.

2. SAFETY INFORMATION

- Read all instructions before assembly and use.
- Keep small parts away from children during assembly to prevent choking hazards.
- Ensure all bolts and screws are securely tightened before use. Periodically check and re-tighten as

needed.

- Do not stand or jump on the bed frame.
- Do not use power tools for assembly unless specifically instructed, as this may overtighten or damage components.
- Place the bed frame on a flat, level surface.
- Maximum weight recommendation for this Twin bed frame is 290 pounds. Do not exceed this limit.

3. PACKAGE CONTENTS

Please verify that all components listed below are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Headboard (Upholstered)
- Side Rails (Left & Right)
- Footboard
- Center Support Beam
- Wooden Slats (10 pieces)
- Support Legs (Various sizes)
- Hardware Pack (Screws, bolts, washers, Allen wrench)
- User Guide (This manual)

4. SETUP AND ASSEMBLY INSTRUCTIONS

It is recommended to assemble the bed frame with two people. Clear a spacious area for assembly and keep all tools and hardware within reach.

Step-by-Step Assembly:

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out on a soft, clean surface to prevent scratches. Refer to the parts list to ensure all pieces are present.
2. **Attach Legs to Headboard and Footboard:** Secure the appropriate support legs to the headboard and footboard using the provided hardware. Ensure they are tightly fastened.
3. **Assemble Side Rails:** Connect the side rails to the headboard and footboard. Use the designated bolts and washers, tightening them firmly but do not fully tighten until all main frame components are connected.
4. **Install Center Support Beam:** Attach the center support beam, if included, to the designated points on the headboard and footboard or side rails. Attach any associated support legs to this beam.
5. **Insert Wooden Slats:** Place the wooden slats across the side rails. Ensure they are evenly spaced and secured according to the instructions (some slats may have pre-drilled holes for screws or plastic caps).
6. **Final Tightening:** Once all components are in place and aligned, go back and fully tighten all bolts and screws. Do not overtighten.



No Box Spring Needed

Recommended Mattress Thickness: above 9" (Not Included)



Embedded Design

Keeps the mattress in place




Flat Surface

Mattress easily slides around

Figure 1: Product Dimensions and Weight Capacity. The bed frame measures 76"L x 42.5"W x 38"H, with 6" of under-bed clearance and a maximum weight capacity of 290 lbs.

Sturdy & Stable Construction

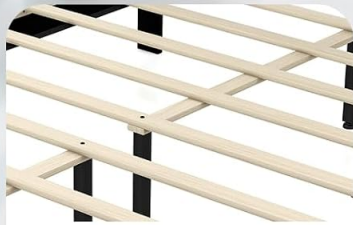

10 Thick Wood Slats



Solid Wood Legs



Figure 2: Sturdy and Stable Construction. This image illustrates the 10 thick wood slats and solid wood legs that contribute to the bed frame's robust and stable support.

5. OPERATING INSTRUCTIONS

Mattress Placement:

This platform bed frame is designed to be used without a box spring. Place your twin-sized mattress directly onto the wooden slats. The embedded design of the frame helps to keep the mattress from shifting.

The recommended mattress thickness is above 9 inches (mattress not included).



Figure 3: No Box Spring Needed. This image demonstrates the embedded design of the bed frame, which securely holds the mattress in place, eliminating the need for a box spring.

Under-Bed Storage:

The 6-inch clearance beneath the bed frame provides space for storage. Utilize this area for items such as shoes or storage boxes to help keep your room organized.

Sufficient Under-Bed Storage Space



Shoes



Storage Boxes



Sweeper Friendly

Figure 4: Under-Bed Storage Space. This image illustrates the 6-inch clearance under the bed, suitable for storage and allowing for easy cleaning with a robot vacuum.

6. MAINTENANCE

Cleaning the Upholstered Headboard and Frame:

- Regularly vacuum the upholstered fabric to remove dust and debris.
- For spills or stains, spot clean immediately using a mild fabric cleaner and a clean, damp cloth. Test the cleaner on an inconspicuous area first.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the fabric.
- Wipe down wooden or metal parts with a soft, dry cloth.

General Care:

- Periodically check all bolts and screws to ensure they remain tight. Re-tighten if necessary to maintain stability.
- Avoid dragging the bed frame across the floor, especially on carpet, as this can stress joints and potentially cause damage. Lift the frame when moving it.

7. TROUBLESHOOTING

Common Issues and Solutions:

- **Bed Frame Squeaks:**

Solution: Check all bolts and screws and tighten them securely. Ensure the bed frame is on a level surface. If the issue persists, disassemble and reassemble, ensuring all parts are correctly aligned.

- **Bed Frame Feels Unstable:**

Solution: Verify that all legs are firmly attached and making full contact with the floor. Ensure all connection points are tightened. Check that the center support beam (if applicable) is correctly installed.

- **Mattress Slides:**

Solution: Ensure the mattress is correctly positioned within the embedded frame design. If sliding continues, consider using a non-slip mattress pad between the mattress and the slats.

- **Missing Parts or Damaged Components:**

Solution: Do not proceed with assembly. Contact Giantex customer support or the seller immediately for assistance and replacement parts.

8. SPECIFICATIONS

Feature	Detail
Brand	Giantex
Model Number	GT10569-HU
Style	Modern
Size	Twin
Color	Grey
Upholstery Fabric Type	Linen
Frame Material Type	Wood (MDF, Plywood, Solid Wood)
Item Dimensions (L x W x H)	76"L x 42.5"W x 38"H
Item Weight	27 Pounds
Maximum Weight Recommendation	290 Pounds
Ground To Item Distance (Under-bed Clearance)	6 Inches
Required Assembly	Yes
Included Components	Upholstered Bed Frame, User Guide

9. WARRANTY INFORMATION

Giantex products are manufactured to high-quality standards. For specific warranty details regarding your Twin Upholstered Platform Bed Frame, please refer to the warranty card included in your package or contact the seller directly. Warranty terms typically cover manufacturing defects under normal use.

Please note that extended protection plans may be available from third-party providers at the time of purchase. These plans are separate from the manufacturer's warranty.

10. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact Giantex customer support or the retailer from whom you purchased the product.

For the most up-to-date contact information, please visit the official Giantex website or refer to your purchase documentation.

Manufacturer: Giantex

Seller: Giantex (if purchased directly from Amazon via Giantex)