

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [DWVO](#) /

› [DWVO Queen Bed Frame with Adjustable Headboard User Manual](#)

DWVO MADWVvum0b

DWVO Queen Bed Frame with Adjustable Headboard User Manual

Model: MADWVvum0b

Safety Information

Package Contents

Assembly Instructions

Operating Instructions

[Warranty & Support](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

1. SAFETY INFORMATION

Please read and understand all instructions before beginning assembly and use. Failure to follow these instructions may result in injury or damage to the product.


- Keep all small parts and packaging materials away from children.
- Ensure all bolts and screws are securely tightened before use.
- Do not use power tools for assembly unless specifically instructed, as overtightening may damage components.
- Place the bed frame on a flat, level surface.
- Do not stand or jump on the bed frame.
- Regularly check all connections to ensure they remain tight.
- Maximum weight capacity: 1000 lbs.

2. PACKAGE CONTENTS

Verify that all components are present before starting assembly. If any parts are missing or damaged, please contact customer support.

QUEEN SIZE

Adjustable Headboard

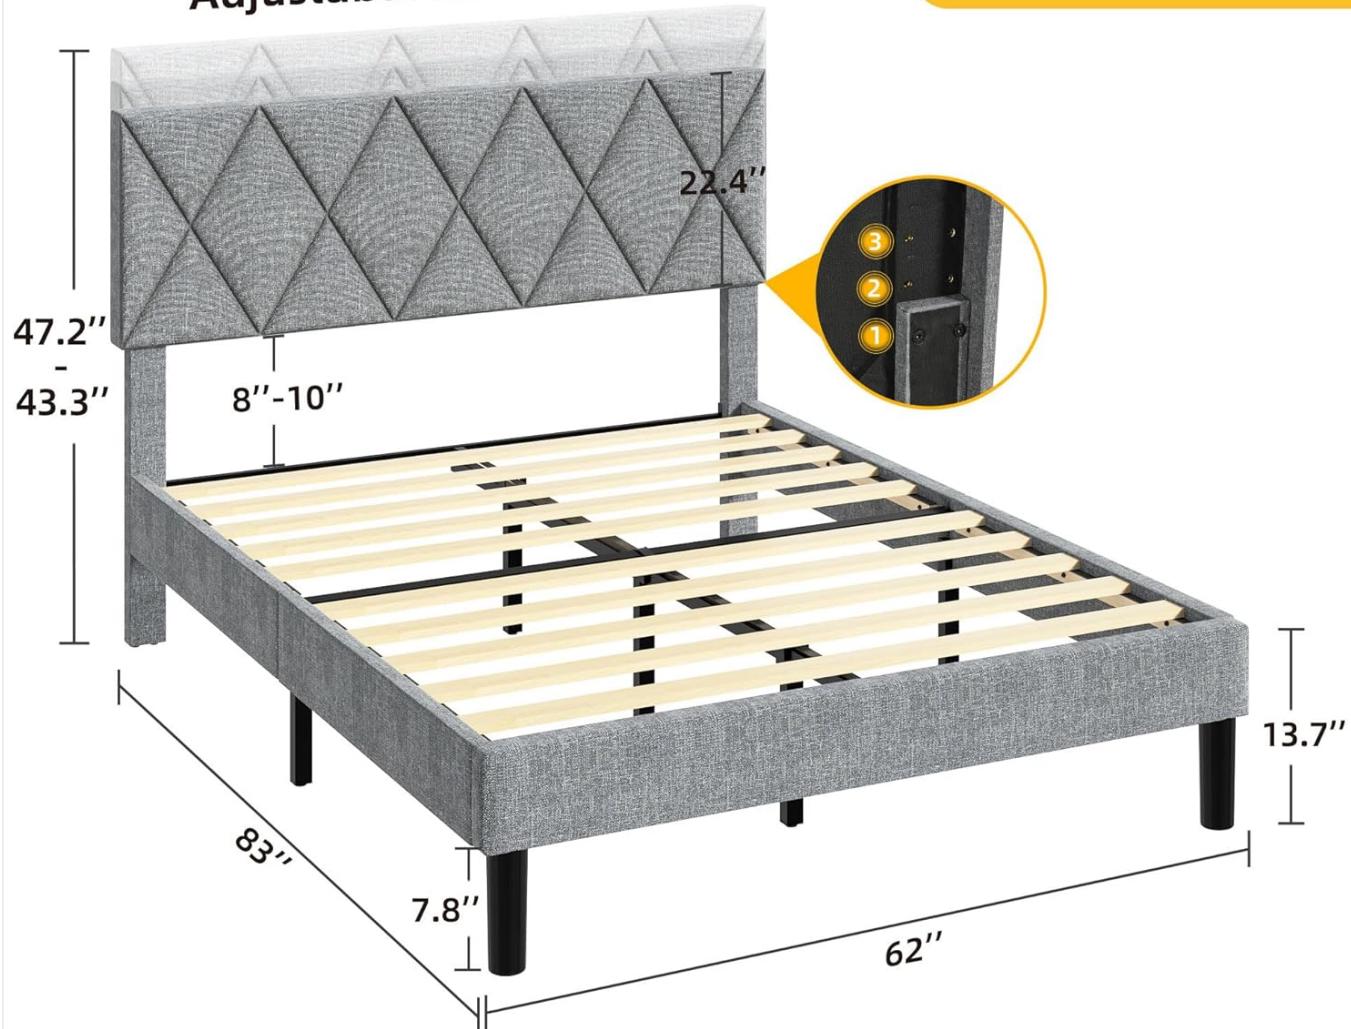

Mattress
8"~14"



Weight
Capacity
900
LBS



30 Mins
Assemble

Image: Diagram of the DWVO Queen Bed Frame with all components labeled, including the adjustable headboard, frame dimensions (47.2" to 43.3" height, 83" length, 62" width), and mattress thickness recommendation (8"-14").

Components List:

- Upholstered Headboard (Adjustable)
- Side Rails (Left and Right)
- Footboard
- Center Support Beam
- Wooden Slats (10 high-density solid wooden slats)
- Support Legs (2 wooden, 2 plastic, 5 metal)
- Hardware Pack (Bolts, Screws, Allen Wrench)
- Silent Foam Strips
- Foot Mats

3. ASSEMBLY INSTRUCTIONS

Assembly is designed to be straightforward. It is recommended to have two people for easier assembly. Please follow the steps below carefully.

3.1 Preparation

- Clear an open space for assembly.
- Lay out all components and hardware.
- Refer to the included detailed installation manual with assembly serial numbers for each component.

3.2 Step-by-Step Assembly

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Assemble Main Frame:** The main frame features a metal folding-structure design. Unfold the pre-installed main frame to save time and effort.

Easy Assembly

Easily unfold the pre-installed main frame to save time and effort.
Velcro design that enables quick installation and prevents friction and movement.



Image: A visual guide to the easy assembly of the bed frame, illustrating the pre-installed folding main frame and the Velcro design for quick slat installation.

3. **Attach Headboard:** Secure the adjustable headboard to the main frame using the provided hardware. Adjust the

headboard to your preferred height to fit your mattress (recommended thickness 8-12 inches).



Stylish Upholstered Headboard



Soft Linen Fabric



Upholstered and Breathable



High Resilience Memory Foam

Image: Detail of the upholstered headboard, showing the soft linen fabric and high resilience memory foam for comfort and support.

- Install Support Legs:** Attach all support legs (wooden, plastic, and metal) to the designated points on the frame. Ensure they are securely tightened.
- Place Wooden Slats:** Position the high-density solid wooden slats across the frame. The slats feature a special Velcro design for easy attachment to the bed cleat, preventing movement and noise.



Image: Detail of the Velcro slat attachment, showing how slats are secured to the frame to prevent shifting and noise.

- Apply Silent Foam:** Stick the silent foam strips on the pre-installed rail to effectively reduce noise from the slats and

metal rail.



Image: Close-up view of the silent foam strip applied to the metal rail, designed to minimize noise.

7. **Final Check:** Ensure all connections are tight and the bed frame is stable.

3.3 Assembly Video

For a visual guide, please refer to the assembly video below:

Your browser does not support the video tag.

Video: A step-by-step assembly guide for the DWVO Queen Bed Frame, demonstrating how to unpack, connect frame components, install slats, and secure the headboard.

4. OPERATING INSTRUCTIONS

4.1 Headboard Adjustment

The upholstered headboard can be adjusted to accommodate mattresses of varying heights. To adjust, loosen the bolts on the headboard supports, slide the headboard to the desired height, and re-tighten the bolts securely.

4.2 Under-Bed Storage

The bed frame provides 8 inches of clearance for under-bed storage. This space can be utilized for storage bins, seasonal items, or to allow for robotic vacuum cleaners to pass through easily.



Under-Bed Storage Space

More space to store items and easy to clean the room

Image: The under-bed storage area, measuring 7.8 inches, shown with storage boxes and a robotic vacuum cleaner, illustrating its practical use.

5. MAINTENANCE

- Cleaning:** For the upholstered parts, use a soft, damp cloth and mild detergent for spot cleaning. Avoid harsh chemicals. For metal parts, wipe with a dry cloth.
- Tightening:** Periodically check all bolts and screws (every 3-6 months) and re-tighten them to ensure the frame remains stable and noise-free.
- Inspection:** Inspect wooden slats for any signs of wear or damage. Replace if necessary.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Squeaking Noise	Loose bolts or screws; slats rubbing against the frame.	Tighten all bolts and screws. Ensure silent foam strips are properly placed. Check that slats are securely attached via Velcro.
Bed Frame Instability	Loose connections; uneven floor.	Re-tighten all hardware. Ensure the bed is on a level surface. Adjust foot mats if necessary.
Headboard Not Level	Uneven adjustment.	Loosen headboard adjustment bolts, level the headboard, and re-tighten.
Missing Parts	Packaging error.	Contact DWVO customer support with your model number and purchase details.

7. SPECIFICATIONS

- **Brand:** DWVO
- **Model:** MADWVvum0b
- **Size:** Queen
- **Product Dimensions:** 80"L x 60"W x 43.3"H (Adjustable Headboard Height)
- **Material:** Metal, Wood, Upholstered Linen Fabric
- **Color:** Linen Grey
- **Weight Capacity:** Up to 1000 lbs
- **Under-Bed Clearance:** 8 inches
- **Recommended Mattress Thickness:** 8-12 inches
- **Assembly Required:** Yes (Approx. 1 hour)
- **Special Features:** Adjustable Headboard, Heavy Duty Structure, No Box Spring Needed, Solid Wood Slats Support, Squeak Resistant

8. WARRANTY & SUPPORT

For warranty information, missing parts, or technical support, please contact DWVO customer service. Please have your model number (MADWVvum0b) and purchase date available when contacting support.

Visit the official DWVO store for more products and support: [DWVO Store](#)

