

[Manuals.plus](#) /

› [KOMFOTT](#) /

› KOMFOTT Twin Wood Bed Frame with Storage Drawers Instruction Manual (Model: 10561-HU-KT)

KOMFOTT 10561-HU-KT

KOMFOTT Twin Wood Bed Frame with Storage Drawers Instruction Manual

Model: 10561-HU-KT

IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembly and use. Keep this manual for future reference.

- **Weight Limit:** Do not exceed the maximum weight capacity of **350 lbs**. Exceeding this limit may cause damage to the bed frame and potential injury.
- **Mattress Compatibility:** Use a standard twin mattress with a thickness of **5" to 8"**. A box spring is not required.
- **Drawer Safety:** Exercise caution when operating the storage drawers to prevent finger entrapment.
- **Assembly:** Ensure all connections are tight and secure before use. Periodically check and retighten hardware as needed.
- **Placement:** Position the bed frame on a flat, level surface.

PRODUCT OVERVIEW

The KOMFOTT Twin Wood Bed Frame (Model: 10561-HU-KT) is a platform bed designed for twin-sized mattresses. It features a sturdy pine wood construction, a headboard, and two integrated storage drawers on wheels. The embedded design helps keep the mattress in place.




Image: Fully assembled KOMFOTT Twin Wood Bed Frame in white with two storage drawers.

COMPONENTS LIST

Before beginning assembly, verify that all components are present and undamaged. Refer to the included hardware pack for specific fasteners.

- Headboard (1)
- Footboard (1)
- Side Rails (2)
- Plywood Slats (8)
- Storage Drawers (2) with wheels and cut-out handles
- Hardware Pack (bolts, screws, Allen wrench)

Dimension

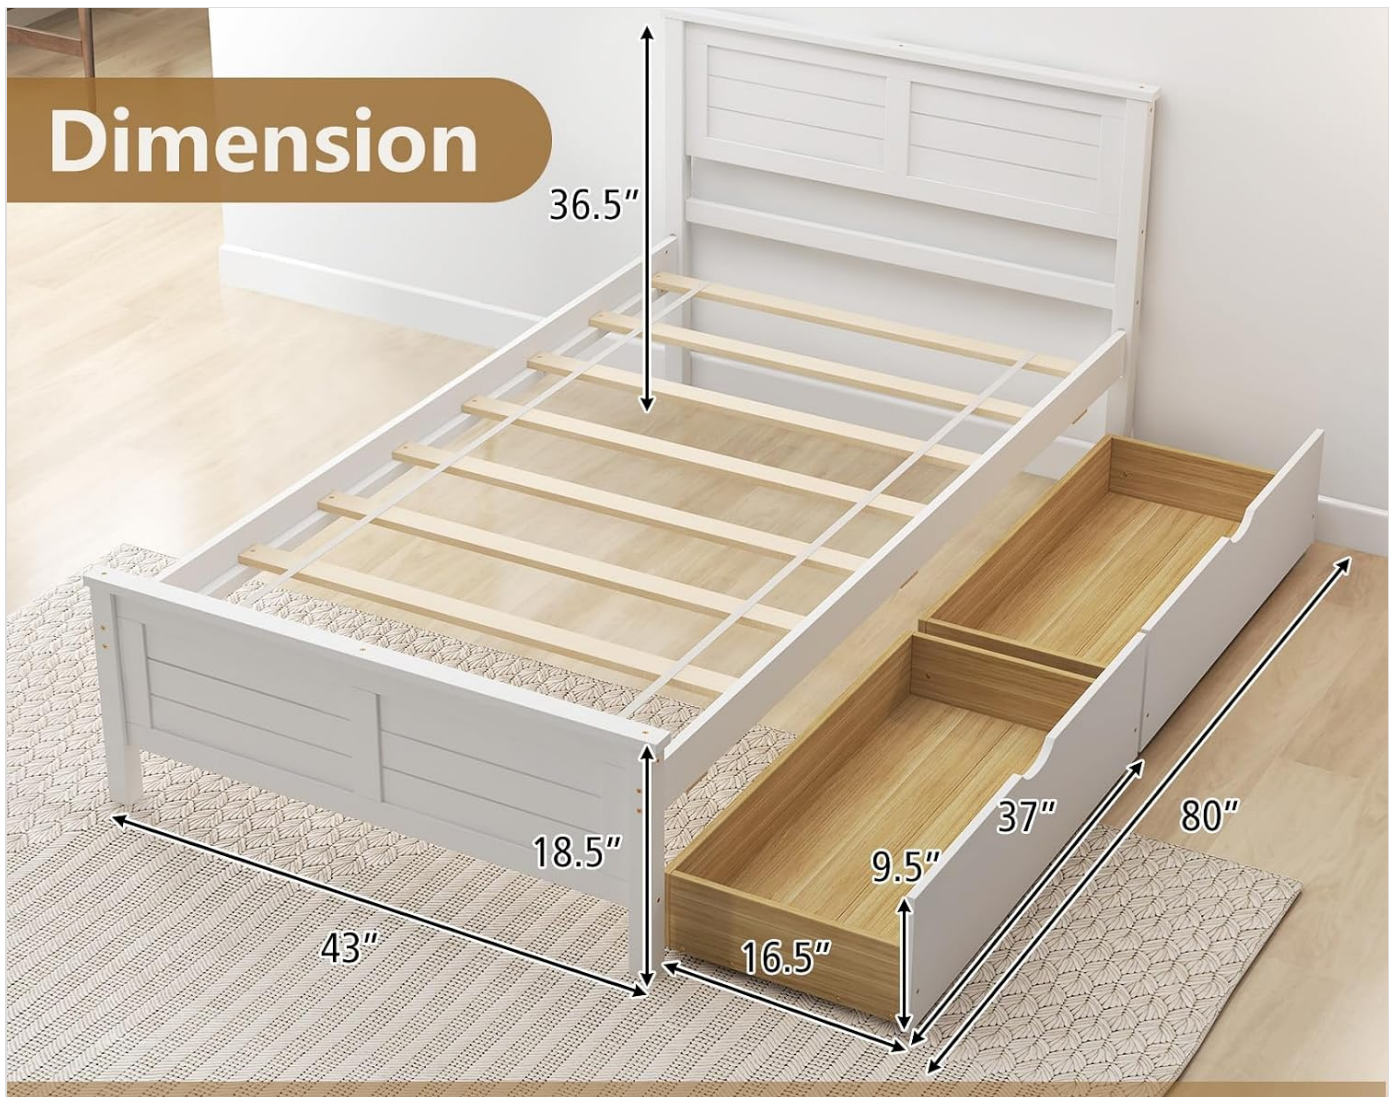

Weight Capacity: 350 lbs



Applicable Mattress
Thickness: 5"-8"

Image: Diagram showing the dimensions of the KOMFOTT Twin Wood Bed Frame, including headboard height (36.5"), bed height (18.5"), length (80"), and width (43"). Also indicates 350 lbs weight capacity and 5"-8" applicable mattress thickness.

SETUP AND ASSEMBLY

Assembly typically requires two adults. Clear a spacious area for assembly. Do not fully tighten all bolts until the bed frame is completely assembled.

1. Step 1: Attach Side Rails to Headboard and Footboard.

Align the side rails with the pre-drilled holes on the headboard and footboard. Secure them using the provided bolts and Allen wrench. Hand-tighten initially.

2. Step 2: Install Plywood Slats.

Place the 8 plywood slats evenly across the side rails. Ensure they fit securely into the designated slots or attach with screws if indicated in the detailed instructions. The slats provide direct mattress support.


Keep Your Mattress In Place



Supportive
Wood Headboard




Raised Footboard



Embedded Design

Avoid slipping



Non-embedded Design

Easy to slip

Image: Close-up view of the bed frame showing the 8 sturdy plywood slats and strong screw connections for stability.

3. Step 3: Assemble Storage Drawers.

Follow the specific instructions for assembling the two storage drawers. Attach the wheels to the bottom of each drawer and the cut-out handles to the front panels. Ensure smooth rolling functionality.

2 Sliding Storage Drawers

The drawers can be placed on either side of the bed.



Smooth Rolling Wheels



Cut-out Handles

Image: Illustration of the two sliding storage drawers, highlighting the smooth rolling wheels and cut-out handles for easy access.

4. Step 4: Insert Drawers and Final Tightening.

Slide the assembled drawers under the bed frame. Once all components are in place, fully tighten all bolts and screws to ensure the bed frame is stable and secure.

Your browser does not support the video tag.


Video: Official KOMFOTT video demonstrating the features of the Wood Bed Frame with 2 Storage Drawers, including the headboard, footboard, and drawer functionality.

OPERATING INSTRUCTIONS

The KOMFOTT bed frame is designed for straightforward use.

- **Mattress Placement:** Place your twin mattress directly onto the wooden slats. The embedded design of the frame and raised footboard will help prevent the mattress from slipping.
- **Using Storage Drawers:** The two drawers can be positioned on either side of the bed. Pull the cut-out handles to open and push to close. The smooth rolling wheels facilitate easy access.

Selected Material

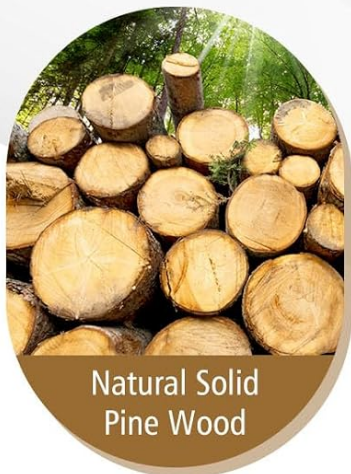

Natural Solid
Pine Wood



Safe Painting



Fine
Craftsmanship

Image: A fully assembled KOMFOTT Twin Wood Bed Frame with a mattress and the two storage drawers pulled out, showing clothes and other items stored inside.

MAINTENANCE AND CARE

Proper care will extend the life of your bed frame.

- **Cleaning:** Wipe the bed frame with a damp cloth to remove dust and dirt. Avoid harsh chemicals or abrasive cleaners.
- **Hardware Check:** Periodically inspect all bolts and screws to ensure they remain tight. Retighten as necessary to maintain stability.
- **Drawer Maintenance:** Keep the drawer wheels free of debris to ensure smooth operation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Bed frame feels wobbly or unstable.	Loose hardware. Uneven floor surface.	Check and tighten all bolts and screws. Ensure the bed is on a level surface; use shims if necessary.
Mattress slides on the frame.	Mattress not properly seated.	Ensure the mattress is centered and fully within the frame's embedded design. The raised footboard should prevent significant movement.
Drawers do not slide smoothly.	Debris in wheels or tracks. Overloaded drawers.	Clean wheels and area under the bed. Reduce the weight in the drawers.
Missing parts during assembly.	Packaging error.	Contact KOMFOTT customer support with your model number and purchase details.

SPECIFICATIONS

- **Model:** 10561-HU-KT
- **Brand:** KOMFOTT
- **Size:** Twin
- **Color:** White
- **Material:** Solid Pine Wood
- **Product Dimensions:** 80"L x 43"W x 36.5"H
- **Weight Limit:** 350 lbs
- **Item Weight:** 69.5 lbs
- **Mattress Thickness:** 5" - 8" (No Box Spring Required)
- **Features:** 2 Storage Drawers, Headboard, Embedded Mattress Design
- **Assembly Required:** Yes

WARRANTY AND SUPPORT

For warranty information, missing parts, or technical assistance, please contact KOMFOTT customer support. Keep your purchase receipt and model number (10561-HU-KT) readily available for faster service.

Contact Information: Refer to the contact details provided with your purchase or visit the official KOMFOTT website.

