

BASENOR 2024 2025 Tesla Model 3

Instruction Manual

UPGRADED MUD FLAPS SPLASH GUARDS FENDERS

BASENOR for 2024-2025 Tesla Model 3 Highland

1. PRODUCT OVERVIEW

The BASENOR Mud Flaps are an essential accessory designed to protect the lower part of your 2024-2025 Tesla Model 3 Highland from various road elements. They effectively safeguard against snow, mud, dust, gravel, sand, and wheel debris. This protection helps prevent premature rusting of critical components like the tie rod and ball head, reducing the need for frequent car washes and paint jobs, and ultimately increasing the lifespan of your Tesla.

These mudguards are built with durable PP+TPE composite material, ensuring exceptional longevity and resistance to extreme weather conditions. Their custom-made design utilizes original vehicle hole locations, allowing for a seamless, mark-free installation without the need for drilling or tape.



Figure 1: BASENOR Mud Flaps for Tesla Model 3 Highland.

2. WHAT'S IN THE BOX

- 4 x Tesla Model 3 Mud Flaps Splash Guards (2 Front, 2 Rear)
- 1 x User Guide
- Installation Accessories (screws, clips, protective film)

PACKAGE



Figure 2: Package Contents.

3. SETUP & INSTALLATION

Installation of the BASENOR Mud Flaps is designed to be straightforward and can be completed without professional assistance. The mud flaps are custom-fit for the 2024-2025 Tesla Model 3 Highland and utilize existing factory holes, eliminating the need for drilling or adhesive tape.

Preparation:

- Ensure the installation area is clean and free of dirt or debris.
- For front wheel installation, turn the steering wheel to the left to provide ample space for access.

- Identify the correct mud flap for each wheel (Front Left, Front Right, Rear Left, Rear Right) by checking the markings on the back of each flap.

Installation Steps:

Front Mud Flaps:

1. Locate the existing three screws on the fender liner near the wheel.
2. Carefully remove these three original Tesla screws.
3. Peel off the included protective film and apply it to the edge of the vehicle's paint where the mud flap will meet the body. This prevents potential paint damage.
4. Align the front mud flap with the factory holes. Ensure a snug fit against the vehicle body.
5. Secure the mud flap by inserting and tightening the new screws provided in the kit into the aligned holes.

ALL WEATHER PROTECTION



Figure 3: No Drilling, No Sticker Installation.

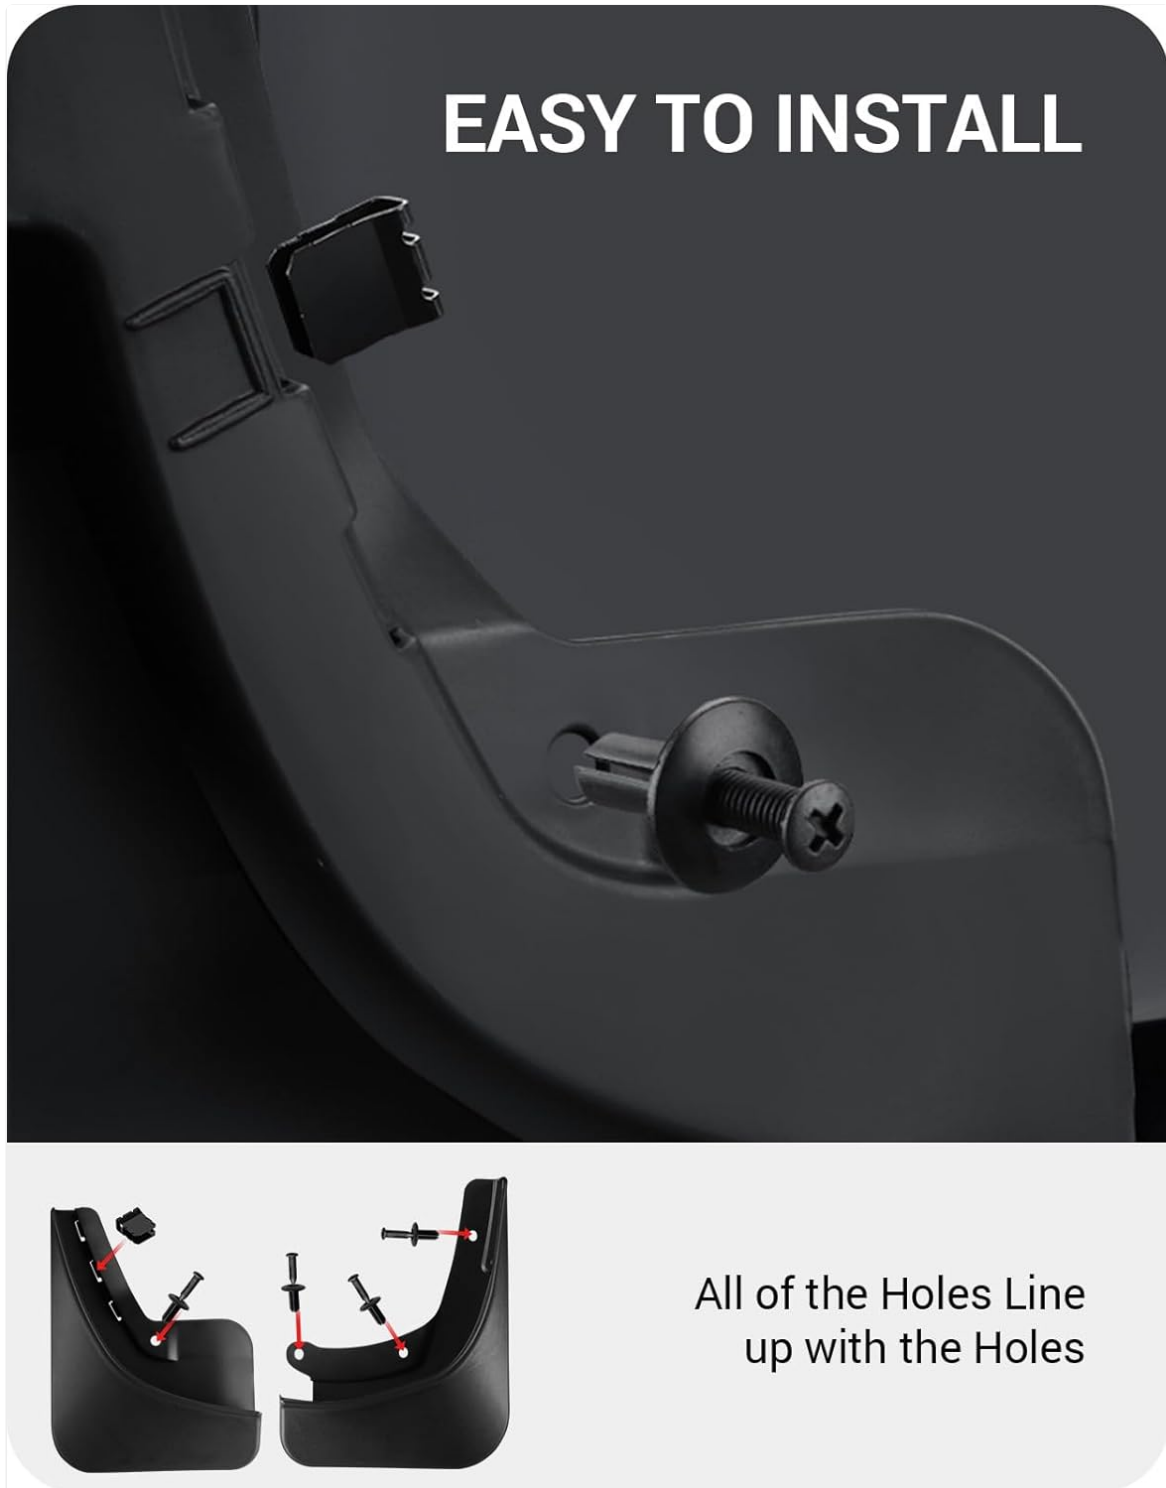


Figure 4: Easy Installation with Aligned Holes.

Rear Mud Flaps:

1. Locate the existing screw on the fender liner near the rear wheel.
2. Carefully remove this original Tesla screw.
3. Peel off the included protective film and apply it to the edge of the vehicle's paint where the mud flap will meet the body.
4. Align the rear mud flap with the factory hole. Ensure a snug fit.
5. Secure the mud flap by inserting and tightening the new screw provided in the kit into the aligned hole. Additionally, secure the mud flap using the provided metal clip at the top for enhanced stability.

Installation Videos:

Video: No Drilling or Tape Required Installation

Your browser does not support the video tag.

This video demonstrates the simple, drill-free installation process for the BASENOR mud flaps, highlighting how they utilize existing vehicle points for a secure fit.

Video: Extremely Easy Install and They Look Great

Your browser does not support the video tag.

Watch this video for a step-by-step guide on installing the mud flaps, showcasing their ease of application and the resulting aesthetic improvement to your Tesla.

4. OPERATING PRINCIPLES

The BASENOR Mud Flaps are designed to extend the coverage of your vehicle's wheel wells, effectively deflecting road debris, water, mud, and snow that are kicked up by the tires. This protective barrier minimizes the impact of these elements on your vehicle's paintwork and undercarriage, preserving its condition and reducing the need for frequent cleaning.

Their design ensures optimal clearance from the ground, preventing interference with speed bumps or uneven terrain under normal driving conditions, while still providing maximum protection.

NO DRILLING NO STICKER



BASENOR
for: 24 M3
RR

Tips to Simplify Installation

Figure 5: All-Weather Protection provided by mud flaps.



Figure 6: Mud flaps maintaining safe distance from the ground.

SUSTAINABLE DESIGN FOR A GREENER FUTURE

100% Recycled
Materials



- *Made with eco-friendly PP+TPE
- *Our product features 100% recycled material
- *A sustainable choice for your Tesla and our planet

Figure 7: Visual comparison of vehicle cleanliness with mud flaps.

5. MAINTENANCE

To ensure the longevity and continued effectiveness of your BASENOR Mud Flaps, regular maintenance is recommended:

- **Cleaning:** Wash the mud flaps regularly with soap and water, especially after driving in muddy, snowy, or dusty conditions. This prevents buildup that could affect their performance or appearance.
- **Inspection:** Periodically inspect the mud flaps for any signs of wear, cracks, or damage. Check that all screws and clips remain securely fastened.

- **Protective Film:** While the included protective film helps prevent paint damage, it's advisable to occasionally check its condition and replace it if it shows significant wear or peeling.

6. TROUBLESHOOTING

If you encounter any issues with your BASENOR Mud Flaps, consider the following:

- **Loose Fit:** If a mud flap feels loose, re-tighten the screws and ensure the clips are properly seated. Over time, vibrations can cause fasteners to loosen.
- **Damage from Obstacles:** While designed for durability, extreme impacts with curbs, speed bumps, or rough terrain can cause damage. Inspect the mud flap for cracks or breaks. If severely damaged, replacement may be necessary.
- **Incorrect Model Fit:** Ensure you have the correct mud flaps for your specific Tesla Model 3 Highland (2024-2025). Mud flaps designed for other Model 3 or Model Y years may not fit perfectly.

If troubleshooting steps do not resolve the issue, please refer to the Warranty & Support section for further assistance.

7. SPECIFICATIONS

Attribute	Detail
Brand	BASENOR
Model	2024 2025 Tesla Model 3
Color	Black
Material	PP+TPE Composite
Installation Type	Screw-In (No Drilling Required)
Item Weight	1.1 pounds
Package Dimensions	13.39 x 8.35 x 3.78 inches
Manufacturer Part Number	CA365

8. WARRANTY & SUPPORT

BASENOR is committed to providing high-quality products and customer satisfaction. Should you encounter any issues or require assistance with your mud flaps, our dedicated service professionals are available to help.

For support, please visit the official BASENOR store on Amazon or contact their customer service

directly through the contact information provided with your product packaging.

Online Store: [BASENOR Store on Amazon](#)

© 2024 BASENOR. All rights reserved.