Feonase 620A1

Feonase Full Size Bed Frame with Upholstered Wingback Headboard Instruction Manual

Model: 620A1 | Brand: Feonase

1. Safety Information

Always follow the assembly instructions carefully to avoid injury. Be cautious of sharp edges when handling the bed frame. Do not exceed the maximum weight capacity of 1000 lbs.

2. Package Contents

Ensure all components are present before beginning assembly. The package includes:

- Headboard
- Metal Bed Frame components
- Wooden Slats
- Installation Tools & Accessories (screws, bolts, Allen wrench)
- Installation Manual (this document)



Image: Complete Feonase Full Size Bed Frame with Upholstered Wingback Headboard in Dark Gray.

3. Product Specifications

Model Number	620A1
Size	Full
Color	Dark Gray
Material	Fabric (Linen), Wood, Iron
Product Dimensions	77"L x 54"W x 48"H
Weight Limit	1000 Pounds
Item Weight	70 Pounds

Under-Bed Clearance	8 Inches
Box Spring Required	No



Image: Diagram showing the dimensions (77"L x 54"W x 47"H, 14" frame height, 8" under-bed clearance) and 1000 lbs weight capacity of the Full Size bed frame.

4. Setup and Assembly

Assembly is designed to be straightforward. All necessary tools and hardware are included. It is recommended to assemble with two people.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches. Verify all parts against the included parts list.
2. **Assemble Headboard:** Attach the wingback sides to the main headboard panel using the provided hardware. Ensure all connections are secure.
3. **Assemble Side Rails:** Connect the side rails to the assembled headboard and footboard (if applicable) using the provided bolts. Do not fully tighten bolts until the entire frame is assembled.

4. **Install Center Support:** Attach the center support beam(s) to the frame.
5. **Place Wooden Slats:** Position the wooden slats across the bed frame. The slats are designed with Velcro for easy installation and to prevent movement and noise.
6. **Final Tightening:** Once all components are in place and aligned, fully tighten all bolts and screws.
7. **Add Mattress:** Place your mattress directly onto the wooden slats. A box spring is not required.



Image: Detail showing sturdy wooden slats and thick side legs for enhanced support and stability.

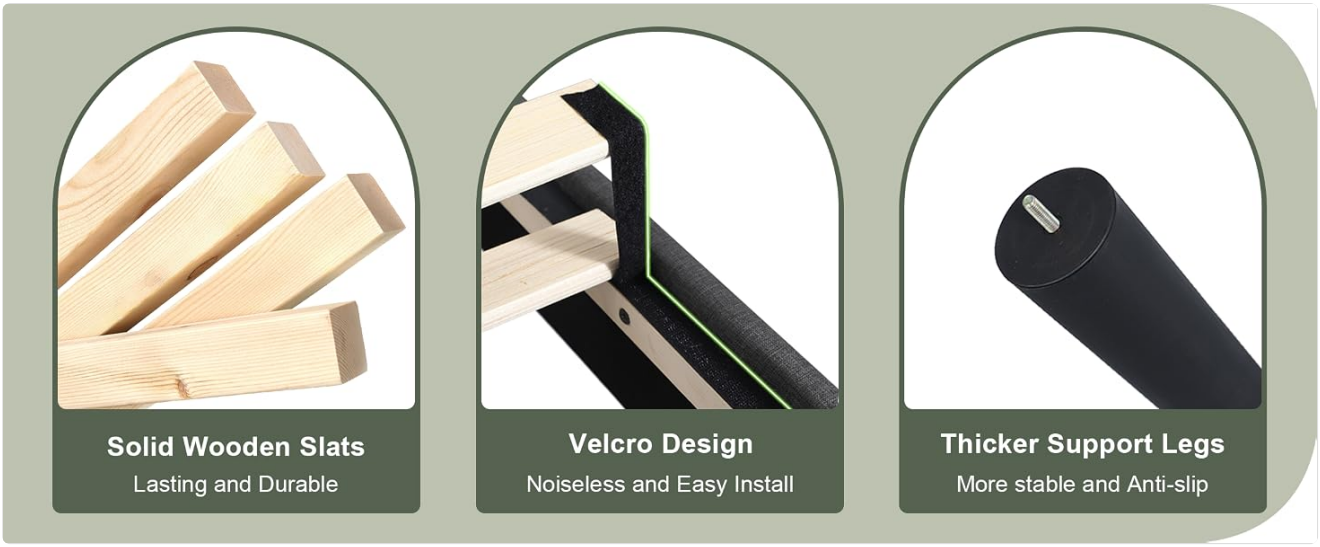


Image: Visual representation of solid wooden slats, Velcro design for noiseless and easy installation, and thicker support legs for stability.

Your browser does not support the video tag.

Video: An overview of the Feonase bed frame features, including the upholstered wingback headboard, under-bed storage, and sturdy construction. This video highlights the comfort and design aspects of the bed.

5. Usage Guidelines

- **Mattress Compatibility:** This platform bed frame is designed for use without a box spring. Your mattress can be placed directly on the wooden slats.
- **Weight Capacity:** The bed frame supports a maximum weight of 1000 lbs. Do not exceed this limit to ensure structural integrity and safety.
- **Under-Bed Storage:** The 8-inch clearance beneath the bed provides convenient space for storage.
- **Headboard Features:** The upholstered wingback headboard offers a comfortable backrest and features a 4-inch platform for placing small items like phones or clocks.



Image: Illustration of the 8-inch height off the ground, indicating space for easy cleaning and storage underneath the bed frame.

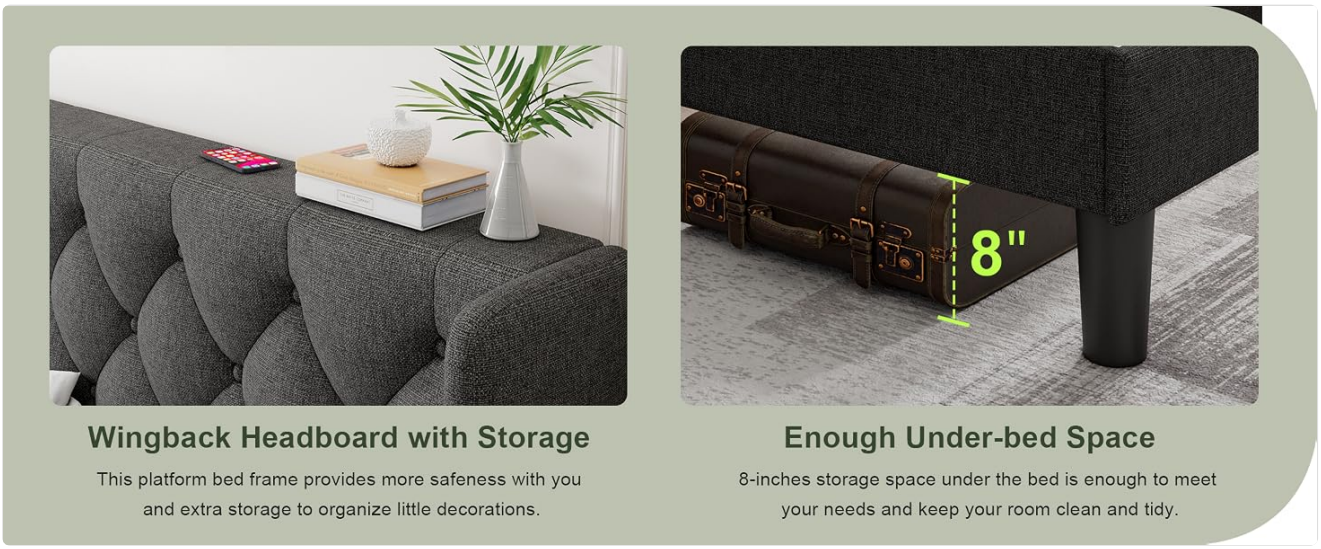


Image: Visual highlighting the wingback headboard with a small storage platform and the generous 8-inch under-bed storage space.

6. Care and Maintenance

- **Upholstery Care:** The linen upholstery should be dry cleaned only. Avoid using harsh chemicals or abrasive cleaners.
- **Frame Cleaning:** Wipe the metal and wood components with a soft, damp cloth. Avoid excessive moisture.
- **Regular Inspection:** Periodically check all bolts and connections to ensure they remain tight. Re-tighten if necessary to maintain stability and prevent noise.

7. Troubleshooting

- **Noise/Creaking:**
  - Ensure all bolts are securely tightened.
  - Verify that the wooden slats are properly seated and the Velcro strips are engaged. The EVA mute bar is designed to reduce noise.
- **Instability:**
  - Check all frame connections and ensure they are fully tightened.
  - Confirm that the bed is placed on a level surface.
- **Missing Parts:** If any parts are missing or damaged upon arrival, please contact customer support immediately.



Image: Detail showing the EVA mute bar and Velcro design on the wooden slats, engineered to provide a stable and quiet sleeping environment.

8. Warranty and Customer Support

For warranty information, product support, or to report missing/damaged parts, please refer to the contact information provided at the point of purchase or visit the official Feonase website.
Feonase is committed to providing quality products and customer satisfaction.

Your browser does not support the video tag.

Video: A promotional video showcasing the Feonase bed frame with upholstered wingback headboard, highlighting its design and features for a comfortable sleep experience.

© 2023 Feonase. All rights reserved.