

IK.991.323.08

MALM Bed Frame with Storage - User Manual

Model: IK.991.323.08 | Brand: Generic

1. INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your MALM Bed Frame with Storage. Designed for comfort and practicality, this bed frame features ample storage space neatly hidden under the bed in two large drawers, ideal for storing duvets, pillows, and bedding. Please read this manual thoroughly before assembly and use to ensure proper installation and safe operation.



Figure 1.1: MALM Bed Frame with Storage, showcasing the integrated drawer system.

2. SAFETY INFORMATION

- Always follow assembly instructions carefully. Incorrect assembly can lead to instability and injury.
- Ensure all screws and fittings are tightened securely. Re-tighten periodically as needed.
- Do not stand or jump on the bed frame.

- Keep small parts away from children during assembly to prevent choking hazards.
- Use the bed frame only for its intended purpose as a sleeping surface and storage unit.
- Place the bed frame on a level surface to prevent wobbling.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Bed Frame Components (Headboard, Footboard, Side Rails)
- Slats (Luröy type)
- 2 Storage Containers (Drawers)
- Assembly Hardware (screws, dowels, cam locks, etc.)

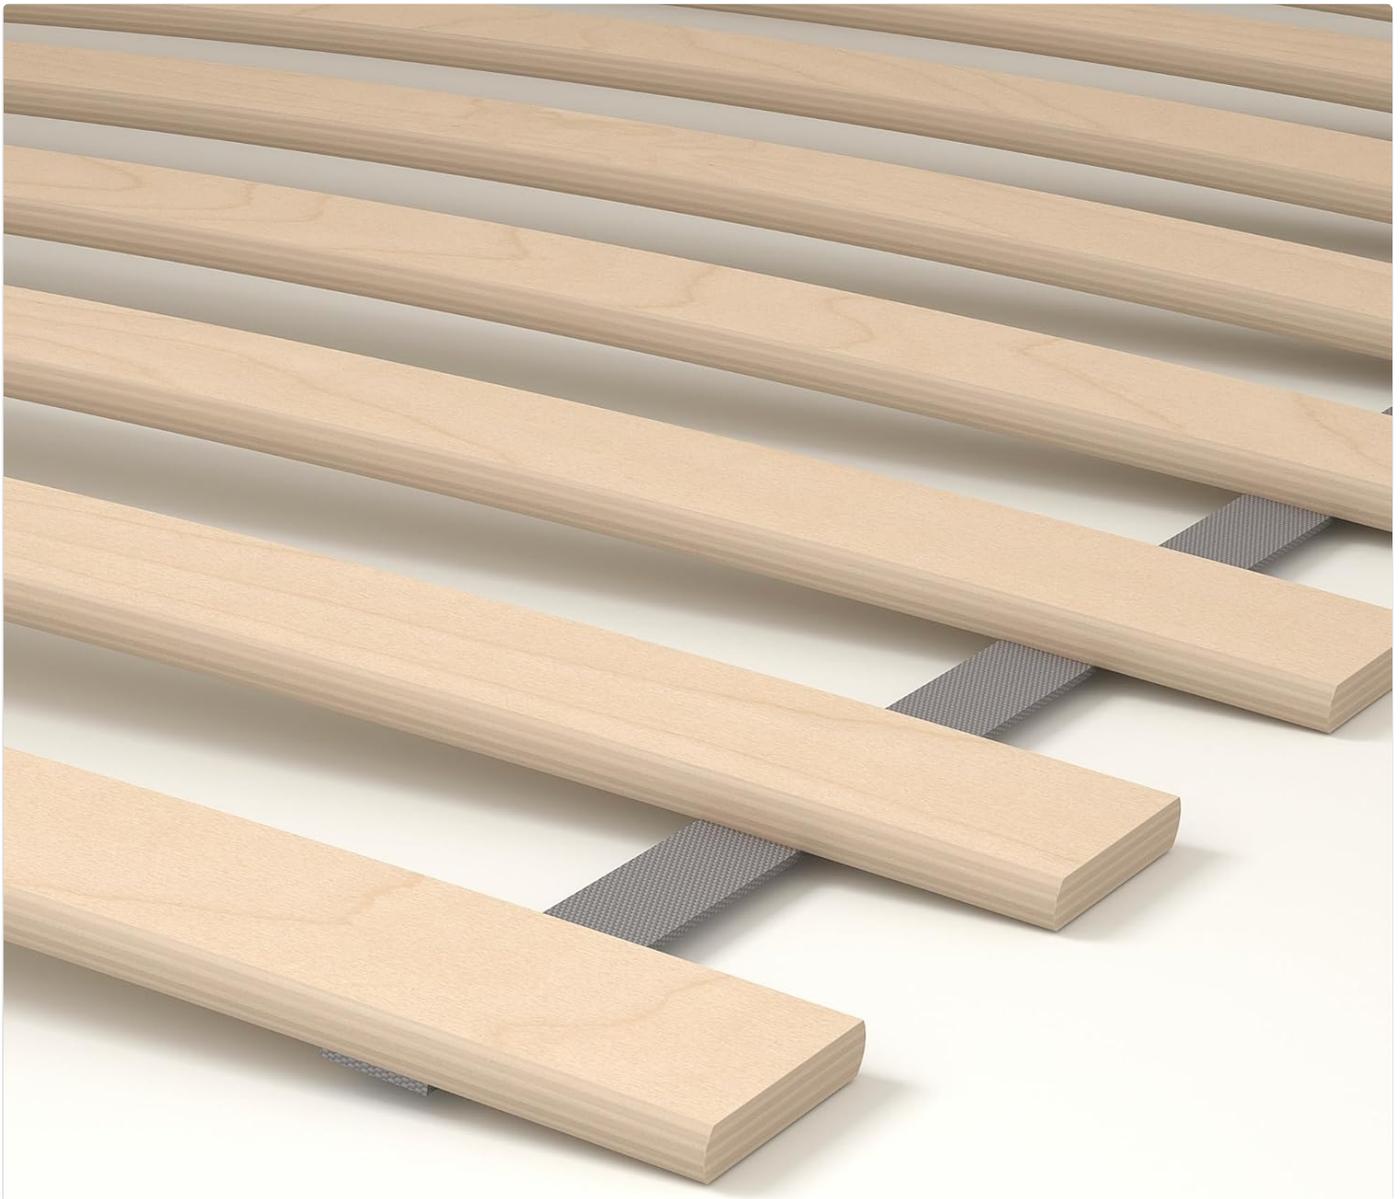


Figure 3.1: Detail of the Luröy slats, a key component for mattress support.

4. SETUP AND ASSEMBLY

Assembly of the MALM Bed Frame is required. It is recommended to have two people for assembly. Please refer to the included graphical instructions for detailed steps. The general assembly process involves:

1. **Prepare the Area:** Clear a spacious area for assembly.
2. **Assemble the Headboard and Footboard:** Attach the side rails to the headboard and footboard using the provided hardware.
3. **Install Center Support Beam:** Secure the center support beam (if applicable) to the bed frame.
4. **Place the Slats:** Lay the Luröy slats across the bed frame, ensuring they are evenly spaced and secured according to instructions.
5. **Assemble the Storage Drawers:** Construct the two storage drawers. Attach wheels to the bottom of the drawers.
6. **Insert Drawers:** Slide the assembled drawers into the designated spaces under the bed frame.

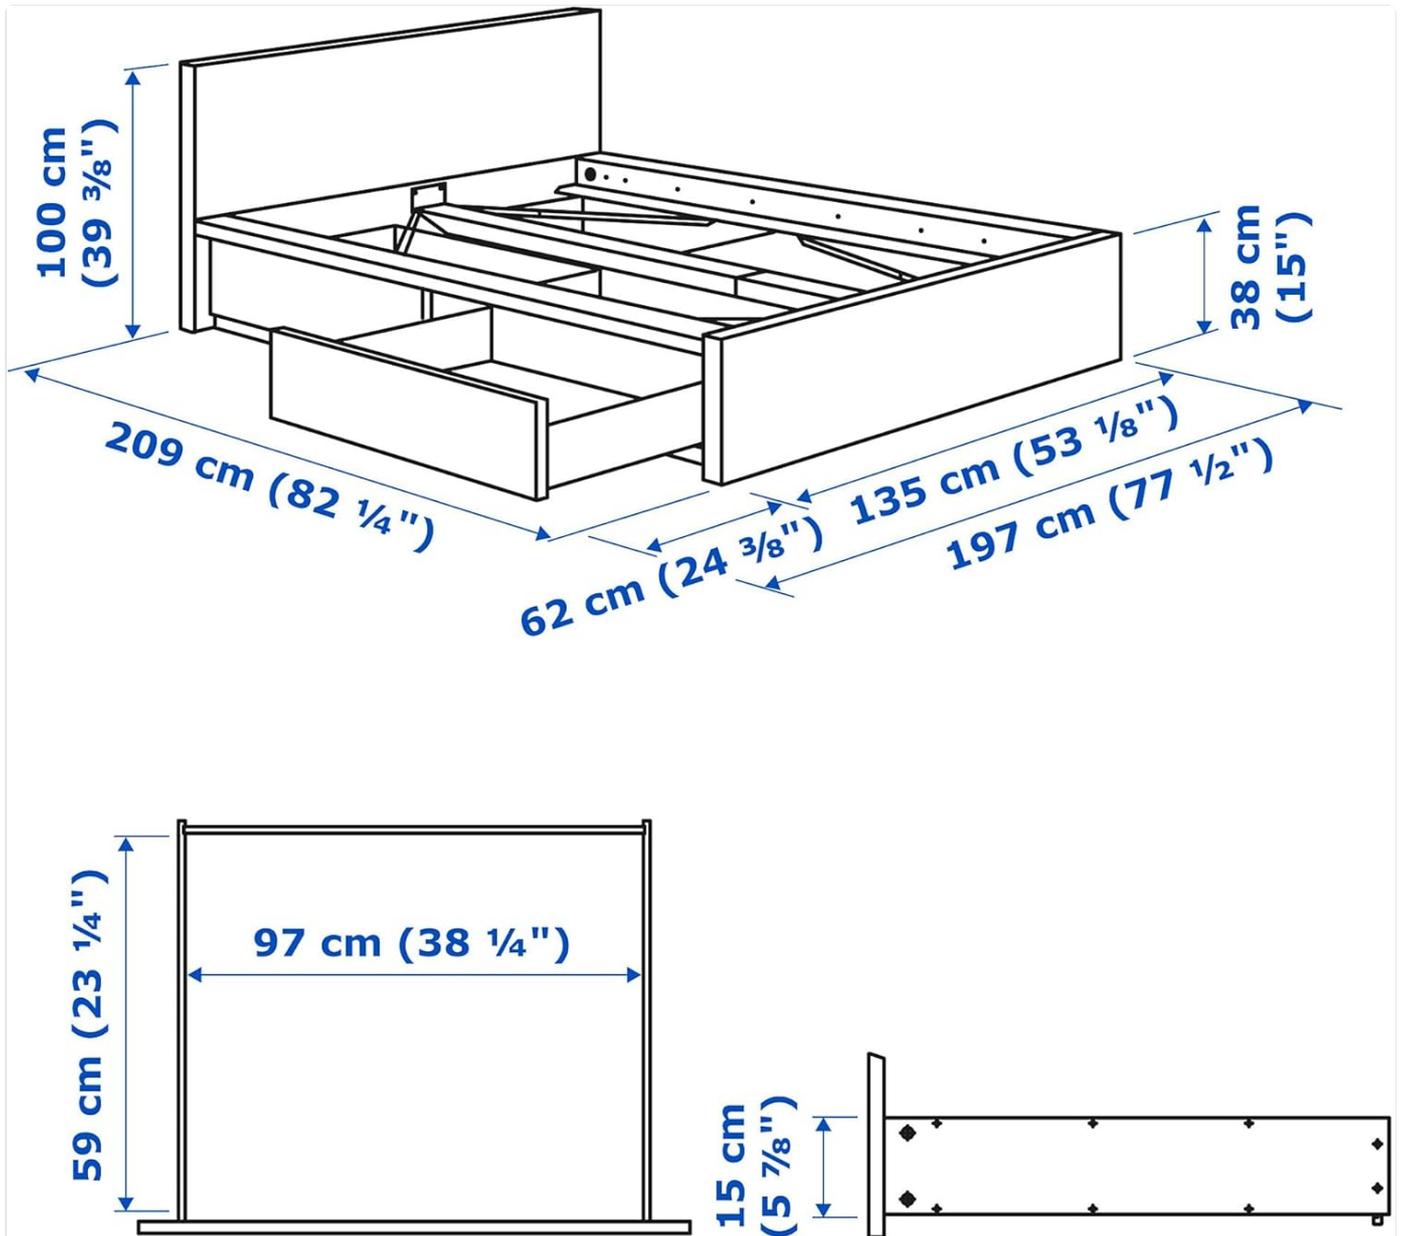


Figure 4.1: Dimensional overview of the bed frame, crucial for planning placement and assembly.



Figure 4.2: The MALM bed frame assembled in a bedroom environment.

5. OPERATING INSTRUCTIONS

The primary operational feature of this bed frame is its integrated storage. The two large drawers are designed for easy access and efficient storage.

- **Accessing Storage:** Gently pull the drawer handles to slide the storage containers out from under the bed. The wheels on the bottom of the drawers ensure smooth movement.
- **Storing Items:** Place items such as duvets, pillows, bedding, or other soft goods neatly inside the drawers. Avoid overfilling to prevent damage to the drawers or difficulty in closing.
- **Closing Storage:** Push the drawers back under the bed until they are fully concealed.



Figure 5.1: The storage drawer in use, demonstrating its capacity for bedding and other items.

6. MAINTENANCE

Regular maintenance will help prolong the life and appearance of your bed frame.

- **Cleaning:** Wipe the bed frame surfaces with a damp cloth and a mild cleaner. Dry immediately with a clean cloth. Avoid abrasive cleaners or harsh chemicals.
- **Hardware Check:** Periodically check all assembly hardware (screws, bolts) and re-tighten if necessary to maintain stability.
- **Drawer Rails:** Keep the drawer runners free of dust and debris to ensure smooth operation.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration of the wood veneer.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Bed frame wobbles or creaks.	Loose hardware; uneven floor.	Tighten all screws and bolts. Ensure the bed is on a level surface; use shims if necessary.
Drawers are difficult to open/close.	Debris in runners; overloaded drawer; misaligned drawer.	Clean drawer runners. Reduce contents in drawer. Check drawer assembly and alignment.
Slats sag or break.	Excessive weight; improper installation.	Ensure weight limits are not exceeded. Re-install slats correctly. Replace damaged slats.

8. SPECIFICATIONS

Feature	Detail
Model Name	MALM Bed Frame, High, with 2 Storage Boxes
Model Number	IK.991.323.08
Brand	Generic
Material	White Stained Oak Veneer
Mattress Size (Recommended)	120 cm (Width) x 200 cm (Length)
Assembled Length	211 cm (83 1/8")
Assembled Width	135 cm (53 1/8")
Assembled Height (Headboard)	100 cm (39 3/8")
Assembled Height (Footboard)	38 cm (15")
Drawer Internal Height	15 cm (5 7/8")
Drawer Internal Width	97 cm (38 1/4")
Drawer Internal Depth	59 cm (23 1/4")
Assembly Required	Yes
Included Components	Slats, Storage Containers

9. WARRANTY AND SUPPORT

This product is manufactured by ProTuning under the Generic brand. For any questions regarding assembly, missing parts, or product defects, please contact the seller or manufacturer directly. Specific warranty details may vary by retailer and region.

Please retain your proof of purchase for any warranty claims.

Important Note for International Customers: For customers ordering from countries outside the EU, please be aware that you may be subject to import duties and taxes. Please check with your local post or tax office for import regulations before purchase.

