

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [vidaXL](#) /

› [vidaXL Sonoma Oak Bed Frame 180 x 200 cm - Instruction Manual](#)

vidaXL 842002

vidaXL Sonoma Oak Bed Frame 180 x 200 cm - Instruction Manual

Model: 842002

INTRODUCTION

This manual provides essential instructions for the safe assembly, proper use, and maintenance of your vidaXL Sonoma Oak Bed Frame (Model 842002). Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Figure 1: Assembled vidaXL Sonoma Oak Bed Frame with bedding, showcasing its modern design.

SAFETY INFORMATION

- Ensure all components are present and undamaged before assembly. Do not proceed with assembly if any parts are missing or damaged.
- Assemble the bed frame on a soft, clean surface to prevent scratches.
- Use only the provided hardware. Substituting hardware may compromise the structural integrity of the bed frame.
- Tighten all fasteners securely, but do not overtighten, as this may damage the engineered wood.
- Regularly check all connections to ensure they remain tight.
- This bed frame is designed for use with a mattress of the specified dimensions (180 x 200 cm). Do not use a mattress that is too small or too large.
- Keep small parts away from children during assembly to prevent choking hazards.

PARTS LIST

Before assembly, verify that all the following components are included in your package:

- Headboard/Footboard Panels (Engineered Wood)
- Side Rails (Engineered Wood)
- Plywood Slats
- Center Support Beam (if applicable)
- Assembly Hardware (screws, bolts, dowels, etc.)



Figure 2: Front view of the bed frame, illustrating the main structural components and slat system.

SETUP AND ASSEMBLY

Assembly typically requires two adults. Please follow these steps:

1. **Unpack and Identify Parts:** Carefully unpack all components and lay them out on a clean, soft surface. Refer to the parts list to ensure everything is present.
2. **Assemble Side Rails:** Attach the side rails to the headboard and footboard panels using the provided hardware. Ensure all connections are secure.
3. **Install Center Support (if applicable):** If your model includes a center support beam, install it now according to the instructions. This provides additional stability for the slats.
4. **Place Slats:** Lay the plywood slats across the bed frame, ensuring they are evenly spaced and securely seated within the designated supports. Some slats may require fastening with screws.
5. **Final Tightening:** Once all components are in place, gently re-tighten all screws and bolts to ensure maximum stability. Do not overtighten.



Figure 3: Close-up of a corner joint, demonstrating the secure fastening of the engineered wood panels during assembly.



Figure 4: Close-up view of the sturdy plywood slats, designed for optimal mattress support and weight distribution.

OPERATING AND USAGE

Once assembled, your bed frame is ready for use. Place a mattress of 180 x 200 cm (W x L) directly onto the plywood slats. The sturdy slats are designed to provide proper weight distribution and ensure the mattress remains in place.



Figure 5: Angled view of the vidaXL Sonoma Oak Bed Frame, showcasing its low-profile design and readiness for a mattress.

MAINTENANCE

- **Cleaning:** Wipe the engineered wood surfaces with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- **Inspection:** Periodically inspect all screws and bolts to ensure they are tight. Re-tighten if necessary.
- **Avoid Excessive Moisture:** Protect the bed frame from prolonged exposure to moisture or direct sunlight to prevent warping or discoloration.

TROUBLESHOOTING

- **Squeaking Noises:** Check all connections and tighten any loose screws or bolts. Ensure slats are properly seated.
- **Instability:** Verify that all components are correctly assembled and all fasteners are securely tightened. Ensure the bed frame is on a level surface.
- **Damaged Parts:** If any part is damaged during assembly or use, contact vidaXL customer support for replacement parts. Do not attempt to repair damaged structural components yourself.

SPECIFICATIONS

Feature	Detail
Brand	vidaXL
Model Number	842002
Color	Sonoma Oak
Bed Frame Material	Engineered Wood
Slats Material	Plywood
Overall Dimensions (L x W x H)	203 cm x 183 cm x 17 cm (79.92 x 72.05 x 6.69 inches)
Matchable Mattress Dimensions (W x L)	180 cm x 200 cm
Item Weight	29.9 Kilograms (65.8 pounds)
Assembly Required	Yes

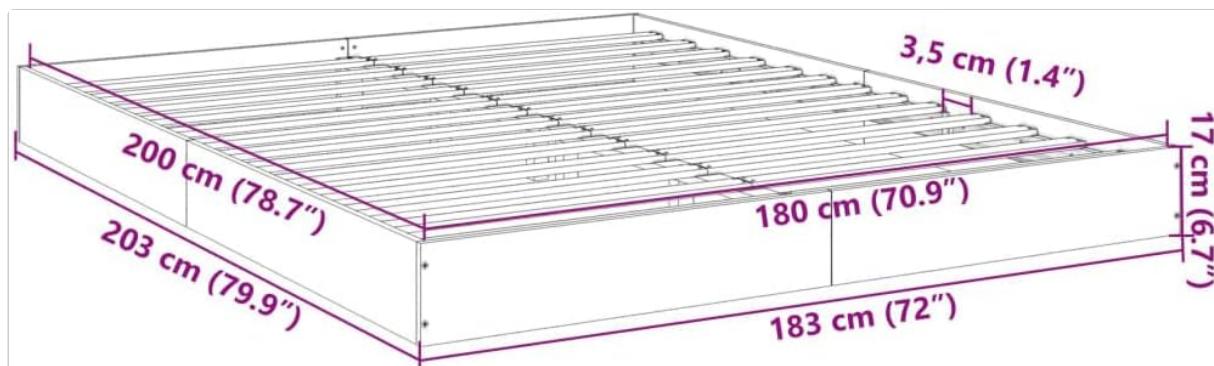


Figure 6: Technical diagram showing the precise dimensions of the bed frame for reference.

WARRANTY AND SUPPORT

For warranty information, replacement parts, or technical assistance, please contact vidaXL customer support. Keep your purchase receipt and model number (842002) readily available when contacting support.

Visit the official vidaXL store for more products and support:[vidaXL Store](#)

© 2026 vidaXL. All rights reserved.