



[Manuals.plus](#) /

> [SHOANED](#) /

> SHOANED 7 Inch Full Box Spring Instruction Manual

SHOANED BS703

SHOANED 7 Inch Full Box Spring Instruction Manual

Model: BS703

INTRODUCTION

This manual provides comprehensive instructions for the assembly, use, and maintenance of your SHOANED 7 Inch Full Box Spring. Designed for durability and comfort, this metal frame mattress foundation offers robust support for various mattress types, including innerspring, memory foam, and latex. Please read all instructions carefully before assembly and use to ensure proper setup and longevity of your product.



Image: The SHOANED 7 Inch Full Box Spring, featuring a grey fabric cover and a glimpse of its sturdy metal frame.

SAFETY INFORMATION

- Do not exceed the maximum weight capacity of 3000 pounds.
- Be cautious when handling and assembling the metal frame to avoid injury.
- Always follow the assembly instructions carefully to ensure stability and prevent collapse.
- Keep all small parts and packaging materials away from children during assembly.

PACKAGE CONTENTS

Before beginning assembly, ensure all parts listed below are present. Refer to the included instruction sheet for detailed part identification.

- Metal Frame Components (various bars and connectors)
- Fabric Cover (washable, with elastic bands)
- Hardware Kit (bolts, nuts, Allen wrench, small wrench)
- Assembly Instruction Sheet



Image: All metal frame components, hardware, and the instruction manual are neatly laid out for assembly.

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly is designed to be straightforward. All necessary tools are included, but a power drill with appropriate bits can expedite the process. Ensure all slat holes face upwards during initial frame assembly.

Step 1: Assemble the Outer Frame

1. Lay out the main frame pieces on a clean, flat surface.
2. Connect the corner pieces using the provided bolts and nuts. Ensure all slat holes are facing upwards.
3. Securely tighten all connections with the Allen wrench or a power drill.

Your browser does not support the video tag.

Video: Step-by-step installation guide for the box spring frame, demonstrating how to connect the main components.



Image: Visual guide for connecting the frame sections, highlighting the correct orientation for the slat attachments.

Step 2: Install the Support Slats

1. Insert the metal support slats into the designated slots on the frame.
2. Press down firmly until each slat is securely in place.



Image: The metal frame with all support slats installed, forming a complete and sturdy base.

Step 3: Attach the Fabric Cover

1. Unfold the fabric cover and align it over the assembled metal frame.
2. Pull the elasticized corners of the cover over the frame, similar to putting a fitted sheet on a mattress.
3. Ensure the cover is taut and smooth across the entire frame.

ELASTIC BAND COVER

- Easy to put on & take off
- Anti-mattress sliding
- Protect the mattress
- Easy to clean



Image: Demonstrating the easy installation of the elastic band cover onto the box spring frame.

Your browser does not support the video tag.

Video: A quick demonstration of how to place the fabric cover over the assembled box spring frame.

USAGE GUIDELINES

- Place the assembled box spring on a compatible bed frame or directly on the floor.
- The box spring is compatible with various mattress types, including innerspring, memory foam, and latex mattresses.
- Ensure the mattress is centered on the box spring for even weight distribution and optimal support.
- The heavy-duty metal construction supports up to 3000lbs, providing a reliable sleep foundation.



Image: Illustration of the proper layering for a bed setup: bed frame, box spring, and mattress.

MAINTENANCE

- The fabric cover is washable and can be easily removed for spot cleaning.
- Regularly check all bolts and connections to ensure they remain tight for optimal stability.
- Avoid using harsh chemicals or abrasive cleaners on the metal frame. Wipe with a damp cloth if needed.

TROUBLESHOOTING

Noise Issues:

- If the box spring produces noise, check all frame connections and ensure bolts are securely tightened.
- The silent design minimizes noise, but loose connections can cause squeaking.

Stability Concerns:

- Ensure the box spring is placed on a flat, even surface.
- Verify that all metal slats are fully inserted and locked into their respective brackets.

SPECIFICATIONS

Model Number	BS703
Size	Full
Product Dimensions	74.5"L x 53.5"W x 7"H
Material	Metal
Weight Capacity	3000 lbs
Special Features	Squeak Resistant, Easy Clean Cover
Assembly Required	Yes

SHOANED Box Springs

FULL



In One Carton



Noise Free

**3000
Lbs**

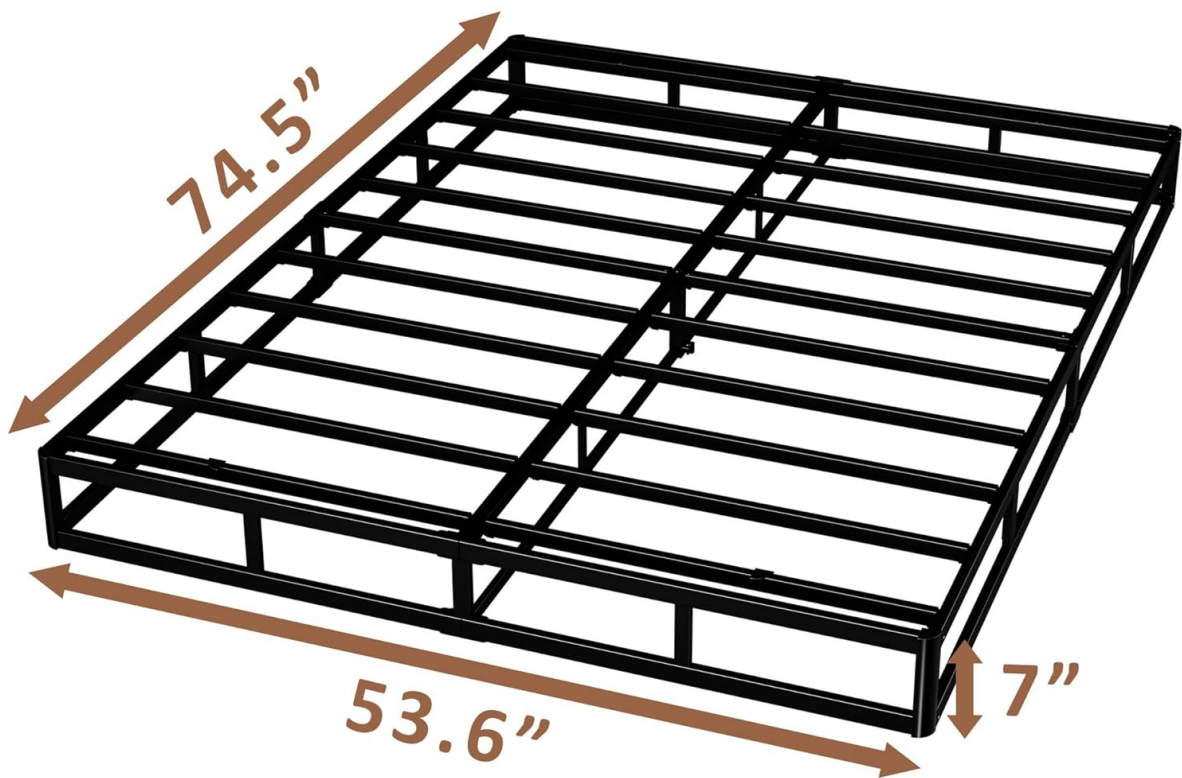


Image: Key features and dimensions of the SHOANED Full Box Spring.

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided with your product packaging or visit the official SHOANED website. Keep your purchase receipt for any warranty claims.

