

Soman Z8-Anti Fog Pinlock

Soman Anti-Fog Film Instruction Manual

For RF-1400, CWR-F2, Z8, X15, NXR2 Helmet Visors

1. PRODUCT OVERVIEW

The Soman Anti-Fog Film is designed to prevent fogging on compatible helmet visors, ensuring clear vision during various riding conditions. This film utilizes advanced technology to maintain visibility and enhance safety.

2. PRODUCT COMPATIBILITY

This anti-fog film is specifically designed for and compatible with the following helmet models:

- RF-1400
- Z8
- CWR-F2
- NXR2
- X15

Important Note: This anti-fog film is NOT compatible with RF-1200 helmets.

COMPATIBLE WITH RF1400 CWR-F2 Z8 X15 NXR2 HELMETS

Attention: These anti-fog films don't fit RF1200 helmets.



This image displays the Soman anti-fog film alongside two compatible helmet models, the RF-1400 and Z8, highlighting the film's design and intended use.

3. WHAT'S INCLUDED

Each package contains:


- One Soman RF-1400 Helmet Anti-fog Film

4. INSTALLATION GUIDE

Follow these steps carefully for proper installation of your Soman anti-fog film:

1. **Prepare Your Visor:** Ensure your helmet visor is clean and free of dust, dirt, or smudges. Use a smooth, lint-free cloth for cleaning.
2. **Position the Film:** Carefully align the anti-fog film with the inside of your helmet visor. The film has specific pins that should match the pinlock system on your visor.
3. **Secure and Flatten:** It is crucial to stick one side of the anti-fog film first. Then, apply gentle but firm pressure to flatten the film completely across the visor, ensuring it is stretched to a 180-degree angle. This ensures a tight seal and proper fit. Do not flatten the visor only slightly, as this may cause the film to be longer than the pins. The Soman RF-1400 visor replacements are made from Polycarbonate, designed to withstand this flattening process.
4. **Remove Protective Layer:** Once the film is securely in place and fully flattened, carefully remove the yellow protective layer from the surface of the anti-fog film.

INSTRUCTIONS

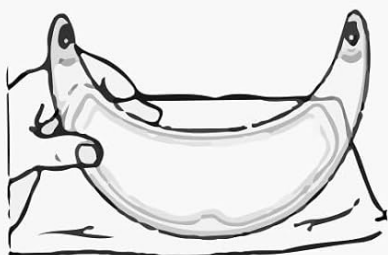

01

Ensure your helmet is RF1400, CWR-F2, Z8, X15 and NXR2.

02

Put the anti-fog film on your helmet visor



03

Get the anti-fog films stuck tight in the pinlock



04

Tear off surface film



This image illustrates the four key steps for installing the Soman anti-fog film onto your helmet visor.

Installation Videos:

Installation on RF1400 Visor Replacement:

Your browser does not support the video tag.

This video provides a visual guide for installing the Soman DSK304 anti-fog film onto an RF1400 visor replacement, detailing each step of the process.

Installation on OEM RF1400 Visor:

Your browser does not support the video tag.

This video illustrates the correct procedure for installing the Soman DSK304 anti-fog film onto an original equipment manufacturer (OEM) RF1400 visor.

5. OPERATING INSTRUCTIONS

Once installed, the Soman anti-fog film operates passively to prevent condensation on your helmet visor. No specific user action is required for its anti-fog properties to function. Simply ensure the film is clean and properly sealed to the visor for optimal performance.

6. MAINTENANCE

To ensure the longevity and effectiveness of your anti-fog film:

- **Cleaning:** Clean the anti-fog film with a soft, damp microfiber cloth. Avoid abrasive materials or harsh chemical cleaners, as these can damage the film's surface.
- **Handling:** The film material is soft. Handle it with care during installation and cleaning to prevent scratches.
- **Storage:** If removing the film for storage, ensure it is clean and stored flat in a protective pouch to prevent damage.

7. TROUBLESHOOTING

- **Issue: Film does not fit correctly or fogs up.**
Solution: Re-check the compatibility of your helmet visor with the listed models. Ensure the film was installed by first sticking one side and then flattening it completely to a 180-degree angle across the visor. An improper seal can lead to fogging.
- **Issue: Residue left after removing the protective yellow film.**
Solution: Gently clean any residue with a soft, damp microfiber cloth. Avoid excessive pressure or harsh rubbing.
- **Issue: Film scratches easily.**
Solution: The film is made from polycarbonate and is designed to be flexible. However, it is a soft material. Always use a clean, soft microfiber cloth for cleaning and avoid contact with sharp or abrasive objects.

8. SPECIFICATIONS

Attribute	Detail
Brand	Soman
Model	Z8-Anti Fog Pinlock
Item Weight	3.2 ounces
Package Dimensions	12.64 x 5.04 x 0.55 inches
Material	Polycarbonate

9. WARRANTY AND SUPPORT

For information regarding product warranty or technical support, please refer to the product packaging or contact Soman customer service directly through their official website or the retailer where the product was purchased. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D3TKQ7P6>

More documents and user manuals: <https://manuals.plus/>