

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BarnFurin](#) /

› [BarnFurin Queen Size Boucle Upholstered Platform Bed Frame R958 User Manual](#)

BarnFurin R958

BarnFurin Queen Size Boucle Upholstered Platform Bed Frame User Manual

MODEL: R958

1. IMPORTANT SAFETY GUIDELINES

Please read and understand all instructions before assembly and use. Keep this manual for future reference.

- **Weight Capacity:** Do not exceed the maximum weight capacity of 800 pounds for this Queen size bed frame.
- **Collision Prevention:** The bed frame features rounded corners to reduce daily collision damage. However, exercise caution around the frame.
- **Assembly:** Assembly is required. It is recommended that two people work together for faster and safer installation.
- **Tools:** Ensure all necessary assembly tools are available and used correctly.

2. PRODUCT COMPONENTS

Before beginning assembly, verify that all parts are present and undamaged. Refer to the included parts list in your packaging.

Dimensions

Size: Queen



Figure 2.1: Internal metal frame and upholstered side rails of the BarnFurin Queen Size Bed Frame, ready for slat installation.

3. SETUP AND ASSEMBLY

The BarnFurin Queen Size Bed Frame is designed for easy assembly and does not require a box spring.

3.1 Headboard and Frame Assembly

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Attach the headboard to the side rails using the provided hardware. Ensure all connections are secure.
3. Connect the footboard to the side rails, ensuring a stable frame structure.

3.2 Slat Installation (Magic Tape Design)

This bed frame features a 'Magic Tape Design' for quick and secure slat installation, eliminating the need for a box spring and reducing noise.

1. Unroll the wooden slats, which are connected by a fabric strap.
2. Align the slats with the Velcro strips located on the inner edges of the bed frame's side rails.
3. Press down firmly on each slat to ensure it adheres securely to the Velcro. This design helps prevent

movement and noise during use.



Figure 3.1: A person is shown installing the wooden slats onto the bed frame. The slats are connected by a fabric strap for easy placement and secure attachment.

Luxurious Boucle Fabric

Comfortable to the Touch and Easy to Clean

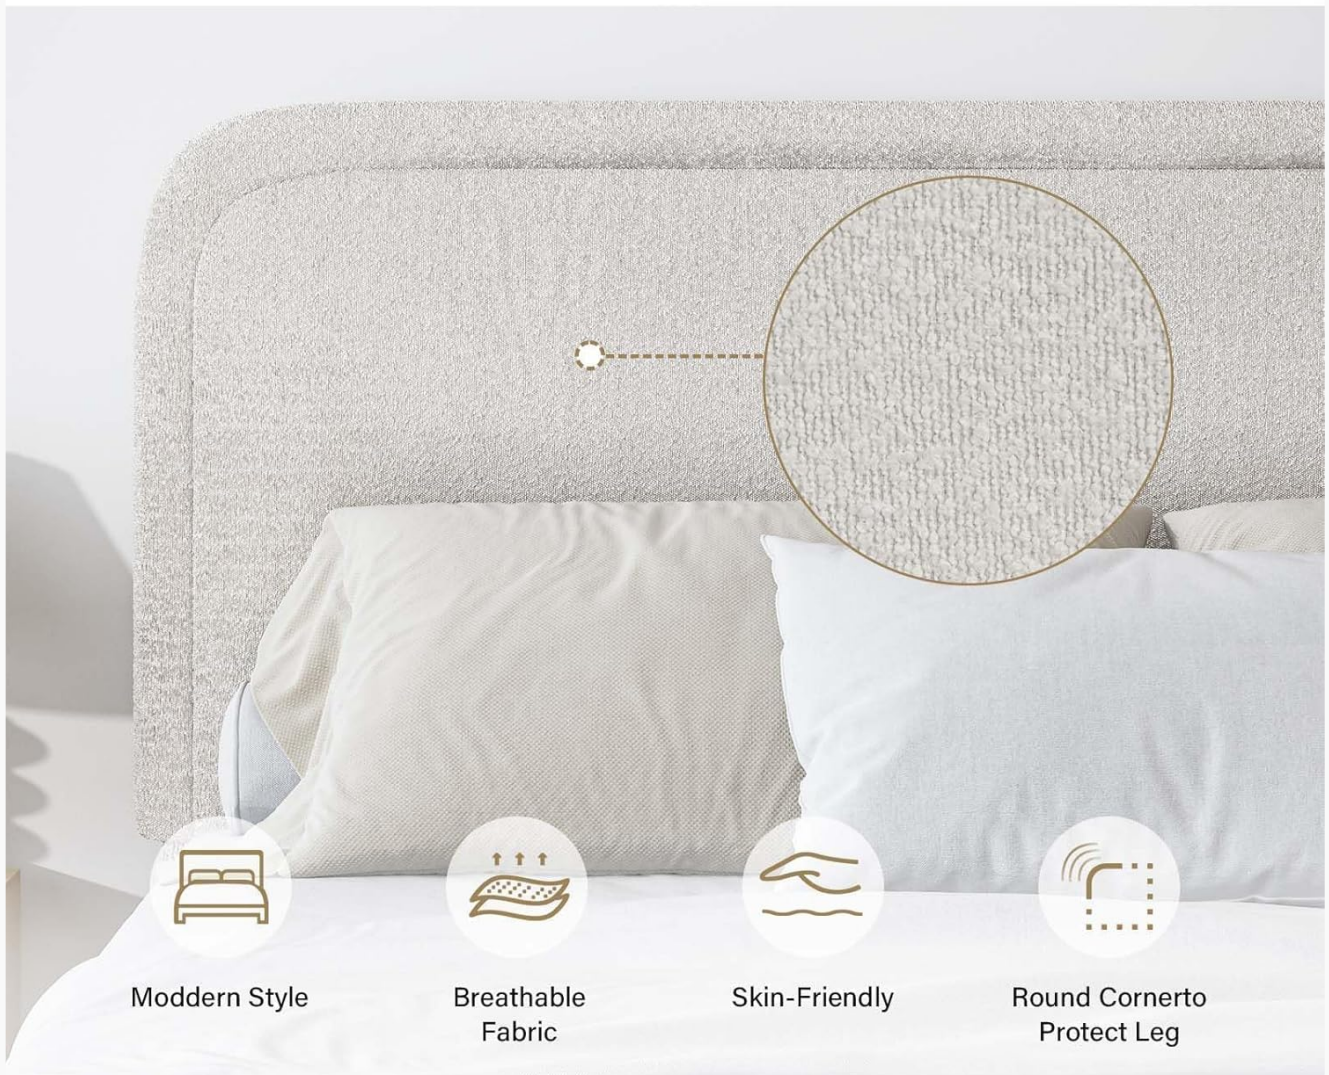


Figure 3.2: A detailed view of the 'Magic Tape Design' which uses Velcro to secure the wooden slats to the bed frame, preventing movement and noise.

4. USAGE AND FEATURES

The BarnFurin Queen Size Bed Frame provides a comfortable and stylish foundation for your mattress.

- **Spacious Design:** The frame is designed to accommodate a Queen size mattress without the need for a box spring, offering ample space.
- **Boucle Upholstery:** The headboard and frame are upholstered in soft, fluffy boucle fabric, providing a comfortable and modern aesthetic.
- **Rounded Corners:** All corners are rounded to enhance safety and prevent accidental bumps.
- **Noise-Free Sleep:** The combination of EVA, metal bed legs, and wooden slats with the 'Magic Tape Design' ensures a stable and quiet sleeping environment.



Figure 4.1: The complete BarnFurin Queen Size Bed Frame with a mattress and bedding, highlighting the soft boucle upholstered headboard and rounded corners.

Magic Tape Design

Magic tape links 12 wooden slats for easy to assemble



No Noise

The combination of EVA, metal bed legs and wooden bed frame allows for a noise-free night's sleep



Figure 4.2: A visual comparison highlighting the safety and aesthetic benefit of the BarnFurin bed frame's rounded, anti-collision corners compared to standard sharp-edged bed frames.

5. MAINTENANCE

Proper care will extend the life and appearance of your bed frame.

- **Cleaning:** The boucle fabric is designed to be easy to clean. For general cleaning, gently vacuum or brush to remove dust and debris. For spills, blot immediately with a clean, damp cloth. Avoid harsh chemicals.
- **Inspection:** Periodically check all bolts and connections to ensure they remain tight. Re-tighten if necessary to maintain stability and prevent squeaking.
- **Avoid Excessive Force:** Do not jump on the bed or apply excessive force, as this can damage the frame or slats.

6. TROUBLESHOOTING

If you encounter any issues with your bed frame, refer to the following common solutions:

- **Squeaking Noises:** If the bed frame begins to squeak, check all assembly bolts and ensure they are tightened securely. Also, verify that the wooden slats are firmly attached to the Velcro strips.
- **Unstable Frame:** Ensure all connections between the headboard, footboard, and side rails are properly aligned and tightened.
- **Damaged Parts:** If any part is damaged or missing, do not attempt to force assembly. Contact customer support for replacement parts.

7. SPECIFICATIONS

Feature	Detail
Brand	BarnFurin
Model Number	R958
Size	Queen
Product Dimensions	80.7"L x 60.2"W x 43.3"H
Weight Capacity	800 pounds
Material	Engineered Wood, Fabric (Boucle)
Color	Beige
Special Feature	No Box Spring Needed, Soft Rounded Corners
Assembly Required	Yes



Figure 7.1: This diagram illustrates the overall dimensions of the Queen size bed frame, measuring 80.7 inches in length, 60.2 inches in width, and 43.3 inches in height, with a stated weight capacity of 800 pounds.

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact BarnFurin customer service directly. Contact details can typically be found on the product packaging or the official BarnFurin website.