

[Manuals.plus](#) /

› [SMANOW](#) /

› SMANOW Running Boards Side Steps User Manual for 2007-2014 Toyota FJ Cruiser SUV

SMANOW BCKA95725-C

SMANOW Running Boards Side Steps User Manual

Model: BCKA95725-C | Compatible with 2007-2014 Toyota FJ Cruiser SUV

1. OVERVIEW

The SMANOW Running Boards Side Steps are designed to provide a convenient and secure stepping surface for easier entry and exit from your vehicle. Constructed from durable carbon steel with a dual-stage textured black powder-coated finish, these side steps offer enhanced functionality and protection for your 2007-2014 Toyota FJ Cruiser SUV.




This image displays the SMANOW Running Boards Side Steps seamlessly integrated onto a Toyota FJ Cruiser SUV, showcasing their design and fit.

2. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Two (2) Running Boards (one for the left side, one for the right side)
- Mounting Brackets (specific to vehicle model)
- Hardware Kit (bolts, washers, nuts)
- Installation Instructions (this manual)

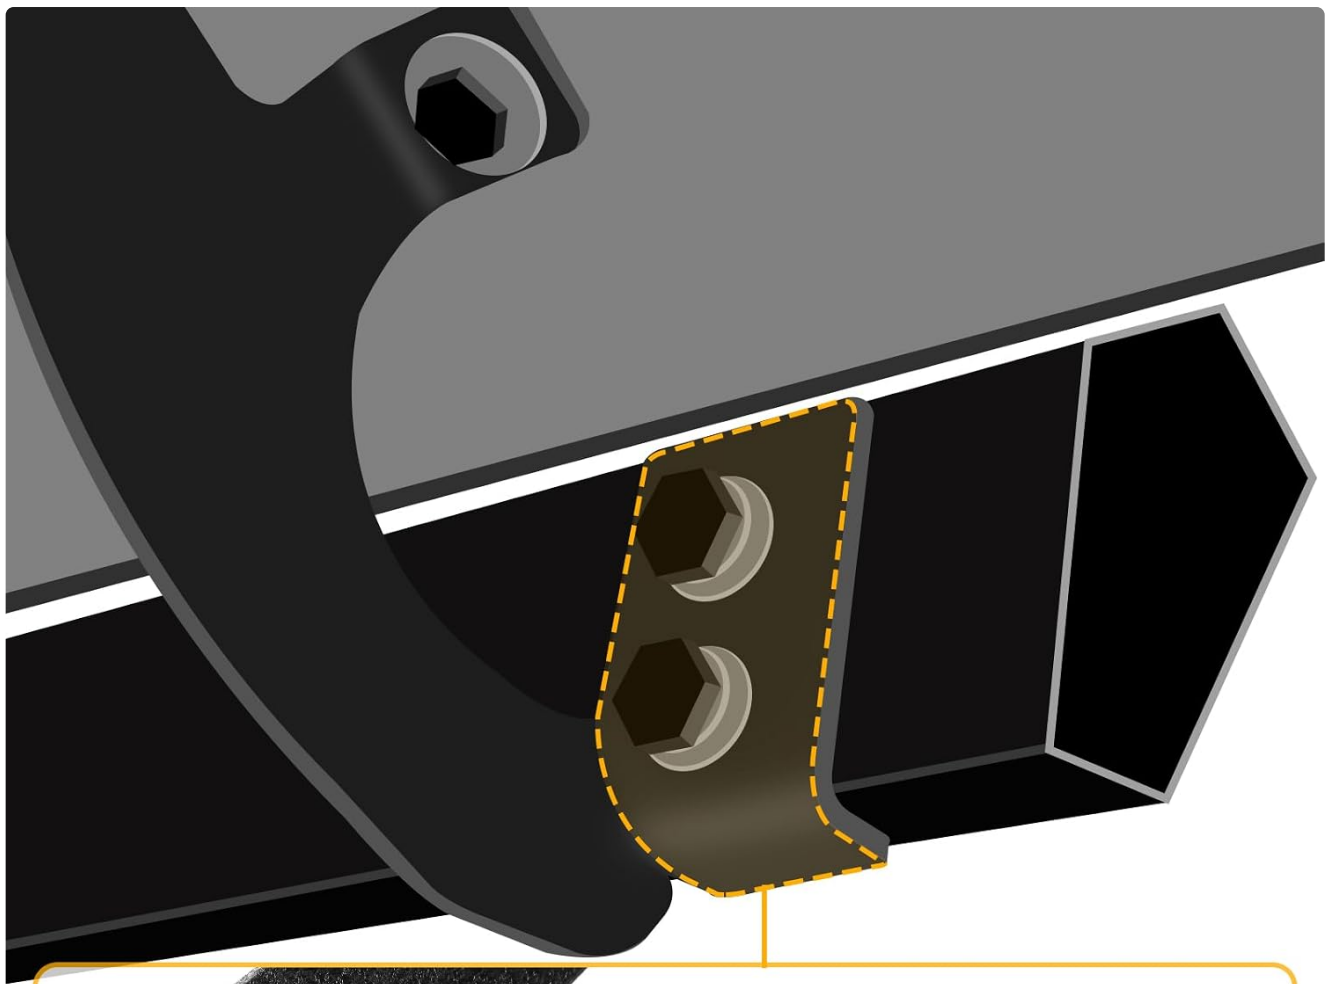

EIGHT BRACKETS FOR EXTRA STRENGTH FIXED HOLES FOR EASY INSTALLATION

An illustration showing the eight robust mounting brackets and pre-drilled fixed holes, ensuring a secure and straightforward installation process.

3. KEY FEATURES

- **Vehicle Specific Fitment:** Designed for precise compatibility with 2007-2014 Toyota FJ Cruiser SUV models.
- **Durable Construction:** Manufactured from heavy-duty carbon steel, ensuring long-lasting performance and resistance to wear.
- **Enhanced Finish:** Features a dual-stage textured black powder coating for superior rust and corrosion resistance, maintaining appearance in various conditions.
- **Wide Drop Step Design:** Provides a 4.7-inch drop-off, making vehicle entry and exit more accessible and comfortable.
- **Non-Slip Step Pads:** Equipped with special non-slip tread on the step pads to ensure superior traction and safety in all weather conditions.
- **High Strength:** Capable of supporting a maximum load of over 450 pounds. The 3-inch tube design minimizes the gap between the bar and the vehicle frame for a secure fit.
- **Easy Installation:** Engineered for a direct bolt-on installation, requiring no drilling or modification to your

vehicle.



A detailed view highlighting the 4.7-inch drop step design, engineered for easier and safer vehicle entry and exit.



HIGHER GROUND CLEARANCE TO BLOCK DEBRIS

This graphic illustrates how the running boards maintain higher ground clearance, effectively protecting the vehicle's undercarriage from road debris.

WHY SMANOW ?

✓ **Dual-Stage Textured Black Powder**

✓ **Rust And Corrosion Resistance**

✓ **Seamless Tube Structure**



An infographic detailing the construction benefits: dual-stage textured black powder coating for durability, rust and corrosion resistance, and a seamless tube structure for strength.

HARDENED PLASTIC CAP DESIGN




Eliminates dangerous sharp corners



Cushions gravel splashes



Adds a sense of style

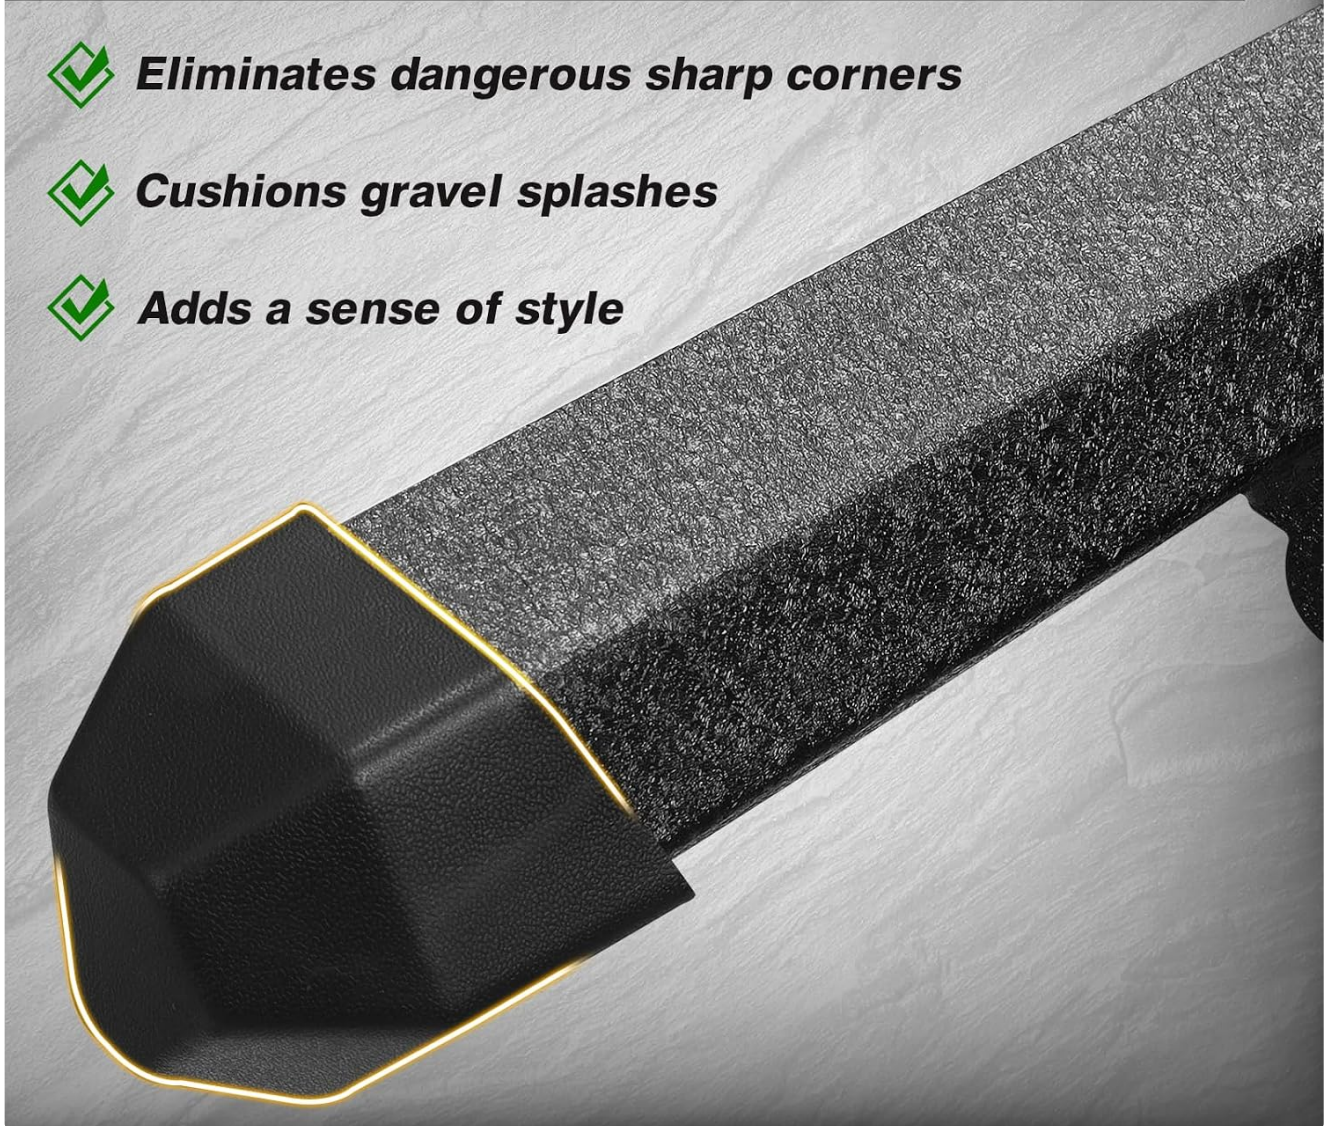

Close-up of the hardened plastic end caps, designed to eliminate sharp corners, cushion gravel splashes, and enhance the product's appearance.

4. INSTALLATION INSTRUCTIONS

Installation of the SMANOW Running Boards is designed to be straightforward, requiring no drilling or modification to your vehicle. It is recommended to have a second person assist during the installation process for safety and ease.

General Safety Precautions:

- Ensure the vehicle is parked on a level surface and the parking brake is engaged.
- Wear appropriate safety gear, including gloves and eye protection.
- Do not overtighten bolts until all components are loosely fitted.

Installation Steps:

1. Identify the correct running board for each side of the vehicle (left and right).

2. Locate the factory mounting points on the vehicle's frame. These are typically pre-drilled holes.
3. Attach the mounting brackets to the vehicle's frame using the provided hardware. Hand-tighten bolts initially.
4. Carefully position the running board onto the attached brackets.
5. Secure the running board to the brackets using the remaining hardware. Ensure all bolts are aligned before tightening.
6. Once all components are in place, progressively tighten all bolts to the manufacturer's recommended torque specifications.
7. Repeat the process for the opposite side of the vehicle.
8. After installation, perform a final check to ensure all connections are secure and the running boards are stable.

Your browser does not support the video tag.

This video provides a visual guide to the installation process and highlights the key features of the SMANOW Square Tube Running Boards, including their sturdy construction and ease of use.

5. OPERATING INSTRUCTIONS

To use the SMANOW Running Boards, simply step onto the non-slip tread surface when entering or exiting your Toyota FJ Cruiser SUV. The wide drop step design provides a lower and more stable platform compared to the vehicle's original height, facilitating easier access for all passengers.

6. MAINTENANCE

Regular maintenance will ensure the longevity and appearance of your running boards:

- **Cleaning:** Wash the running boards regularly with mild soap and water to remove dirt, mud, and road salt. Avoid abrasive cleaners or harsh chemicals that could damage the powder-coated finish.
- **Inspection:** Periodically inspect all mounting hardware for tightness. Vibrations from driving can sometimes loosen bolts over time. Retighten as necessary.
- **Damage Check:** Examine the running boards for any signs of damage, such as dents, scratches, or rust. Address any issues promptly to prevent further deterioration.

7. TROUBLESHOOTING

If you encounter any issues with your SMANOW Running Boards, consider the following:

- **Loose Feeling:** If the running boards feel loose or unstable, re-check all mounting bolts and ensure they are securely tightened.
- **Unusual Noises:** Rattling or squeaking sounds may indicate loose hardware or improper installation. Inspect all connection points and tighten as needed.
- **Difficulty Stepping:** Ensure the non-slip pads are clean and free of debris. If the issue persists, verify the installation height and angle.


For persistent issues or concerns not covered here, please contact SMANOW customer support.

8. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Number	BCKA95725-C
Compatibility	2007-2014 Toyota FJ Cruiser SUV
Material	Carbon Steel
Exterior Finish	Dual-Stage Textured Black Powder Coated
Item Dimensions (L x W x H)	152.4 x 10.2 x 11.9 Centimetres (60 x 4 x 4.7 inches)
Item Weight	19.82 kg (43.7 lbs)
Weight Limit	450 Pounds
Number of Items	2 (Left and Right Running Boards)

PRODUCT SIZE

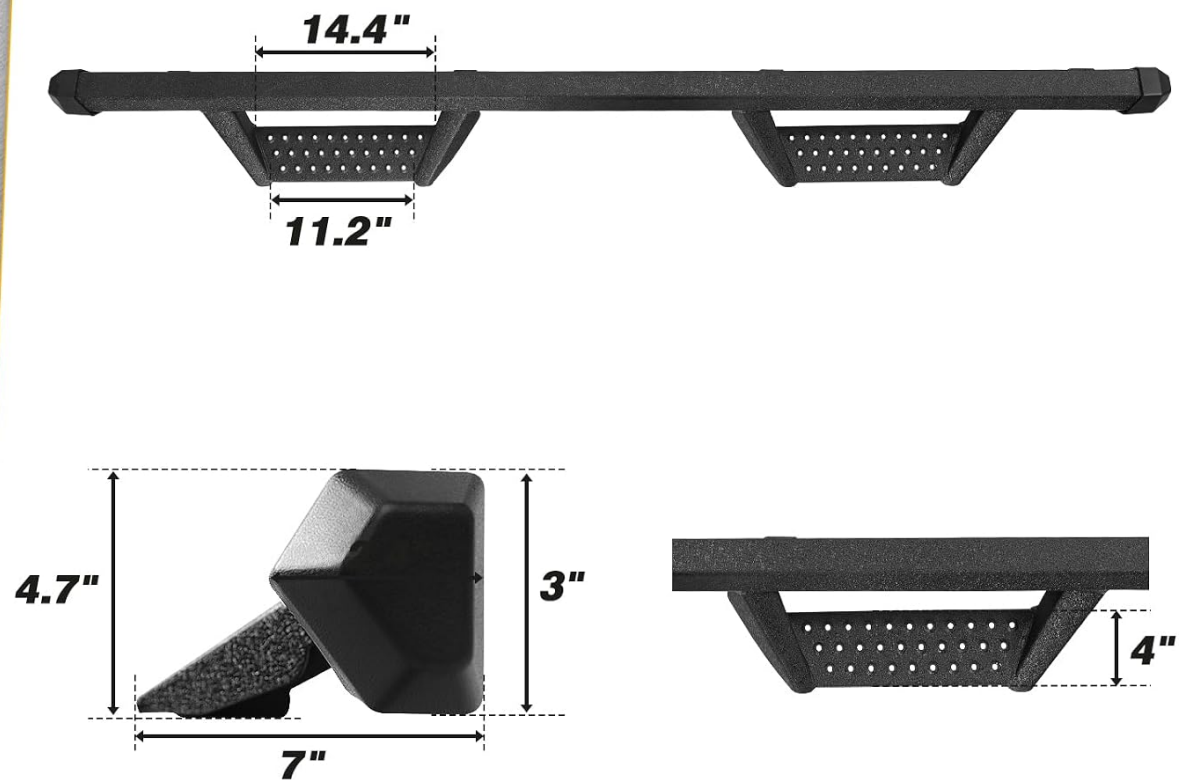

A diagram providing key measurements of the running boards, including step width and drop height, for reference.

9. WARRANTY INFORMATION

SMANOW Running Boards Side Steps are covered by a **2-Year Manufacturer's Warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for any warranty claims. The warranty does not cover damage resulting from improper installation, misuse, accidents, or unauthorized modifications.

10. CUSTOMER SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please contact SMANOW customer service through the retailer where the product was purchased or visit the official SMANOW website for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question