

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VECELO](#) /

› [VECELO Twin Size Metal Loft Bed Instruction Manual](#)

VECELO Loft Bed Twin Size

VECELO Twin Size Metal Loft Bed Instruction Manual

Model: Loft Bed Twin Size | Brand: VECELO

1. SAFETY INFORMATION

Important: Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- Always use the guardrails when using the upper bed to prevent accidental falls.
- Do not exceed the maximum weight capacity of 400 lbs (181 kg) for the upper bed.
- Be cautious of sharp edges during assembly. Wear protective gloves if necessary.
- Ensure the bed is securely assembled and all bolts are tightened before use.
- Securely fasten the bed to the wall using the provided anti-tip accessories to prevent tipping.
- Keep the area around the bed clear to prevent falls and obstructions.
- For your safety, the mattress surface of the upper bed must be at least 5 inches (127 mm) below the top edge of the guardrail when selecting a mattress. This bed fits any standard size twin mattress.
- Do not allow children under 6 years of age on the upper bunk.
- Prohibit horseplay on or under the bed.
- Always use the ladder for entering and exiting the upper bunk.

2. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer service.

- 1 x VECELO Twin Size Metal Loft Bed Frame (various metal components including side frames, head/footboards, ladder, slats, and support bars)
- 1 x Instruction Manual
- 1 x Assembly Kit (includes all necessary screws, bolts, and tools for assembly, along with anti-tip accessories)

3. SETUP (ASSEMBLY INSTRUCTIONS)

Assembly typically requires two adults. Follow the steps below carefully. Refer to the included assembly kit for specific hardware identification.

3.1 Unpacking and Preparation

- Clear a spacious area for assembly.
- Unpack all components and lay them out on a soft, clean surface to prevent scratches.
- Identify all parts and hardware using the provided parts list in the assembly kit.

3.2 Frame Assembly

1. **Assemble Headboard/Footboard Sections:** Connect the vertical posts to the arched headboard/footboard pieces using the specified bolts and washers. Ensure all connections are finger-tight at this stage.
2. **Attach Side Rails:** Connect the long side rails to the assembled headboard/footboard sections. Again, keep bolts finger-tight to allow for adjustments.
3. **Install Support Bars:** Secure the horizontal support bars to the lower sections of the bed frame. These provide additional stability.
4. **Tighten All Connections:** Once the main frame is assembled, systematically tighten all bolts using the provided Allen wrench. Ensure all connections are secure but do not overtighten.

3.3 Ladder and Slat Installation

5. **Assemble Ladder:** Attach the ladder steps to the ladder side rails. The ladder can be installed on either the left or right side of the bed, depending on your room configuration. Secure it firmly to the bed frame.
6. **Install Bed Slats:** Place the metal bed slats across the bed frame. The unique slot structure helps fix the slats firmly and prevents noise. Ensure all slats are properly seated.

3.4 Securing the Bed

7. **Attach Anti-Tip Device:** Securely fasten the bed to the wall using the provided anti-tip nails and brackets. This is crucial for stability and safety, especially for high structures.

3.5 Assembly Videos


Animated assembly guide for a metal loft bed, demonstrating step-by-step installation of components including frame, ladder, and safety features.

Time-lapse video demonstrating the assembly process of the VECELO Twin Size Metal Loft Bed, showing a person putting together the frame and attaching the ladder.

3.6 Product Images




Overall view of the VECELO Twin Size Metal Loft Bed in Off White, showcasing the spacious area beneath the bed, ideal for customization.

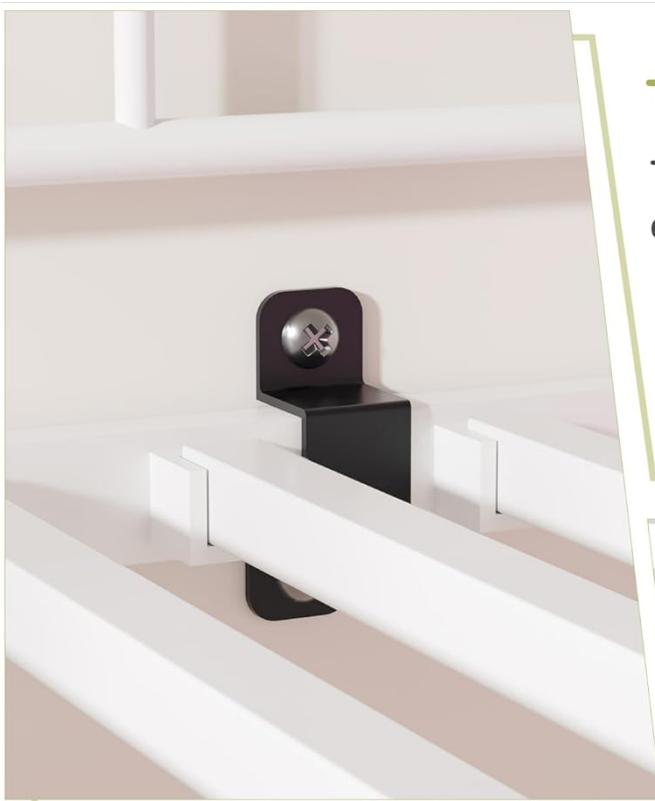

Triangular Construction

The triangular structure ensures excellent stability and provides a secure place to rest.

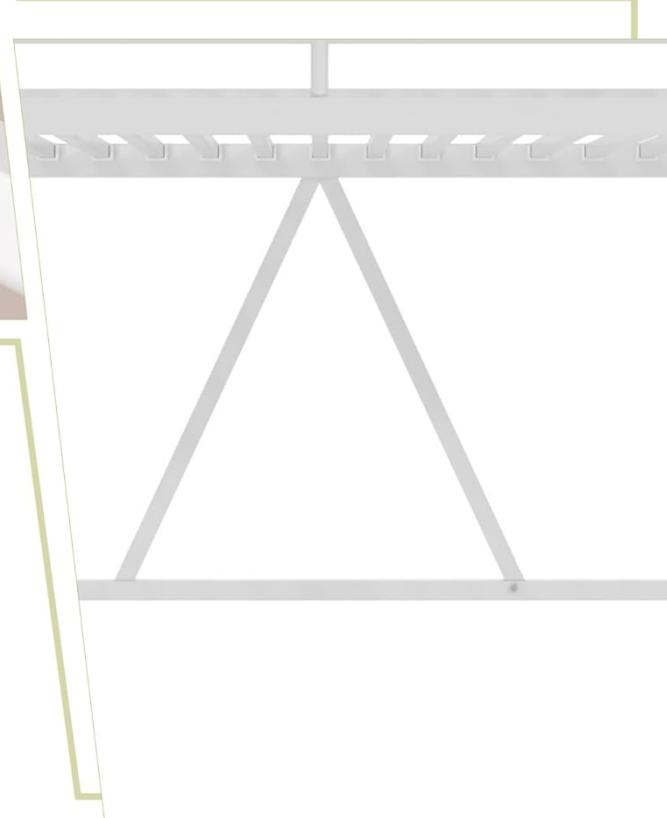


Safety Device

Fix it to the wall to ensure the loft bed is more stable.

Detailed view of the triangular support structure and anti-tip device, illustrating how these features enhance bed stability and safety.


Heighten Full-length Guardrail

13" height, increase security and prevent accidental falls.

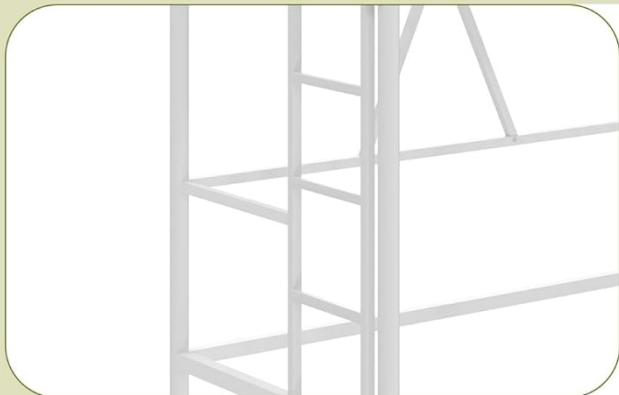

Flexible Ladder Design

The ladder can be installed on either side of the bed to help you access the top bunk more easily.

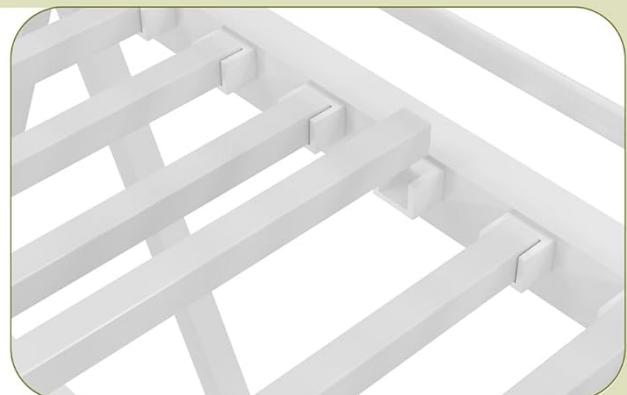


Illustrations highlighting key features: the 13-inch heightened guardrail for safety, the flexible ladder design that can be installed on either side, and the noise-free slot structure for slats.



A lifestyle image showing the VECELO Twin Size Metal Loft Bed with a functional desk setup in the spacious under-bed area.




Another lifestyle image featuring the VECELO Twin Size Metal Loft Bed, demonstrating a cozy seating arrangement in the versatile under-bed space.

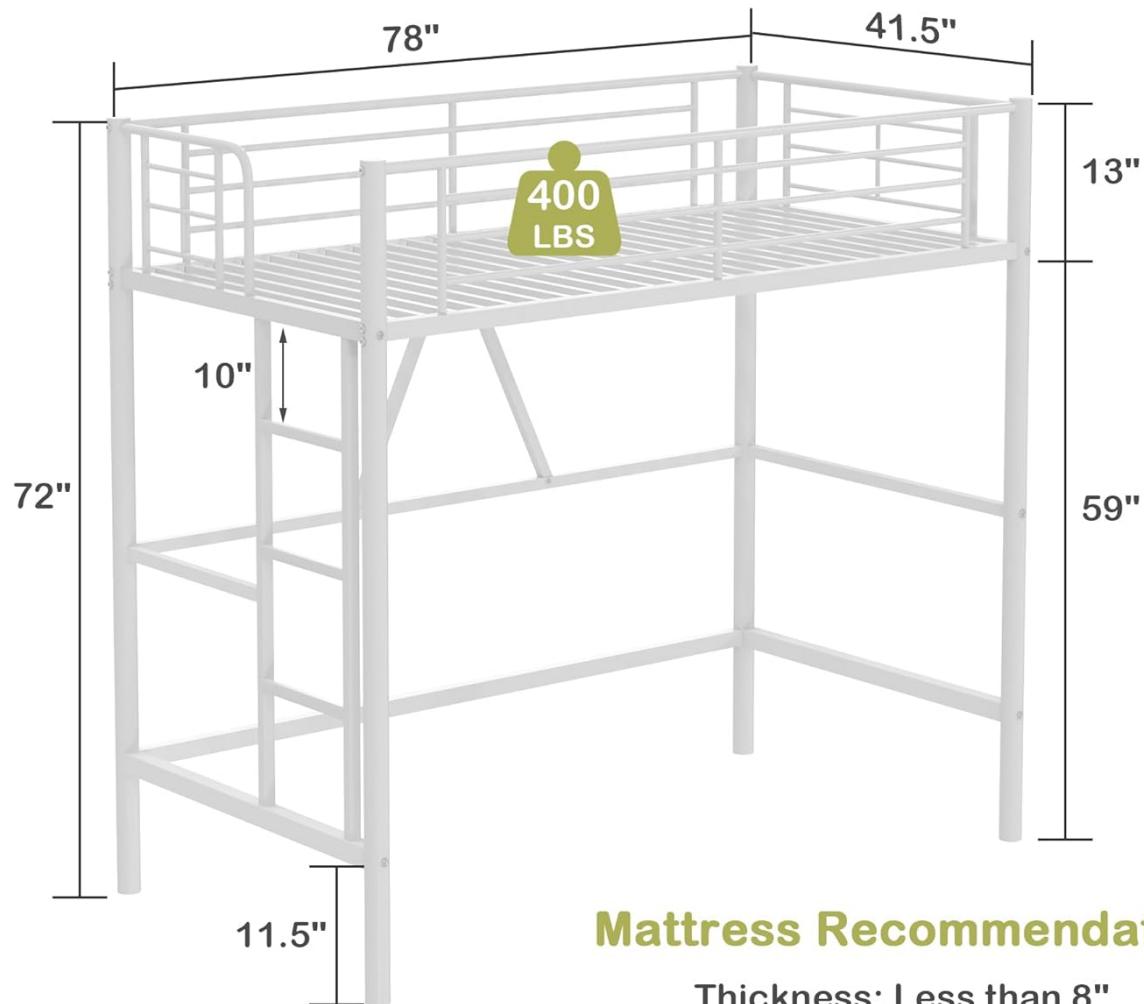

Mattress Recommendation

Thickness: Less than 8"

The mattress surface of the top bed must be at least **5"(127mm)** below the top edge of the guardrail.

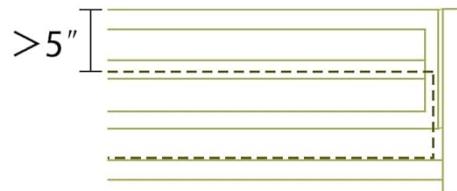

A detailed diagram illustrating the overall dimensions of the VECELO Twin Size Metal Loft Bed (78" L x 41.5" W x 72" H) and the recommended mattress thickness (less than 8").

4. OPERATING INSTRUCTIONS

- Using the Ladder:** Always use the ladder to safely access and exit the upper bunk. Ensure the ladder is securely attached before climbing.
- Mattress Placement:** Place a standard twin-size mattress on the upper bunk. Ensure the mattress surface is at least 5 inches (127 mm) below the top edge of the guardrail.
- Weight Capacity:** The upper bunk has a maximum weight capacity of 400 lbs. Do not exceed this limit.
- Under-Bed Space:** The 59-inch clearance under the bed can be utilized for a desk, storage, or a seating area.

5. MAINTENANCE

- Cleaning:** Wipe the metal frame with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners that could damage the powder-coated finish.
- Regular Inspection:** Periodically check all bolts and connections to ensure they remain tight. Retighten if necessary.

necessary.

- **Noise Reduction:** The noise-free slat design minimizes squeaking. If any noise occurs, check slat placement and frame connections.

6. TROUBLESHOOTING

- **Bed Wobbles:** Ensure all bolts are securely tightened. Verify that the anti-tip device is properly installed and fastened to the wall.
- **Squeaking Noise:** Check that all bed slats are correctly seated in their slots and that all frame connections are tight.
- **Difficulty Assembling:** Review the assembly instructions and videos. Ensure you are using the correct hardware for each step. If issues persist, contact customer support.

7. SPECIFICATIONS

Color	Off White
Product Dimensions	78"L x 41.5"W x 72"H (190cm x 99cm x 182cm)
Weight Limit	400 Pounds (181 kg)
Material	Metal (Powder Coated Finish)
Guardrail Height	13 inches (33 cm)
Height of Space Under Bed	59 inches (148 cm)
Box Spring Needed	No
Assembly Required	Yes

8. WARRANTY AND CUSTOMER SUPPORT

VECELO is committed to providing quality products and excellent customer service.

- **Returns:** This product is eligible for 90-day easy returns. Please refer to your retailer's return policy for details.
- **Protection Plans:** Extended protection plans (e.g., 2-Year, 3-Year) may be available for purchase separately. Check with your retailer for options.
- **Customer Service:** If you have any questions, concerns, or require assistance with your VECELO Twin Size Metal Loft Bed, please feel free to e-mail us. Our friendly customer service team is ready to help.