

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Xprite](#) /
- › [Xprite FRP Hard Tri-fold Truck Bed Tonneau Cover User Manual](#)

### Xprite TP-HD-COVER-G1

# Xprite FRP Hard Tri-fold Truck Bed Tonneau Cover User Manual

Model: TP-HD-COVER-G1

## 1. PRODUCT OVERVIEW

The Xprite Hard Tri-fold Truck Bed Tonneau Cover is designed to provide secure and weather-resistant protection for your truck bed cargo. Its robust construction and user-friendly design ensure durability and convenience for everyday use.



Image: Xprite Hard Tri-fold Tonneau Cover installed on a truck bed, showcasing its sleek, low-profile design.

## 2. FEATURES

- **Robust Construction:** Crafted from Fiberglass Reinforced Polymer (FRP) with an internal PP honeycomb structure, offering excellent scratch resistance and protection against weather elements. It can support up to 500 lbs.



Image: Diagram illustrating the multi-layered construction of the tonneau cover, highlighting the glass honeycomb panels for strength and durability.

- **Easy No-Drill Installation:** Securely fastens to your truck bed using six sturdy clamps, requiring no drilling or modifications.
- **Fuel-Efficiency:** Aerodynamic design minimizes wind resistance, potentially reducing fuel consumption.



## REDUCE WIND RESISTANCE, DECREASE FUEL CONSUMPTION



Image: A truck with the tonneau cover installed, driving on a road, with yellow lines indicating improved airflow and reduced wind resistance for better fuel efficiency.

- **Easy Folding and Safety:** Embedded clamps and reinforced latches prevent accidental opening. The cover can be single, dual, or tri-folded and secured with nylon straps for flexible bed access.



## EASY TO USE FAST TO FOLD



Image: A three-step visual guide demonstrating how to easily tri-fold the tonneau cover for convenient access to the truck bed.

- **All-Weather Protection:** Provides protection against sun, rain, snow, and wind, ensuring cargo remains safe and dry.



## REDUCE WIND RESISTANCE, DECREASE FUEL CONSUMPTION



Image: The tonneau cover shown in different weather conditions (sunny, rainy, snowy, windy), highlighting its all-weather protective capabilities.

- **High-Quality Aluminum Frame:** Features a premium aluminum frame that is UV-resistant and anti-aging, ensuring long-lasting performance.
- **Waterproof Sealing Tape:** Effectively protects goods from rain and dust.



## PERFECT FIT Weather Strip Included



Image: A close-up view of the tonneau cover's weather strip, showing water droplets on its surface, indicating effective sealing against moisture.

### 3. COMPATIBILITY

This Xprite Hard Tri-fold Truck Bed Tonneau Cover is specifically designed for:

- Honda Ridgeline Pickup Fleetside/Styleside Bed (64")
- Model Years: 2017, 2018, 2019, 2020, 2021, 2022, 2023, 2024, 2025



# CONFIRM THE TONNEAU COVER SIZE BEFORE PURCHASING

ONLY FIT 5 FT

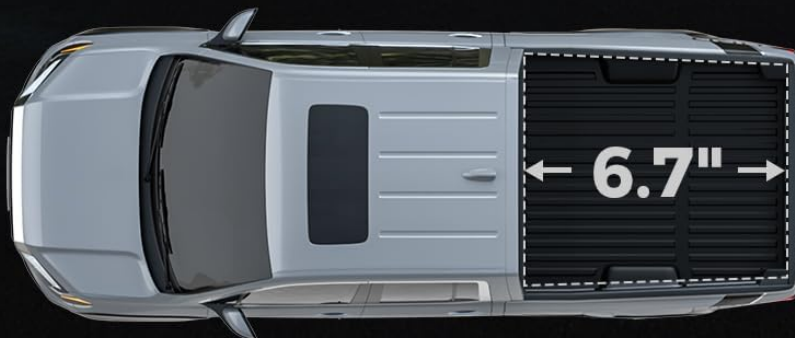
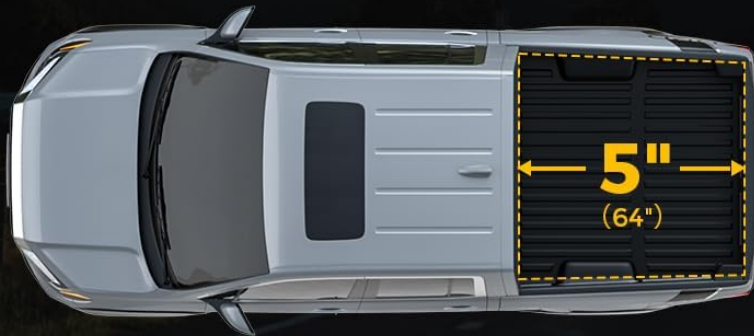


Image: A diagram illustrating the correct 5ft (64") truck bed size for compatibility, alongside incorrect sizes, to ensure proper fitment.

**Note:** If your truck has cargo racks, they must be removed before installing this cover.

## 4. WHAT'S IN THE BOX

- Tonneau cover x1
- Accessories required for installation

## 5. SETUP (INSTALLATION)

Installation of the Xprite Hard Tri-fold Truck Bed Tonneau Cover is designed to be straightforward and does not require drilling. Follow these general steps for proper installation:

1. **Prepare the Truck Bed:** Ensure the truck bed rails are clean and free of debris. Wipe down the surfaces where the cover will sit.
2. **Apply Weather Stripping:** Apply the provided weather stripping to the bulkhead and side rails as instructed to ensure a tight seal. Trim excess material as needed.



Image: A person applying the weather strip to the truck bed rail, ensuring a secure and waterproof seal.

3. **Position the Cover:** Carefully place the tonneau cover onto the truck bed, aligning the front section with the bulkhead.
4. **Secure Front Clamps:** From underneath the cover, engage and tighten the front clamps to secure the cover to the truck bed rails. Ensure they are firmly in place.
5. **Unfold and Secure Middle/Rear Clamps:** Unfold the middle and rear sections of the cover. Engage and tighten the corresponding clamps on the side rails. Ensure all clamps are properly seated and tightened to achieve a secure fit.



Image: A close-up view of the tonneau cover's clamps being installed onto the truck bed rails, demonstrating the no-tool installation process.

For a detailed visual guide, please refer to the official installation video:

Video: Official installation guide for the Xprite Hard Tri-fold Truck Bed Tonneau Cover. This video demonstrates each step of the installation process, including preparing the truck bed, applying weather strips, positioning the cover, and securing all clamps.

## 6. OPERATING THE TONNEAU COVER

The tri-fold design allows for versatile use of your truck bed:

- **Folding:** To access your truck bed, release the rear clamps and fold the cover towards the cab. You can fold it once, twice, or fully to the bulkhead.
- **Securing When Folded:** When the cover is folded, secure it using the integrated nylon straps and buckles to prevent it from unfolding during transit.
- **Unfolding:** To close the cover, release the nylon straps and carefully unfold each section towards the tailgate. Ensure each section lays flat and the latches engage properly.

**Important:** Always ensure all clamps are securely tightened before driving. Never drive with the cover partially open without securing it with the provided straps.

## 7. MAINTENANCE

Regular maintenance will prolong the life and appearance of your tonneau cover:

- **Cleaning:** Clean the cover regularly with mild soap and water. Avoid abrasive cleaners or harsh chemicals that could damage the FRP surface. Rinse thoroughly and allow to air dry.

- **Inspect Clamps and Seals:** Periodically check all clamps and the weather stripping for tightness and integrity. Re-tighten any loose clamps and ensure seals are not damaged or displaced to maintain water resistance.
- **Lubrication:** If any moving parts or hinges become stiff, apply a silicone-based lubricant to ensure smooth operation.

## 8. TROUBLESHOOTING

If you encounter issues with your tonneau cover, consider the following:

- **Water Leaks:** Check the weather stripping along the bed rails and bulkhead. Ensure it is properly seated and not damaged. Verify that all clamps are tightened evenly to create a consistent seal.
- **Loose Fit:** If the cover feels loose or rattles, re-check and tighten all six clamps. Ensure they are properly engaged with the truck bed rails.
- **Difficulty Folding/Unfolding:** Ensure no debris is obstructing the folding panels or hinges. Check that the latches are fully disengaged before attempting to fold.

## 9. SPECIFICATIONS

<b>Brand</b>	Xprite
<b>Model</b>	TP-HD-COVER-G1
<b>Style</b>	Hard Tri-Fold
<b>Exterior Finish</b>	FRP (Fiberglass Reinforced Polymer)
<b>Material</b>	Fiberglass Reinforced Polymer, Aluminum
<b>Lock Type</b>	Tailgate
<b>Item Weight</b>	54.9 pounds
<b>Package Dimensions</b>	65 x 25 x 7 inches
<b>Country of Origin</b>	China
<b>UPC</b>	760249912235, 764046283857

## 10. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Xprite customer service directly. Details regarding specific warranty periods and coverage are typically provided with your purchase documentation or can be found on the official Xprite website.

