

LUXOAK BMB022

LUXOAK Farmhouse King Platform Bed (Model BMB022) - Instruction Manual

Model: BMB022 | Brand: LUXOAK

1. INTRODUCTION

Thank you for choosing the LUXOAK Farmhouse King Platform Bed. This manual provides detailed instructions for the safe assembly, operation, and maintenance of your new bed frame. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

2. IMPORTANT SAFETY INFORMATION

- **Adult Assembly Required:** This product requires assembly by at least two adults.
- **Weight Capacity:** The bed frame is designed to support a maximum weight of 1,000 lbs. Do not exceed this limit.
- **Headboard Height:** The headboard is 49 inches tall. Exercise caution when sitting or lying down to ensure stable footing and prevent injury.
- **Mattress Compatibility:** This bed frame is designed for a King-sized mattress. Ensure your mattress fits correctly to prevent instability. Recommended mattress thickness is 8-12 inches.
- **Choking Hazard:** Keep all small parts, hardware, and packaging materials away from children and pets during assembly.
- **Regular Checks:** Periodically check all bolts and screws to ensure they remain tight. Retighten as necessary.
- **Level Surface:** Assemble and use the bed frame on a flat, level surface to ensure stability.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Headboard components
- Footboard components
- Side rails (left and right)

- Metal support frame
- Wooden slats with noise-free strips
- Hardware pack (screws, bolts, washers, Allen wrench)
- Installation Manual

King

L*W*H: 82.3"*76"*49 in



Capacity
1000lbs



45 mins
Assembly



Recommend Mattress
Thickness: 8-12 in.

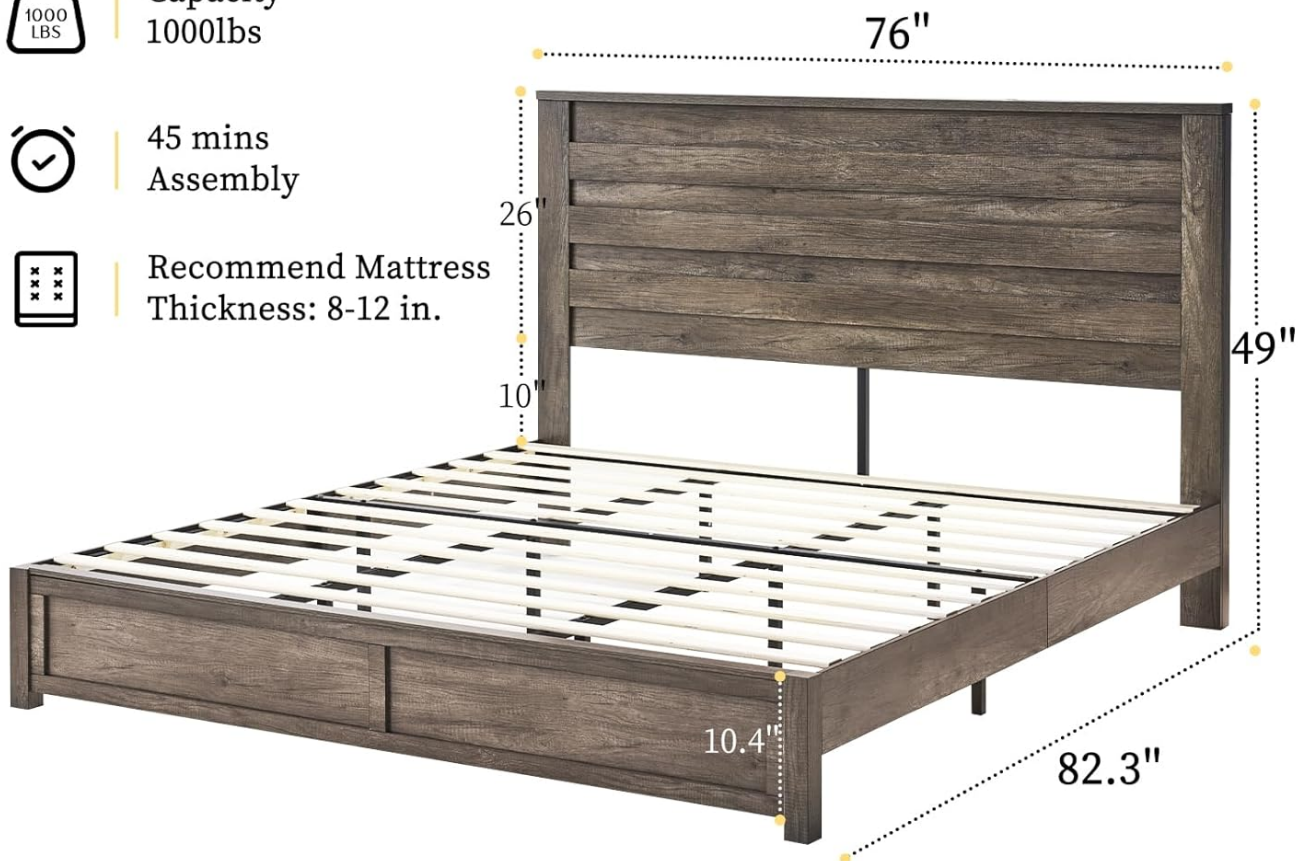


Figure 1: Overview of bed frame components and key dimensions (82.3\"L x 76\"W x 49\"H, 1000 lbs capacity).

4. ASSEMBLY INSTRUCTIONS

Assembly is estimated to take approximately 45 minutes with two people. Follow the steps carefully to ensure proper and secure construction.

4.1. Prepare the Area

- Clear a spacious area for assembly.
- Lay out all components and hardware on a soft, clean surface to prevent scratches.
- Ensure you have the provided Allen wrench and any other necessary tools.

4.2. Assemble the Headboard and Footboard

1. Attach the headboard panels together using the designated screws and bolts.

2. Repeat the process for the footboard panels.

Tall & Sturdy Full-Panel Headboard



3" Thicker Headboard

Our



Higher 49" Headboard
for More Comfy

Other



About 39" High,
NeckProne to Stiffness

Figure 2: Detail of the 49-inch tall, thickened headboard design.

4.3. Connect Side Rails and Metal Frame

3. Connect the side rails to the assembled headboard and footboard using the provided hardware. Ensure all connections are secure.
4. Install the hidden metal support frame within the bed frame. This frame provides robust support and stability.

KD Flat-Pack

Before You Buy



Multi-step self-assembly
(tools required)



Two-person
recommended



In-home install not included;
third-party optional



Color Disclaimer

Before You Buy

Actual colors may vary slightly
from images due to lighting and
screen differences

Minor color variations are normal and not considered defects

Figure 3: Assembly overview, highlighting the need for self-assembly and recommended two-person effort.

Your browser does not support the video tag.

Video 1: Official product video demonstrating the assembly process and features of the Farmhouse Bed Frame with 49" Tall & Full-Panel Headboard.

4.4. Install Wooden Slats

5. Place the wooden slats across the metal support frame. The slats feature velcro and EVA foams to prevent noise and keep the mattress in place.
6. Ensure all slats are evenly spaced and securely attached.

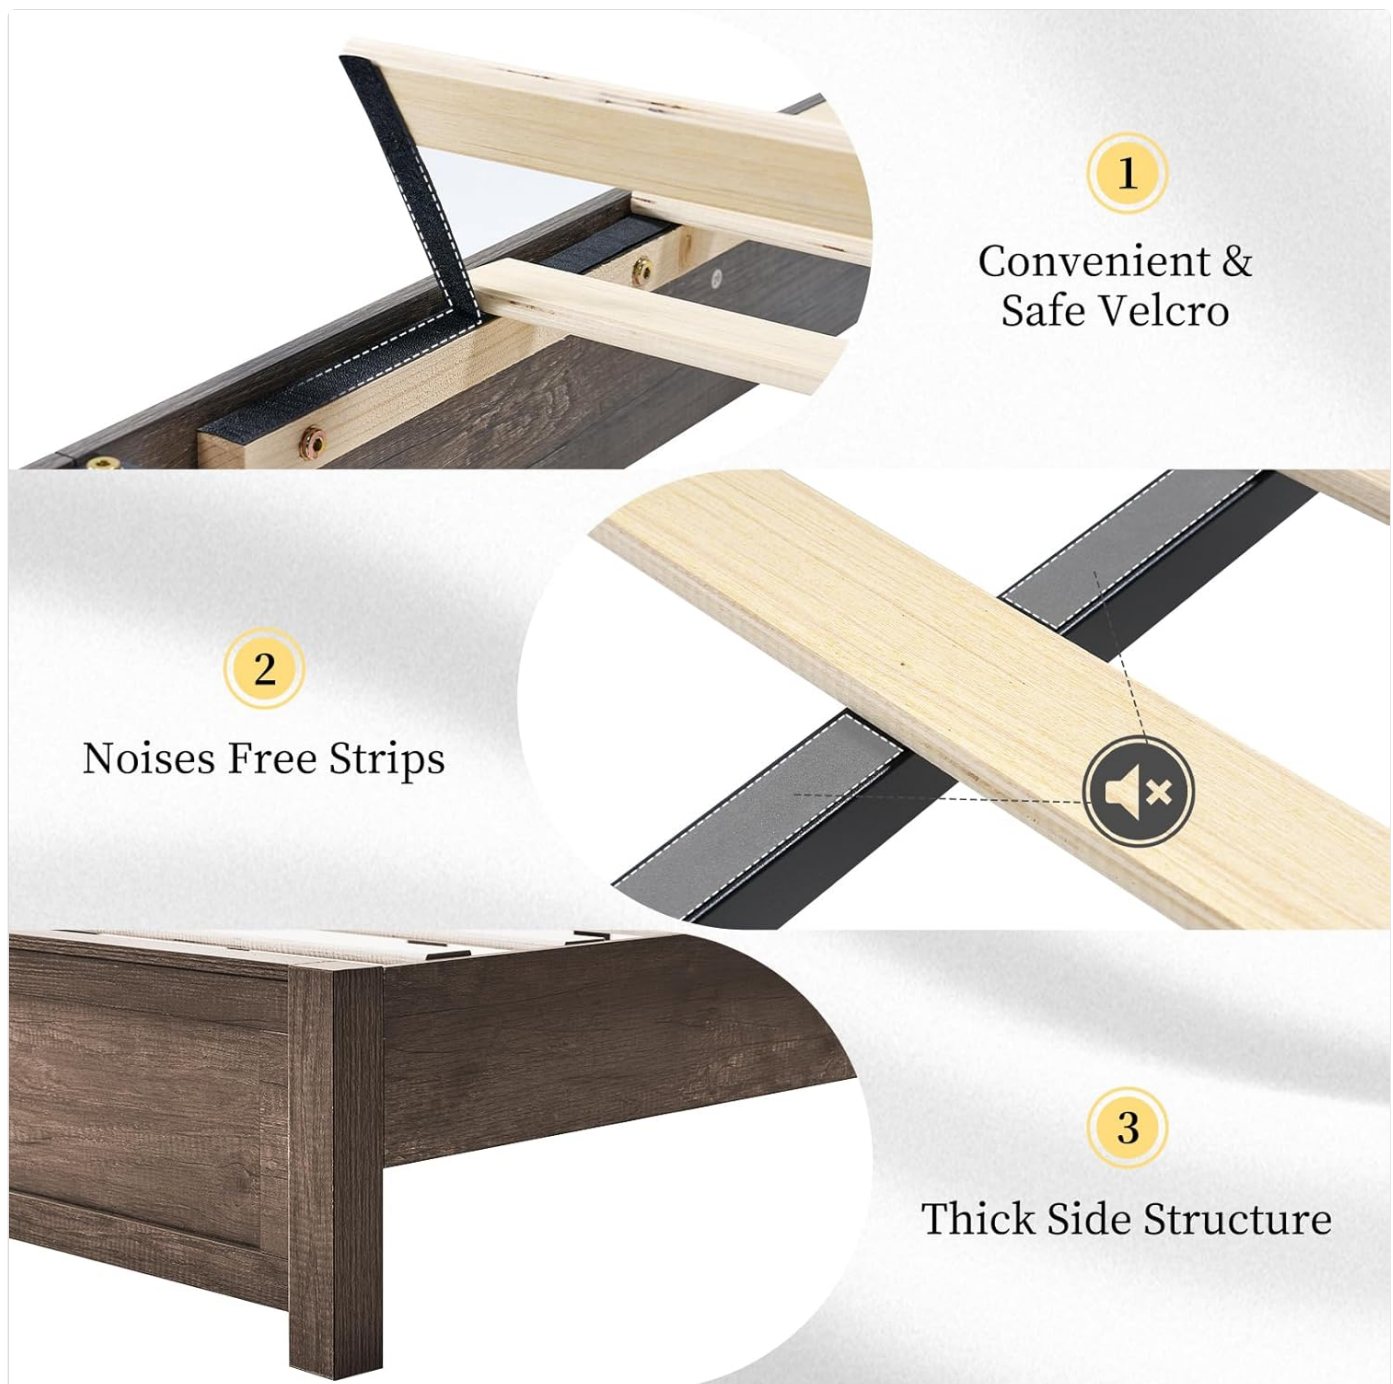


Figure 4: Detail of noise-free slat installation with velcro and thick side structure.

4.5. Final Checks

- Double-check all connections to ensure they are tight and secure.
- Place your King-sized mattress directly onto the slats. No box spring is needed.

5. OPERATING INSTRUCTIONS

This bed frame is a static furniture piece and does not require specific operational steps beyond its primary function as a bed. If your model includes integrated lighting or charging ports, please refer to the separate instructions provided with those components for their specific operation.

6. MAINTENANCE

- **Cleaning:** Wipe the wooden surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may

damage the finish.

- **Hardware:** Periodically inspect all bolts and screws. Tighten any loose connections to maintain the bed frame's stability and prevent squeaking.
- **Movement:** When moving the bed frame, lift it rather than dragging it to prevent damage to the frame or your flooring.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Bed frame is wobbly or unstable.	Loose hardware connections.	Check and tighten all bolts and screws. Ensure the bed is on a level surface.
Squeaking noises.	Loose connections or friction between components.	Tighten all hardware. Ensure slats are properly seated and the noise-free strips are intact.
Mattress slides on the frame.	Slats not properly installed or noise-free strips are worn.	Verify slats are correctly positioned and the anti-slip velcro/EVA foams are functional.
Missing parts or damaged components upon arrival.	Shipping damage or packaging error.	Do not proceed with assembly. Contact LUXOAK customer support immediately for assistance.

8. SPECIFICATIONS

- **Model:** BMB022
- **Brand:** LUXOAK
- **Size:** King
- **Product Dimensions:** 82.3"L x 76"W x 49"H
- **Headboard Height:** 49 inches
- **Under-bed Clearance:** 12.2 inches
- **Weight Capacity:** Up to 1,000 lbs
- **Recommended Mattress Thickness:** 8-12 inches
- **Materials:** Engineered Wood, Metal
- **Color:** Rustic Grey (also available in Distressed White, Black)
- **Assembly Required:** Yes (approx. 45 minutes with 2 people)
- **Special Features:** Overlapped slatted headboard & footboard, hidden metal bed frame, no box spring needed, noise-free design (EVA foams, velcro).



Figure 5: Key features including 49-inch headboard, no box spring, and durable slats.



Figure 6: Under-bed clearance for storage.

9. WARRANTY AND SUPPORT

This LUXOAK bed frame comes with a **one-year warranty** from the date of purchase, covering manufacturing defects. For warranty claims, missing parts, or any other support inquiries, please contact LUXOAK customer service through the retailer where the product was purchased.

Please have your model number (BMB022) and proof of purchase ready when contacting support.