

Bellemave GZZ000065TD2

Bellemave Montessori Twin Floor Bed Instruction Manual

Model: GZZ000065TD2

1. INTRODUCTION

Thank you for choosing the Bellemave Montessori Twin Floor Bed. This manual provides essential information for the safe assembly, operation, and maintenance of your new bed frame. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

2. SAFETY INFORMATION

Your safety and the safety of your child are paramount. Please adhere to the following safety guidelines:

- Ensure the bed frame is properly assembled according to the instructions to prevent collapse.
- Do not exceed the maximum weight capacity of **400 pounds**.
- Be aware of potential pinch points or sharp edges during assembly.
- Regularly check all bolts and screws to ensure they remain tight. Retighten as necessary.
- Keep small parts out of reach of children during assembly.
- Do not allow children to climb on the roof structure or use it for hanging objects that could pose a strangulation hazard.

3. PACKAGE CONTENTS

Before assembly, verify that all components are present. If any parts are missing or damaged, please contact customer support.

- Headboard
- Footboard
- Side Rails
- Roof Frame Components
- Wooden Slats (7 pieces)

- Hardware Pack (screws, bolts, Allen wrench)
- Instruction Manual

4. SETUP AND ASSEMBLY

Assembly typically requires two adults. Please follow the steps below carefully. A Phillips head screwdriver may be required (not included).

4.1 Visual Overview



Figure 1: An image of the fully assembled bed frame, showcasing its house-shaped design and natural wood finish, placed in a decorated child's room.



Figure 2: This image provides a detailed view of the sturdy wooden slats that support the mattress and the design of the headboard and footboard.

4.2 Assembly Steps

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, clean surface to prevent scratches. Identify each component using the provided parts list.
2. **Attach Headboard and Footboard to Side Rails:** Connect the headboard and footboard to the long side rails using the designated bolts and an Allen wrench. Ensure all connections are secure but do not overtighten initially.

3. **Assemble Roof Frame:** Attach the roof frame components to the top of the headboard and footboard posts. Follow the diagram in your specific assembly guide for correct orientation.
4. **Install Slats:** Place the wooden slats across the bed frame, ensuring they are evenly spaced and securely fastened to the side rails. The slats provide essential mattress support.
5. **Final Tightening:** Once all components are in place, go back and securely tighten all bolts and screws. Do not overtighten to avoid stripping the wood.

4.3 Assembly Video

Your browser does not support the video tag.

Video 1: This video provides a visual overview of the Bellemave Montessori Floor Bed in a child's room setting, demonstrating its aesthetic appeal and how it fits into a living space. While not a step-by-step assembly guide, it offers a good visual of the assembled product.

5. OPERATING INSTRUCTIONS

This Montessori floor bed is designed for easy access and independence for children.

- **Mattress Placement:** Place a standard twin-size mattress directly onto the wooden slats. A recommended mattress thickness is 6 inches (mattress not included). No box spring is required.
- **Child Safety:** The low-to-the-ground design allows children to safely climb in and out independently. The integrated headboard and footboard provide a secure sleeping area.
- **Decoration:** The house-shaped frame can be decorated with ribbons, tents, or lanterns to personalize the space. Ensure any decorations are securely attached and do not pose a safety risk.

6. MAINTENANCE

Proper care will extend the life of your bed frame.

- **Dusting:** Dust regularly with a soft, dry cloth.
- **Cleaning:** For spills or dirt, clean with a damp cloth and mild soap. Wipe spills promptly to prevent staining or damage to the wood finish.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners or strong chemical solutions, as these can damage the wood and finish.
- **Hardware Check:** Periodically check and tighten all assembly hardware to ensure the bed remains stable and secure.

7. TROUBLESHOOTING

If you encounter any issues with your bed frame, consider the following common solutions:

- **Wobbling/Instability:** Ensure all bolts and screws are fully tightened. If wobbling persists, disassemble and reassemble, paying close attention to the alignment of parts.
- **Squeaking Noises:** Squeaking can often be resolved by tightening all hardware. Applying a small amount of lubricant (e.g., paraffin wax) to the joints where wood meets wood can also help.
- **Missing Parts:** If you find any parts missing upon unboxing, refer to the 'Package Contents' section and contact customer support for assistance.

8. SPECIFICATIONS

Feature	Detail
Model Number	GZZ000065TD2
Size	Twin
Material	Wood (Pine)
Product Dimensions (L x W x H)	81" x 41" x 61.6"
Weight Capacity	400 lbs
Item Weight	24 lbs
Color	Natural
Assembly Required	Yes
Box Spring Required	No

Product Size inch

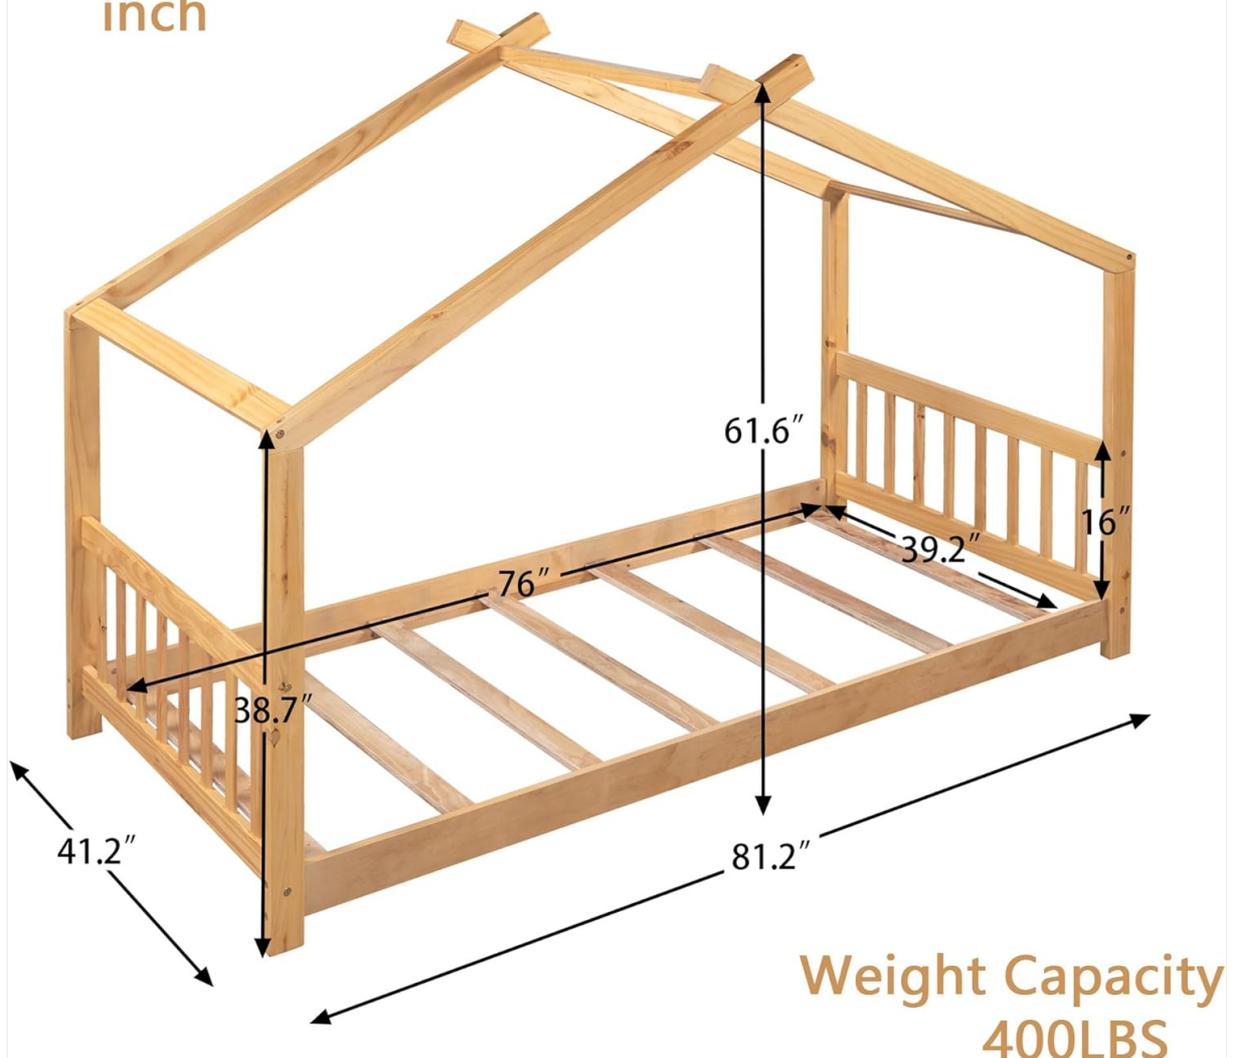


Figure 3: This diagram illustrates the overall dimensions of the bed frame, including length, width, height, and headboard/footboard height.

9. WARRANTY INFORMATION

Bellemave products are manufactured to high-quality standards. For specific warranty details, please refer to the documentation included with your purchase or contact Bellemave customer support. Keep your proof of purchase for any warranty claims.

10. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact Bellemave customer support. Contact information can typically be found on the product packaging or the official Bellemave website.