

Manuals.plus /

> [Genérico](#) /

> User Manual: Genérico Solid Pine Wood Bed Frame 160 x 200 cm

Genérico wenjingqi-850653 (ASIN: B0DHXC1XJJ)

User Manual: Genérico Solid Pine Wood Bed Frame

Model: wenjingqi-850653, ASIN: B0DHXC1XJJ

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Genérico Solid Pine Wood Bed Frame. Please read this manual thoroughly before assembly and retain it for future reference.

Product Overview:

- Bed Frame Material:** Solid untreated pine wood
- Slat Material:** Plywood
- Overall Dimensions (L x W x H):** 222 x 182 x 21 cm
- Suitable Mattress Dimensions:** 160 x 200 cm (mattress not included)
- Features:** Integrated slatted base for optimal mattress support and breathability.

SAFETY INFORMATION

- Ensure all components are present and undamaged before assembly.
- Assemble on a soft, clean surface to prevent scratches.
- Do not overtighten screws during assembly to avoid damaging the wood.
- Regularly check all fasteners to ensure they remain tight.
- This bed frame is designed for indoor use only.
- Do not stand or jump on the bed frame.

SETUP AND ASSEMBLY

Assembly of the bed frame is required. It is recommended that two adults perform the assembly.

Required Tools (Not Included):

- Phillips head screwdriver
- Rubber mallet (optional, for gentle tapping)

Assembly Steps:

- Unpack Components:** Carefully unpack all parts from the packaging. Lay them out on a clean, soft surface to

prevent damage. Verify all parts are present against the included parts list (refer to the diagram in your physical manual).

2. **Assemble Side Rails:** Attach the side rails to the headboard and footboard using the provided hardware. Ensure all connections are secure but do not fully tighten screws yet.
3. **Install Center Support:** Position and secure the center support beam(s) and legs. These are crucial for mattress stability and longevity.
4. **Place Slats:** Lay the plywood slats across the bed frame, ensuring they are evenly spaced and securely seated in their designated positions. Some slats may require screwing into the frame.
5. **Final Tightening:** Once all components are in place and aligned, systematically tighten all screws and fasteners. Do not overtighten.
6. **Inspect:** Before placing the mattress, inspect the assembled frame to ensure it is stable, level, and all connections are secure.



Figure 1: View of the bed frame structure with slatted base.



Figure 2: Detail of the slat and frame connection.

OPERATING INSTRUCTIONS

This bed frame is designed to support a mattress of 160 x 200 cm. No specific operational steps are required beyond placing the mattress on the slatted base.

- Ensure the mattress is centered on the frame to distribute weight evenly.
- Avoid placing excessive weight on any single point of the frame or slats.



Figure 3: The bed frame with a mattress in place.

MAINTENANCE

Proper maintenance will extend the life of your bed frame.

- **Cleaning:** Wipe the wood surfaces with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the untreated pine wood.
- **Fastener Check:** Periodically (e.g., every 3-6 months) check all screws and bolts to ensure they are tight. Retighten if necessary.
- **Wood Care:** As the frame is made of untreated pine, it can be stained, painted, or varnished if desired, to protect the wood and match your decor. Follow the instructions of your chosen wood treatment product.
- **Ventilation:** Ensure adequate air circulation around and under the mattress to prevent moisture buildup and mold growth. The slatted base is designed to aid in this.

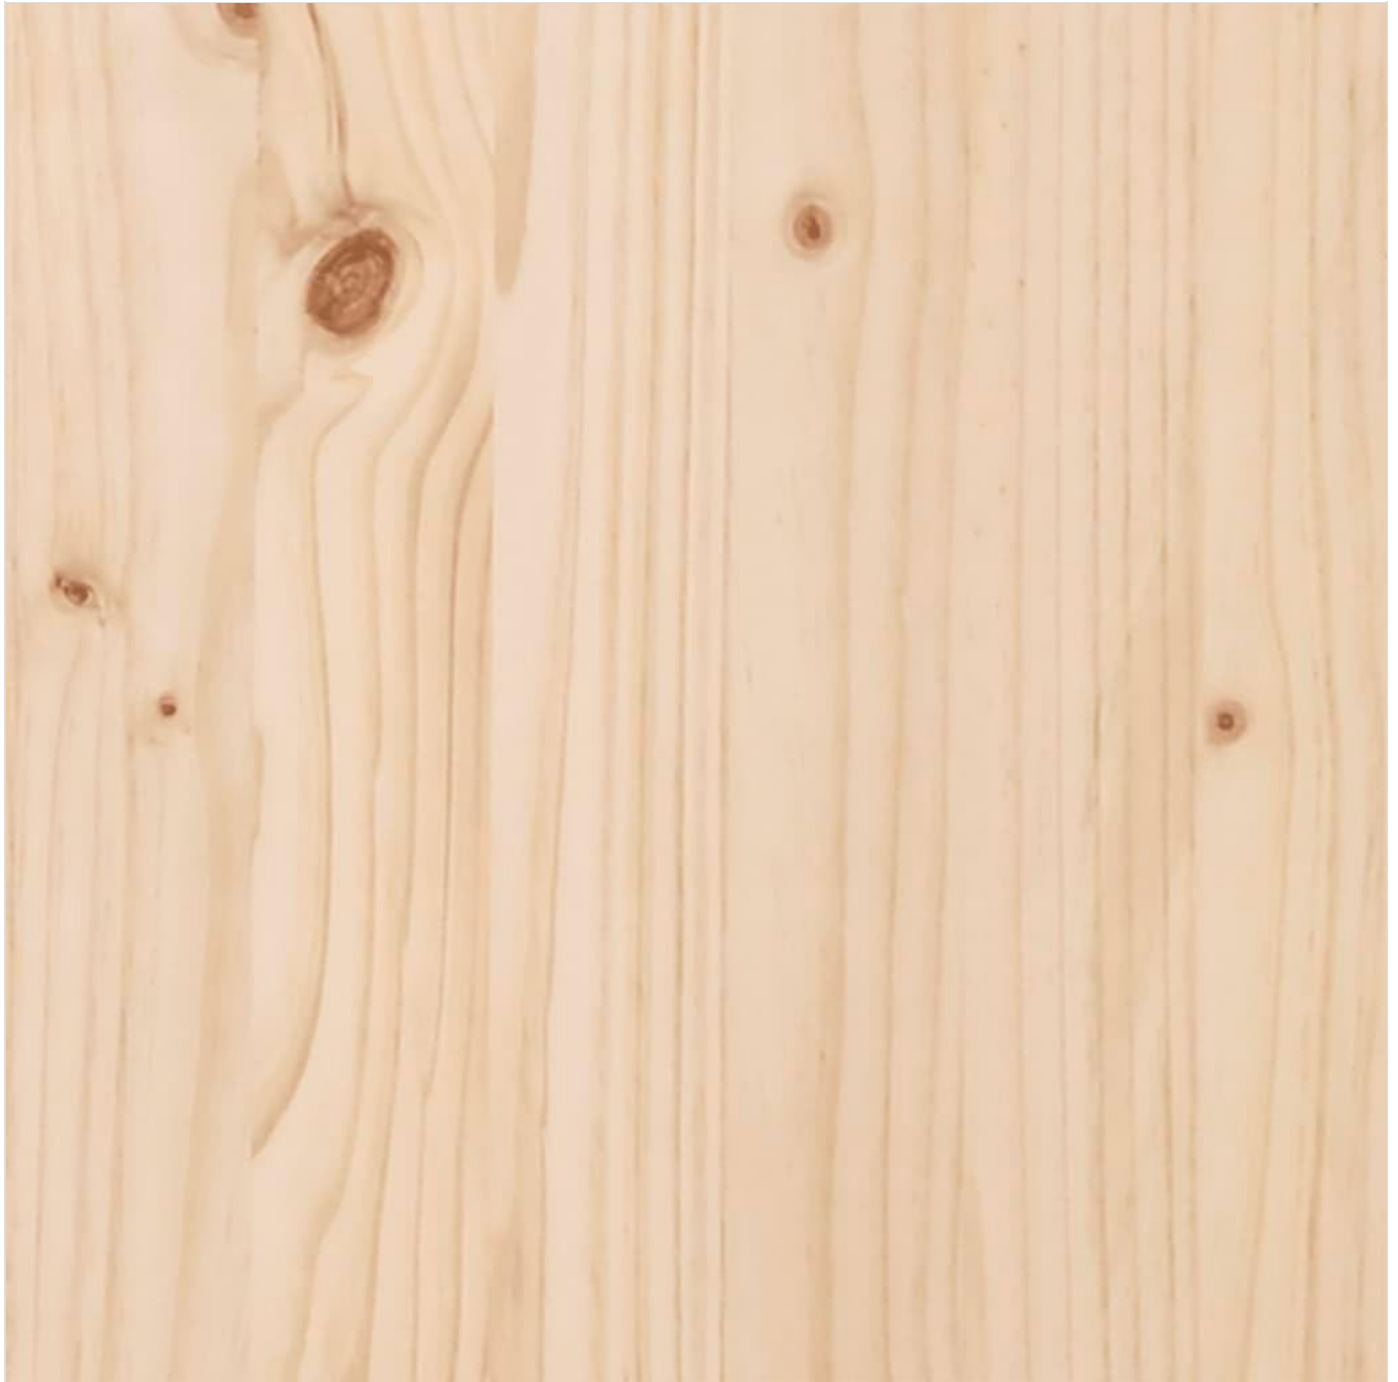


Figure 4: Natural pine wood grain detail.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bed frame is wobbly or unstable.	Loose fasteners; uneven assembly; missing components.	Check and tighten all screws and bolts. Ensure all parts are correctly assembled according to the instructions. Verify all components are present.
Squeaking noises.	Loose connections; friction between wood parts or slats.	Tighten all fasteners. Apply a small amount of paraffin wax or silicone spray to points of friction between slats and frame, or between frame joints.
Slats falling out or sagging.	Incorrect slat placement; excessive weight; damaged slats.	Ensure slats are properly seated and secured. Do not exceed the recommended weight capacity. Replace any damaged slats.

SPECIFICATIONS

Feature	Detail
Brand	Genérico
Model Number	wenjingqi-850653
ASIN	B0DHXC1XJJ
Bed Frame Material	Solid Pine Wood (untreated)
Slat Material	Plywood
Overall Product Dimensions (L x W x H)	222 x 182 x 21 cm (87.4 x 71.7 x 8.3 inches)
Suitable Mattress Dimensions (W x L)	160 x 200 cm (63 x 78.7 inches)
Assembly Required	Yes
Manufacturer	vidaxl

WARRANTY AND SUPPORT

Information regarding specific warranty terms for this product is not available in the provided data. Please refer to your purchase documentation or contact the retailer for warranty details.

For product support, assembly assistance, or to report missing/damaged parts, please contact the seller or manufacturer directly through your purchase platform.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DHXC1XJJ>

More documents and user manuals: **<https://manuals.plus/>**