

KOMFOTT 10801-HU-KT

KOMFOTT Twin Size Wood Platform Bed Frame User Manual

Model: **10801-HU-KT**

Brand: **KOMFOTT**

INTRODUCTION

Thank you for choosing the KOMFOTT Twin Size Wood Platform Bed Frame. This manual provides essential information for the safe assembly, operation, and maintenance of your new bed frame. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

Important Safety Information

- Do not exceed the maximum weight capacity of **550 lbs**. Overloading can cause damage to the bed frame and may result in injury.
- Exercise caution around the rubber wood legs, as they may have sharp edges.
- Ensure all screws and connections are tightened securely before use and periodically check for looseness.
- Keep small parts and packaging materials away from children during assembly.
- Assembly should be performed by at least two adults for safety and ease.

PACKAGE CONTENTS

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact KOMFOTT customer support.

- 1 x Bed Frame (includes headboard, side rails, footboard, and slats)
- 1 x User Manual (this document)
- Hardware Pack (screws, bolts, Allen wrench, etc. - specific contents may vary, refer to included hardware list)



Image: Overview of the KOMFOTT Twin Size Wood Platform Bed Frame components, including the headboard, side rails, footboard, and wooden slats, ready for assembly.

SPECIFICATIONS

Model Number	10801-HU-KT
Size	Twin
Overall Dimensions (L x W x H)	77.5" x 43" x 41"
Footboard Height	12"
Under-Bed Clearance	8.5"
Recommended Mattress Thickness	8" - 12"

Maximum Weight Capacity	550 lbs
Net Weight	49.5 lbs
Material	PE Rattan, Rubber Wood, Plywood
Color	Natural
Assembly Required	Yes
Box Spring Needed	No



Image: Detailed dimensions diagram of the KOMFOTT Twin Size Wood Platform Bed Frame, showing overall length, width, height, headboard height, and under-bed clearance.

SETUP AND ASSEMBLY

Follow these steps carefully to assemble your KOMFOTT Twin Size Wood Platform Bed Frame. It is recommended to

have two people for assembly.

Tools Required:

- Included Allen Wrench
- Phillips Head Screwdriver (not always included, may be needed for some screws)

Assembly Steps:

1. **Unpack and Identify Parts:** Carefully unpack all components and hardware. Lay them out on a clean, soft surface to prevent scratches. Refer to the parts list in your hardware pack to identify each piece.
2. **Attach Side Rails to Headboard and Footboard:** Connect the side rails to the headboard and footboard using the provided bolts and an Allen wrench. Ensure the connections are firm but do not fully tighten all bolts until the frame is fully assembled.



12 Robust Slats



Firm Screw Connections




Image: Close-up view illustrating the firm screw connections used to secure the bed frame components, ensuring stability.

3. **Install Center Support Legs (if applicable):** Some models may include center support legs. Attach these to the center support beam or directly to the side rails as indicated in your specific hardware manual.
4. **Place Slats:** Lay the plywood slats across the bed frame, ensuring they are evenly spaced and secured to the side

rails. Many slats come with pre-drilled holes or Velcro strips for easy attachment.



12 Robust Slats

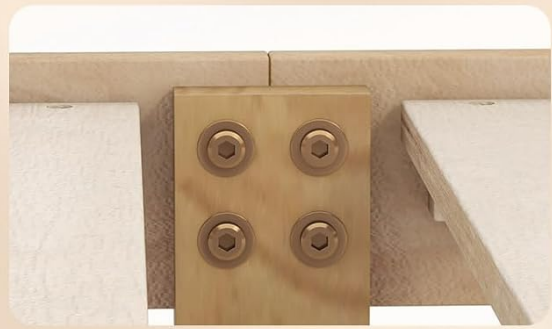

Firm Screw Connections



Image: Detailed view of the 12 robust plywood slats, demonstrating their placement and support structure within the bed frame.

5. **Final Tightening:** Once all components are in place and aligned, systematically tighten all bolts and screws. Ensure the frame is stable and level.
6. **Position Bed Frame:** Carefully move the assembled bed frame to its desired location.
7. **Add Mattress:** Place your mattress directly onto the slats. No box spring is needed for this platform bed frame.



Image: The fully assembled KOMFOTT Twin Size Wood Platform Bed Frame with a mattress, showcasing its natural wood finish and rattan headboard in a bedroom setting.

OPERATING INSTRUCTIONS

The KOMFOTT Twin Size Wood Platform Bed Frame is designed for straightforward use as a mattress foundation. Simply place your compatible mattress (8"-12" recommended thickness) directly onto the wooden slats. The sturdy construction and 550 lbs weight capacity ensure reliable support for sleeping and lounging.

Under-Bed Storage:

Utilize the 8.5-inch under-bed clearance for convenient storage. This space is ideal for storing boxes, bins, or other items, helping to keep your bedroom tidy. It also allows for easy cleaning underneath the bed, including access for robotic vacuums.

Additional Under-bed Storage Space



Image: A visual representation of the 8.5-inch under-bed clearance, highlighting the ample space available for storage or cleaning.

CARE AND MAINTENANCE

- **Cleaning:** Wipe the wood and rattan surfaces with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, which can damage the finish. For the rattan, a soft brush can be used to remove dust from crevices.
- **Regular Inspection:** Periodically check all bolts and screws to ensure they remain tight. Re-tighten if necessary to maintain the bed frame's stability and structural integrity.
- **Avoid Excessive Moisture:** Protect the bed frame from prolonged exposure to direct sunlight and excessive moisture, which can cause warping or damage to the wood and rattan.
- **Weight Distribution:** Distribute weight evenly across the bed frame. Avoid concentrating heavy loads on small areas.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bed frame feels wobbly or unstable.	Loose connections or uneven assembly.	Ensure all bolts and screws are fully tightened. Check that the bed frame is on a level surface. If not, use shims under the legs to level it.
Squeaking noises.	Loose connections, friction between wood parts or slats.	Re-tighten all hardware. Apply a small amount of furniture wax or silicone spray to points where wood components rub against each other, especially where slats meet the side rails.
Slats appear to sag or shift.	Improper slat placement or insufficient support.	Ensure slats are evenly spaced and securely fastened to the side rails. Verify that any center support legs are properly installed and making contact with the floor.
Missing parts during unboxing.	Packaging error or lost during transit.	Carefully check all packaging materials. If parts are still missing, contact KOMFOTT customer support with your purchase details and a list of missing items.

WARRANTY AND SUPPORT

Specific warranty information for the KOMFOTT Twin Size Wood Platform Bed Frame is typically provided with your purchase documentation or on the product's retail page. Please refer to those resources for details regarding warranty coverage and duration.

For technical assistance, missing parts, or any other inquiries, please contact KOMFOTT customer support through the retailer where you purchased the product or visit the official KOMFOTT website for contact information.

KOMFOTT Customer Service:

Please refer to your purchase receipt or the retailer's website for the most current contact information.

Online resources may be available on the KOMFOTT brand store page on Amazon.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question