

[Manuals.plus](#) /

› [KOMFOTT](#) /

› KOMFOTT Full Size Wood Platform Bed Frame User Manual

KOMFOTT 10801-HU-KT



KOMFOTT Full Size Wood Platform Bed Frame

USER MANUAL

Introduction

This user manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your KOMFOTT Full Size Wood Platform Bed Frame. Please read this manual thoroughly before assembly and use to ensure proper setup and safe operation.



Image: The KOMFOTT Full Size Wood Platform Bed Frame, featuring a natural wood finish and a rattan headboard, shown fully assembled in a bedroom setting.

Important Safety Information:

- Do not load more than 800 lbs on the bed frame. Exceeding this weight limit may cause damage to the frame and potential injury.
- Be careful around sharp edges during assembly and use to prevent injury.
- Ensure all screws and connections are tightened securely before use and periodically check for looseness.
- Keep small parts away from children during assembly.

Product Features

- **Solid Rubber Wood Legs:** Constructed from durable rubber wood, known for its resilience and attractive grain, providing a natural aesthetic and stable support.



Image: Detail showing the solid rubber wood legs of the bed frame, with an inset image of raw rubber wood logs highlighting the material's quality.

- **Generous Under-bed Space:** Features 8.5 inches of clearance beneath the frame, ideal for storage solutions or easy cleaning with robotic vacuums.



Image: A view of the bed frame's underside, illustrating the 8.5-inch clearance for storage or cleaning, with storage bins and a robotic vacuum visible.

- **Natural Style Rattan Headboard:** A PE rattan headboard provides comfortable back support for reading and lounging, adding an elegant bohemian touch to your bedroom decor.



Image: A close-up of the bed's headboard, showcasing the natural PE rattan weave and its aesthetic appeal.

- **Robust Slat System:** Equipped with 12 strong plywood slats and firm screw connections, ensuring robust mattress support and a weight capacity of up to 800 lbs.

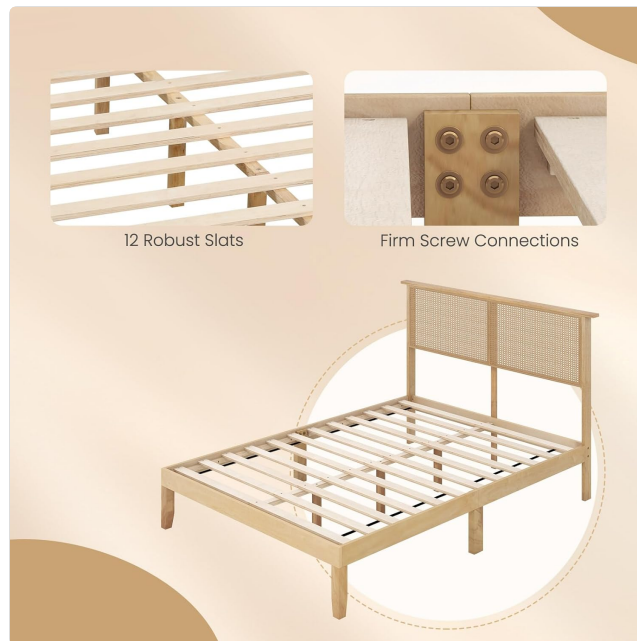


Image: Detailed view of the bed frame's internal structure, highlighting the 12 robust plywood slats and the secure metal screw connections for enhanced stability.

- **No Box Spring Needed:** The design supports your mattress directly, eliminating the need for a box spring, simplifying setup, and reducing overall costs. Recommended mattress thickness: 8"-12".

Components List

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Bed Frame Components (Headboard, Side Rails, Footboard, Support Legs)
- Plywood Slats (12 pieces)
- Hardware Pack (Screws, Bolts, Washers, Allen Wrench)
- User Manual (This document)



Image: An overhead view of the disassembled KOMFOTT bed frame, showing all major wooden components and slats, ready for assembly.

Setup and Assembly Instructions

Assembly is required for this product. It is recommended to have two people for assembly. Please follow these steps carefully.



Image: A detailed diagram illustrating the overall dimensions of the KOMFOTT bed frame, including length, width, height, headboard height, and under-bed clearance.

1. **Unpack and Identify Parts:** Carefully unpack all components from the packaging. Lay them out on a clean, soft surface (like a rug or blanket) to prevent scratches. Identify each part using the provided components list.
2. **Attach Side Rails to Headboard:** Connect the side rails to the headboard using the designated bolts and an Allen wrench. Ensure the connections are firm but do not overtighten initially.
3. **Attach Side Rails to Footboard:** Similarly, connect the other end of the side rails to the footboard. Ensure the frame is square and stable.
4. **Install Center Support Legs (if applicable):** If your model includes center support legs, attach them to the central support beam or directly to the frame as indicated in the diagram.
5. **Place Slats:** Lay the plywood slats across the bed frame, ensuring they are evenly spaced and secured into the pre-drilled holes or attached with the provided fasteners. The slats provide direct support for your mattress.
6. **Final Tightening:** Once all components are in place and the frame is assembled, go back and securely tighten all bolts and screws. Do not overtighten to avoid stripping threads.
7. **Position the Bed:** Carefully move the assembled bed frame to its desired location.

Operating Instructions

Your KOMFOTT bed frame is designed for optimal comfort and support without the need for a box spring.

- **Mattress Placement:** Place your full-size mattress directly onto the assembled plywood slats. Ensure the mattress is centered and fits within the frame.
- **Weight Capacity:** The bed frame is designed to support a maximum weight of 800 lbs (including mattress and occupants). Do not exceed this limit.

- **Under-bed Storage:** Utilize the 8.5-inch under-bed clearance for storage bins, boxes, or other items to maximize space in your bedroom.

Maintenance

Regular maintenance will help prolong the life and appearance of your bed frame.

- **Cleaning the Wood Frame:** Wipe the rubber wood frame with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as they may damage the wood finish. Dry immediately with a clean cloth.
- **Cleaning the Rattan Headboard:** Gently dust the rattan headboard with a soft brush or a vacuum cleaner with a brush attachment. For deeper cleaning, wipe with a slightly damp cloth and allow to air dry completely.
- **Hardware Check:** Periodically (every 3-6 months) check all bolts and screws to ensure they remain tight. Retighten if necessary to maintain stability and prevent squeaking.
- **Avoid Excessive Moisture:** Keep the bed frame away from excessive moisture or direct sunlight to prevent warping or fading of the wood and rattan.

Troubleshooting

Problem	Possible Cause	Solution
Bed frame is wobbly or unstable.	Loose bolts or screws. Uneven floor.	Ensure all assembly hardware is securely tightened. If the floor is uneven, place shims under the legs to level the frame.
Squeaking noises.	Loose connections. Slats rubbing against the frame.	Tighten all bolts and screws. Apply a small amount of wax or felt pads where slats meet the frame to reduce friction.
Mattress sags in the middle.	Damaged or improperly spaced slats. Exceeded weight capacity.	Check slats for damage and ensure they are evenly spaced and securely fastened. Verify that the total weight on the bed does not exceed 800 lbs.

Specifications

Attribute	Detail
Model Number	10801-HU-KT
Size	Full
Overall Dimensions (L x W x H)	77.5" x 57.5" x 41"
Footboard Height	12"
Under-bed Clearance	8.5"
Material	PE Rattan, Rubber Wood, Plywood
Color	Natural
Maximum Weight Capacity	800 lbs
Net Weight	57.5 lbs

Attribute	Detail
Recommended Mattress Thickness	8" - 12"
Assembly Required	Yes

Warranty and Support

KOMFOTT is committed to providing high-quality products. For specific warranty details, please refer to the warranty card included with your purchase or visit the official KOMFOTT website.

For any questions, missing parts, or assistance with assembly, please contact KOMFOTT customer support:

- **Online Support:** Visit the [KOMFOTT Store on Amazon](#) for FAQs and contact options.
- **Email:** Refer to your purchase documentation for direct email support.

Please retain this manual for future reference.