

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Tyger Auto](#) /

› [Tyger Auto T2 Low Profile Soft Roll-up Tonneau Cover Instruction Manual for 2015-2025 Ford F-150 5.5' Bed \(Model TG-BC2F6229\)](#)

Tyger Auto TG-BC2F6229

Tyger Auto T2 Low Profile Soft Roll-up Tonneau Cover

Model: TG-BC2F6229 | Compatible with 2015-2025 Ford F-150 Fleetside 5.5' (67") Bed

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Tyger Auto T2 Low Profile Soft Roll-up Tonneau Cover. Designed for durability and ease of use, this cover helps protect your truck bed cargo from the elements while maintaining a sleek appearance. Please read these instructions thoroughly before proceeding with installation or use.

2. SAFETY INFORMATION

- Always wear appropriate personal protective equipment, such as gloves and eye protection, during installation.
- Ensure the truck bed is clean and free of debris before installation to prevent damage to the cover or vehicle.
- Do not operate the vehicle with the tonneau cover improperly secured.
- Avoid placing heavy or sharp objects directly on the cover, as this may cause damage.
- Keep hands and fingers clear of moving parts when rolling or unrolling the cover.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:


- Cover assembly (pre-assembled vinyl tarp with crossbars and front header)
- Side rails (left and right)
- Mounting clamps
- Weather seals (if applicable)
- Instruction manual

4. COMPATIBILITY AND FITMENT

This Tyger Auto T2 Low Profile Soft Roll-up Tonneau Cover is compatible with:

- **Vehicle:** 2015-2025 Ford F-150
- **Bed Type:** Fleetside (Not for Stepside)
- **Bed Length:** 5.5' (67") Bed

It is crucial to confirm your truck's bed length before installation. The cover is designed to fit specific bed dimensions.

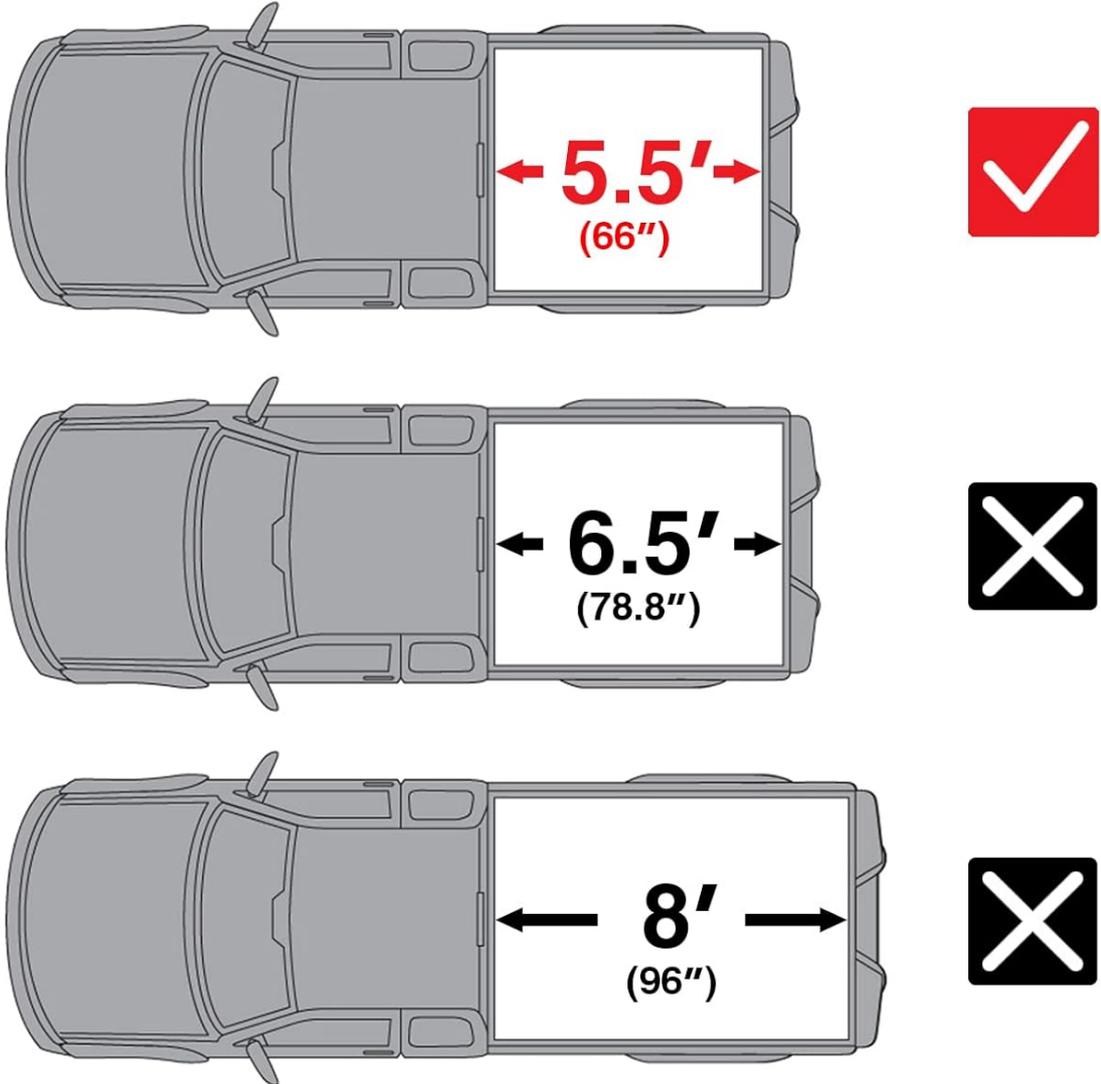

 **Measure your bed length before ordering**
Still unsure? Contact your dealer for the bed size.

Figure 4.1: Measure your truck bed length to ensure compatibility. This cover is designed for 5.5' (66-67") beds.

5. SETUP AND INSTALLATION

The Tyger Auto T2 Tonneau Cover features an easy, no-drilling installation process. Follow these steps for proper setup:

- 1. Prepare the Truck Bed:** Clean the truck bed rails thoroughly to ensure proper adhesion of weather seals and secure clamping.
- 2. Install Front Header Seal:** Apply the provided weather seal to the front bulkhead of the truck bed, ensuring a tight fit.
- 3. Position Side Rails:** Place the left and right side rails onto the truck bed rails. Ensure they are aligned correctly and extend over the bed space, allowing full access to stake pockets.
- 4. Secure Side Rails with Clamps:** Use the stainless steel clamps to secure the side rails to the truck bed. Tighten the clamps evenly along the length of the rails. *Note: Small holes may need to be cut in over-the-bedrail bedliners to*

secure clamps; under-the-bedrail bedliners do not require modification.

5. **Attach Cover Assembly:** Place the pre-assembled cover onto the installed side rails, aligning the front header with the front of the bed. Secure the front header to the side rails using the integrated fasteners.
6. **Adjust Tension:** The cover includes a tension system at the end of the side rails. Adjust this system to keep the vinyl tarp tight and wrinkle-free.



Figure 5.1: Visual guide for the quick and easy installation process.



Figure 5.2: Detail of the no-drill clamp installation for securing the side rails.

6. OPERATING INSTRUCTIONS

The T2 Low Profile Soft Roll-up Tonneau Cover is designed for convenient access to your truck bed.

6.1. Opening the Cover (Rolling Up)

1. **Release Latch:** At the tailgate end, locate and release the latch lock system.
2. **Detach Velcro:** Gently peel back the Velcro strip along both side rails, starting from the tailgate.
3. **Roll Up:** Carefully roll the marine-grade vinyl tarp towards the cab of the truck. The built-in horizontal crossbars will roll up with the tarp.
4. **Secure in Open Position:** Once fully rolled, secure the cover at the back of the cab using the integrated straps or buckles to maximize access to the pickup truck bed.

ALL-WEATHER PROTECTION



Figure 6.1: The tonneau cover rolled up, demonstrating full bed access.

6.2. Closing the Cover (Rolling Down)

1. **Unsecure Cover:** Release the straps or buckles holding the cover in the open position.
2. **Roll Down:** Slowly unroll the vinyl tarp towards the tailgate, ensuring it remains centered on the side rails.
3. **Secure Velcro:** Press down firmly along the Velcro strips on both side rails to secure the cover.
4. **Engage Latch:** At the tailgate end, engage the latch lock system to fully secure the cover.



Figure 6.2: The tonneau cover in its closed position, protecting the truck bed.

6.3. Utilizing Bed Rail Surface

The T2's sleek low-profile design allows the cover rails to extend over the bed space, enabling full utilization of the bed rail surface and stake pockets for mounting other truck bed accessories.

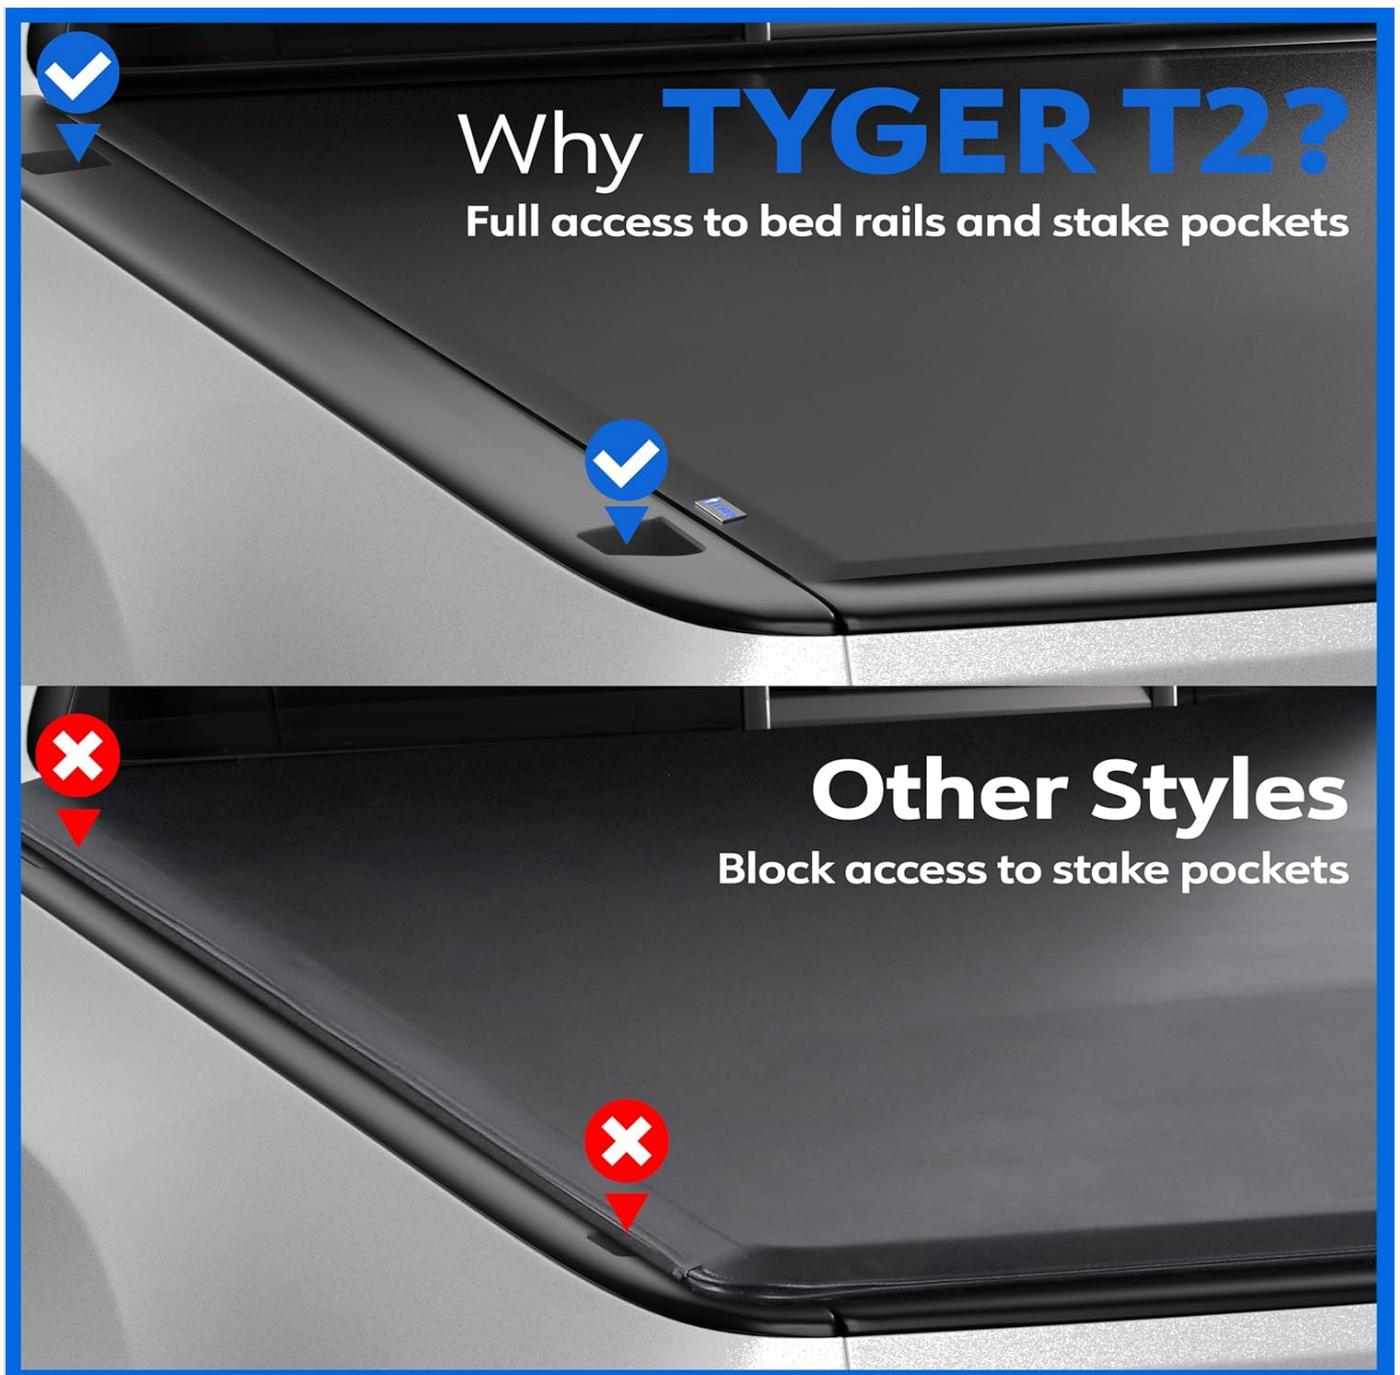


Figure 6.3: The T2 design provides full access to truck bed stake pockets.

7. MAINTENANCE

Regular maintenance will extend the life and appearance of your tonneau cover.

- **Cleaning:** Wash the vinyl tarp regularly with mild soap and water. Avoid harsh chemicals or abrasive cleaners, as these can damage the vinyl. Rinse thoroughly and allow to air dry.
- **Vinyl Protection:** Apply a UV protectant specifically designed for vinyl to prevent fading and cracking due to sun exposure.
- **Hardware Check:** Periodically inspect all clamps, latches, and fasteners to ensure they are secure and functioning correctly. Tighten any loose hardware.
- **Weather Seals:** Check weather seals for wear or damage. Replace if necessary to maintain water resistance.
- **Tension Adjustment:** Adjust the tension system as needed to keep the cover taut, especially in varying weather conditions.



Figure 7.1: The tonneau cover provides protection in various weather conditions.

8. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Cover Not Lying Flat/Wrinkled:** Adjust the tension system located at the end of the side rails. Ensure the cover is properly centered and the Velcro strips are fully engaged.
- **Water Leakage:** Check all weather seals, especially at the front bulkhead and along the side rails. Ensure clamps are tight and the cover is properly latched at the tailgate. Minor water intrusion during heavy rain is possible with any soft cover.
- **Difficulty Rolling/Unrolling:** Ensure the side rails are clean and free of obstructions. Check that the latch system is fully disengaged when rolling up.
- **Loose Clamps:** Periodically re-tighten all mounting clamps to ensure the side rails remain securely attached to the truck bed.


9. SPECIFICATIONS

Feature	Detail
Brand	Tyger Auto
Model	TG-BC2F6229 (TYGER T2)
Style	T2 Low Profile Soft Roll-Up
Exterior Finish	Vinyl
Material	Aluminum, Stainless Steel, Vinyl
Lock Type	Tailgate
Item Weight	28.8 pounds
Package Dimensions	70 x 12 x 5.5 inches
Automotive Fit Type	Vehicle Specific Fit

10. WARRANTY AND SUPPORT

This product is backed by a **LIMITED LIFETIME WARRANTY** for US customers. For warranty claims, technical support, or any questions regarding your Tyger Auto T2 Tonneau Cover, please contact Tyger Auto customer service directly. Refer to the product packaging or the official Tyger Auto website for the most current contact information.

Related Documents - TG-BC2F6229

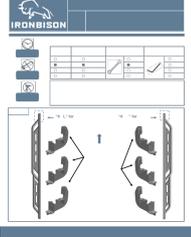	<p>Tyger Auto T3 Soft Tri-Fold Tonneau Cover Installation Guide</p> <p>Step-by-step instructions for installing the Tyger Auto T3 Soft Tri-Fold Tonneau Cover on various truck models. Includes parts list, clamp and latch overview, and after-installation care.</p>
	<p>IRONBISON Rocker Step Installation Guide for Chevy Colorado & GMC Canyon (2015+)</p> <p>Step-by-step installation instructions for the IRONBISON Rocker Step (Part No. IB-CRS-001) compatible with 2015 and newer Chevy Colorado and GMC Canyon Crew Cab vehicles. Includes parts list, hardware details, and installation tips.</p>



[WINBO Roof Rail Installation Guide for Honda CRV 2012+ \(PW007831\)](#)

Step-by-step installation instructions for the WINBO Roof Rail (Part# PW007831) designed for the Honda CRV 2012 and later models. Includes parts list, detailed assembly steps, and important notices.



[Armorlite Installation Instructions for 2016-2023 Toyota Tacoma Double Cab \(Auto Trans\)](#)

Detailed step-by-step guide for installing Armorlite floor liners in a 2016-2023 Toyota Tacoma Double Cab with automatic transmission. Includes tool suggestions and important pre-installation notes.



[Guide de Prise en Main : Autoradio Android GOAUTORADIO pour Citroën C3](#)

Manuel d'installation et d'utilisation de l'autoradio multimédia Android GOAUTORADIO, compatible avec les modèles Citroën C3 (2016-2024) et Citroën C3 Aircross (2017-2014). Inclut des instructions pour le branchement, les fonctions GPS, Bluetooth, Wi-Fi, Carplay, Android Auto, et une section FAQ.



[Boost Auto Parts 2019+ GM All Lights Mod Installation Guide](#)

Detailed installation guide from Boost Auto Parts for the 2019+ GM All Lights Mod. Learn how to enable your fog lights to stay on with high beams on 2019-2025 Chevrolet Silverado and GMC Sierra trucks. This guide covers compatibility, step-by-step instructions for a quick 5-minute installation, and support contact information.