

KOMFOTT 10842-HU-KT

KOMFOTT Full Size Wood Platform Bed Frame with Headboard Instruction Manual

Model: 10842-HU-KT

Contents	Assembly	Usage	Safety Information	Package	Specifications	Warranty & Support
			Maintenance	Troubleshooting		
			Support			

INTRODUCTION

This manual provides detailed instructions for the assembly, usage, and maintenance of your KOMFOTT Full Size Wood Platform Bed Frame with Headboard. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

The KOMFOTT Full Size Wood Platform Bed Frame is designed for stability and comfort, featuring solid pine wood construction, a slatted headboard, and integrated under-bed storage space. Its robust design eliminates the need for a box spring.

SAFETY INFORMATION

- Always assemble the bed frame on a soft, clean surface to prevent damage to the product or your floor.
- Ensure all bolts and screws are securely tightened before use. Periodically check and re-tighten fasteners as needed.
- Do not exceed the maximum weight capacity of **440 lbs**.
- Keep small parts away from children during assembly to prevent choking hazards.
- Use only the provided hardware. Substituting hardware may compromise the bed frame's stability and safety.
- Avoid standing or jumping on the bed frame.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact KOMFOTT customer support.

- Headboard components
- Footboard
- Side rails (2)
- Plywood slats (8)
- Middle support legs
- Hardware pack (screws, bolts, Allen wrench)
- Instruction Manual

ASSEMBLY INSTRUCTIONS

Assembly typically requires two adults. Please follow these steps carefully:

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out on a soft, clean surface and compare them against the parts list to ensure everything is present.
2. **Assemble the Headboard:** Attach the headboard panels and vertical slats using the designated hardware. Ensure all connections are snug but do not overtighten until the entire frame is assembled.
3. **Attach Side Rails:** Connect the side rails to the assembled headboard and footboard using the provided bolts. Make sure the rail hooks are properly seated into the corresponding slots.
4. **Install Middle Support Legs:** Secure the middle support legs to the central beam of the bed frame. These legs are crucial for distributing weight and enhancing stability.
5. **Place Plywood Slats:** Position the 8 plywood slats evenly across the bed frame. The slats provide direct support for your mattress. Secure them to the side rails and central beam using the provided screws.
Note: The slat support system eliminates the need for a box spring.



Image: The bed frame without a mattress, illustrating the wooden slat support and middle support legs.

6. **Final Tightening:** Once all components are in place, go back and securely tighten all bolts and screws. Do not overtighten to avoid stripping the threads or damaging the wood.

Stable Wooden Frame

Offers strong support and stability for a long-lasting foundation



Solid Pine Wood



8 Plywood Slats



Middle Support Legs



Image: Visual representation of the stable wooden frame, detailing solid pine wood, plywood slats, and middle support legs.

USAGE GUIDELINES

Mattress Placement

Place your full-size mattress directly onto the assembled wooden slats. The robust slat system provides ample support, making a box spring unnecessary.

No Box Spring Needed



Image: Illustration demonstrating that no box spring is required with this bed frame.

Under-Bed Storage

The bed frame features **12 inches** of clearance beneath, providing convenient space for storage. This area is suitable for items such as storage boxes, shoes, or even a robotic vacuum cleaner.

Under-bed Storage Space



Shoes



Storage Box



Robotic Vacuum



Image: Depiction of the under-bed storage space, showing various items that can be stored.

Headboard and Anti-Slip Design

The elegant slatted headboard offers comfortable back support for activities like reading. The bed frame also incorporates an anti-slip embedded design to help keep your mattress securely in place, preventing shifting during use.



Elegant Slatted Headboard

Adds a touch of timeless charm and modern flair

Anti-slip Embedded Design

Keeps your mattress securely in place, preventing shifting



Image: Close-up of the slatted headboard and the anti-slip feature for mattress stability.

MAINTENANCE

- **Cleaning:** Wipe the bed frame with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the wood finish.
- **Inspections:** Periodically check all bolts and screws to ensure they remain tight. Re-tighten as necessary to maintain structural integrity.
- **Wood Care:** To preserve the wood finish, keep the bed frame away from direct sunlight and extreme temperature changes.

TROUBLESHOOTING

Issue: Bed frame feels wobbly or unstable.

Solution: Ensure all assembly bolts and screws are fully tightened. Check that the middle support legs are properly installed and making firm contact with the floor. Verify that the slats are securely fastened to the frame.

Issue: Squeaking noises.

Solution: Squeaking can often be resolved by re-tightening all hardware. If squeaking persists, check for any friction points between wood components or between the mattress and frame. Applying a small amount of wax or lubricant to contact points can sometimes help.


Issue: Mattress slides on the frame.

Solution: The bed frame includes an anti-slip embedded design. Ensure your mattress is properly centered on the slats. If sliding continues, consider using a non-slip mattress pad between the mattress and the slats.

SPECIFICATIONS

Feature	Detail
Model	10842-HU-KT
Size	Full
Overall Dimensions (L x W x H)	79.5" x 57.5" x 33.5"
Bed Platform Dimensions (L x W)	76" x 54.5"
Under-Bed Clearance	12"
Footboard Height	16"
Weight Capacity	440 lbs
Net Weight	51 lbs
Material	Pine Wood, MDF, Plywood
Color	White
Assembly Required	Yes

Dimensions

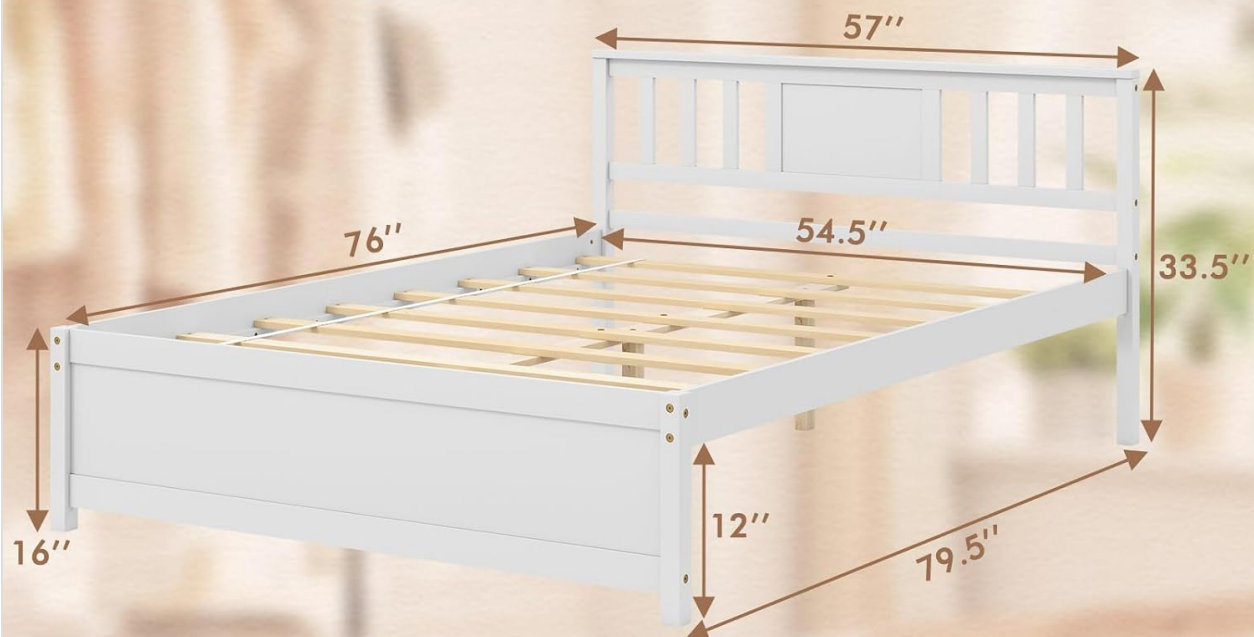

Weight Capacity

Full Size

Image: Detailed dimensions and weight capacity of the bed frame.

WARRANTY & SUPPORT

For any questions, missing parts, or assistance with your KOMFOTT Full Size Wood Platform Bed Frame, please contact KOMFOTT customer support. Refer to your purchase documentation for specific warranty details.

KOMFOTT offers a **90-day easy return policy**. For customer support, please visit the KOMFOTT store page or contact the seller directly through your purchase platform.

We are committed to providing a comfortable and healthy home life. Your satisfaction is our priority.