

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [DUMOS](#) /

› [DUMOS Full Size Wood Bed Frame \(DM-WCJ-F\) Instruction Manual](#)

DUMOS DM-WCJ-F

DUMOS Full Size Wood Bed Frame (DM-WCJ-F) Instruction Manual

Model: DM-WCJ-F

1. PRODUCT OVERVIEW

The DUMOS Full Size Wood Bed Frame is a 12-inch wooden platform bed frame designed for durability and convenience. It features robust support slats, eliminating the need for a box spring, and offers ample under-bed storage space. Crafted from natural pine wood, its clean lines and warm aesthetic complement various room decors.

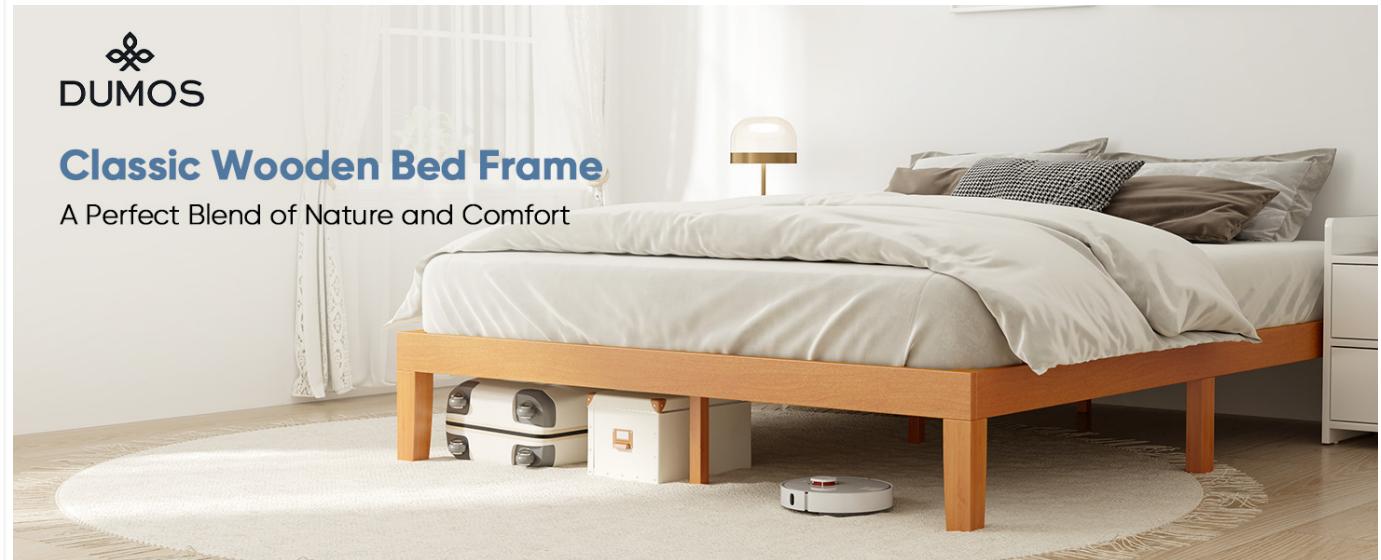


Figure 1: DUMOS Full Size Wood Platform Bed Frame.

Your browser does not support the video tag.

Video 1: Overview of the DUMOS Natural Pine Wood Bed Frame.

2. IMPORTANT SAFETY INFORMATION

- **Weight Capacity:** Do not exceed the maximum weight capacity of 700 lbs for the Full size bed frame.
- **Assembly:** Follow the installation instructions and video carefully for safe and stable assembly. Improper assembly can lead to instability or collapse.

- **Maintenance:** Regularly check all bolts and connections to ensure they remain tight.
- **Placement:** Ensure the bed frame is placed on a level surface to prevent wobbling.

3. ASSEMBLY INSTRUCTIONS

This section provides step-by-step instructions for assembling your DUMOS Full Size Wood Bed Frame. All necessary components are included in the package. An installation video is also available for visual guidance.

3.1. Unpacking and Component Check

Before beginning assembly, carefully unpack all components and verify that all parts are present according to the parts list in your included installation manual. Place all parts on a soft, clean surface to prevent scratches.

3.2. Frame Assembly

1. Attach the bed legs to the side rails. Ensure all bolts are securely tightened.
2. Connect the head and foot sections of the frame using the provided hardware.
3. Insert the central support beam and secure it.
4. Align and lay down the wooden slats along the connecting strips on the left and right side panels of the bed. The slats feature a convenient hook-and-loop fastener design for easy installation.
5. Secure the slats to the frame using a power drill (not included) for better stability.

Your browser does not support the video tag.

Video 2: Detailed assembly guide for the DUMOS wood bed frame.



 **DUMOS**
Wood Platform Bed Frame
Dimensions

TWIN

74.4" L x 38" W x 12" H

Full

74.4" L x 53.5" W x 12" H

Queen

79.5" L x 59.4" W x 12" H

King

79.5" L x 75.5" W x 12" H

Figure 2: Close-up of the Velcro design for easy and quick slat installation.

4. OPERATION AND USAGE

The DUMOS bed frame is designed for optimal mattress support without the need for a box spring. Simply place your mattress directly onto the assembled slats.

- **Mattress Compatibility:** This frame is compatible with all types of mattresses, including memory foam, spring, latex, and hybrid mattresses.
- **Under-bed Storage:** Utilize the 8.5-inch clearance under the bed for convenient storage of boxes, bins, or other

items to keep your room organized.



Figure 3: Illustration of the 8.5-inch under-bed storage space.

5. CARE AND MAINTENANCE

- Cleaning:** Wipe the wood frame with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- Regular Checks:** Periodically inspect all screws and bolts to ensure they are tight. Re-tighten if necessary to maintain stability.
- Avoid Excessive Moisture:** Keep the bed frame away from areas with high humidity or direct water exposure to prevent wood damage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Bed frame is wobbly or unstable.	Loose bolts or uneven placement.	Ensure all bolts are securely tightened. Verify the bed is on a flat, level surface.
Squeaking noises.	Loose connections or friction between parts.	Re-tighten all assembly bolts. Apply a small amount of lubricant (e.g., silicone spray) to contact points if necessary.
Slats are shifting.	Slats not properly secured or Velcro not engaged.	Ensure slats are correctly positioned and the Velcro fasteners are fully engaged. If applicable, ensure screws are used to secure the slats.

7. PRODUCT SPECIFICATIONS

Brand: DUMOS

Model Number: DM-WCJ-F

Size: Full

Product Dimensions: 74.4" L x 53.5" W x 12" H

Material: Wood (Pine)

Weight Capacity: Up to 700 lbs

Under-bed Clearance: 8.5 inches

Assembly Required: Yes

Special Feature: No Box Spring Needed, Space Saving



Figure 4: Detailed dimensions of the DUMOS Full Size Wood Bed Frame.

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided in your purchase documentation

or visit the official DUMOS website. Keep your purchase receipt for warranty claims.

© 2026 DUMOS. All rights reserved.