

[Manuals+](#)

[Q & A](#) | [Deep Search](#) | [Upload](#)

REALROOMS 4792139

REALROOMS Valencia Wingback Platform Bed Frame User Manual

Queen, Cream Linen

1. PRODUCT OVERVIEW

The REALROOMS Valencia Wingback Platform Bed Frame is designed to provide a stylish and sturdy foundation for your mattress without the need for a box spring. This Queen-sized bed frame features a striking 54-inch high wingback headboard upholstered in a soft linen-look fabric, complemented by foam-padded headboard, footboard, and side panels for enhanced comfort and aesthetic appeal. Its robust construction supports up to 1000 lbs, ensuring durability and stability.



Image 1.1: The Valencia Wingback Platform Bed Frame, Queen, Cream Linen, assembled in a bedroom.

Key features include a low-profile wooden frame with metal rails and steel inner legs for superior support, and a pre-assembled rolled plywood slat base for easy installation. The modern design is completed with tapered plastic front legs and fully upholstered back legs.

2. IMPORTANT SAFETY INFORMATION

- Do not exceed the maximum weight limit of 1000 lbs. Overloading can cause structural damage and potential injury.
- Exercise caution during assembly. Some components may have sharp edges or pinch points. Wear appropriate protective gear if necessary.
- Ensure all bolts, screws, and fasteners are securely tightened before use. Periodically check and re-tighten as needed to maintain stability.
- Keep small parts and hardware out of reach of children to prevent choking hazards.
- Assemble the bed frame on a soft, clean surface (e.g., carpet) to prevent scratching or damage to the product or your flooring.

- This product contains Proposition 65 chemicals. For more information, please refer to the product packaging or manufacturer's website.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all parts and hardware are present and undamaged. If any components are missing or damaged, do not proceed with assembly. Contact customer service for assistance.

Fits One Queen Size Mattress (NOT INCLUDED)



**Pictured with a 6" mattress*



EASY ASSEMBLY



TRENDY DESIGN



SHIPS IN 1 BOX

Image 3.1: Overview of bed frame dimensions and assembly icons.

The package typically includes:

- Headboard (Wingback)
- Footboard
- Side Rails (Left and Right)
- Pre-assembled Rolled Plywood Slat Base
- Metal Rails (Internal support)

- Steel Inner Legs (Support for slats)
- Tapered Plastic Front Legs
- Assembly Hardware (Bolts, washers, Allen wrench, etc.)
- Assembly Instructions Manual

4. ASSEMBLY INSTRUCTIONS

Assembly of the REALROOMS Valencia Wingback Platform Bed Frame is designed to be straightforward. It is recommended to have two people for easier and safer assembly.



Image 4.1: Detailed view of the bed frame's design elements.

Step-by-Step Assembly:

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out on a clean, soft surface. Refer to the parts list in your included manual to identify each piece.
2. **Attach Side Rails to Headboard:** Connect the left and right side rails to the headboard using the provided hardware. Ensure the connections are secure but do not fully tighten bolts until all major components are

assembled.

3. **Attach Side Rails to Footboard:** Similarly, attach the other ends of the side rails to the footboard. Ensure the frame is aligned and square.
4. **Install Support Legs:** Attach the tapered plastic front legs to the footboard and any central support legs to the metal rails as indicated in your specific manual. The back legs are typically integrated into the upholstered headboard.
5. **Unroll and Secure Slat Base:** The plywood slat base comes pre-assembled and rolled. Carefully unroll it across the bed frame. Align the slats with the designated attachment points on the side rails and central metal rails. Secure the slat base using the provided fasteners.



Image 4.2: Details of the slat system and frame reinforcement.

6. **Final Tightening:** Once all components are in place and aligned, systematically tighten all bolts and screws. Do not overtighten, but ensure all connections are firm and stable.
7. **Inspect Assembly:** Double-check all connections and ensure the bed frame is stable and level before placing a mattress on it.



Image 4.3: The assembled bed frame ready for a mattress.

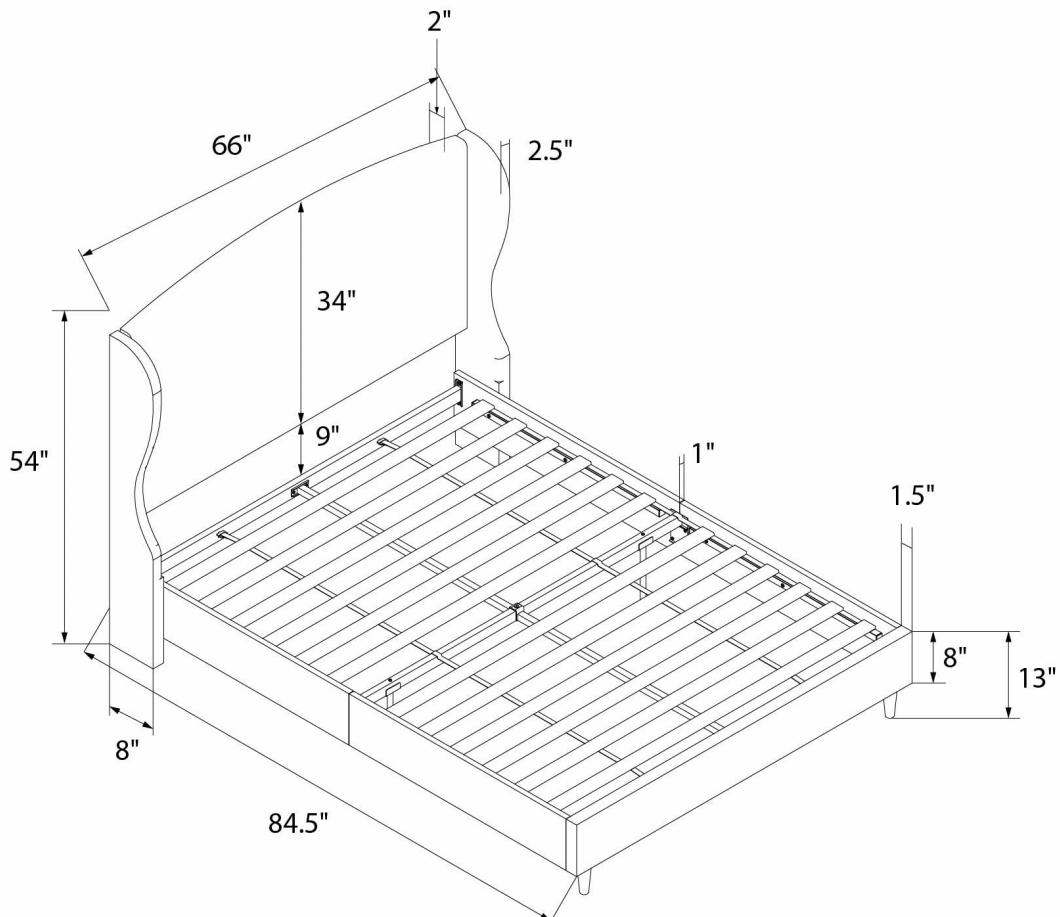


Image 4.4: Dimensional drawing of the bed frame.

5. USAGE GUIDELINES

This platform bed frame is designed to support a Queen-sized mattress directly, eliminating the need for a box spring. For optimal appearance and support, a mattress with a minimum depth of 10 inches is recommended.

- Place your Queen-sized mattress directly onto the secured slat base.
- Ensure the mattress is centered on the frame to distribute weight evenly.
- Avoid jumping on the bed frame, as this can compromise its structural integrity and void the warranty.
- Do not use abrasive cleaners or harsh chemicals on the upholstered surfaces.

6. CARE AND MAINTENANCE

Proper care will extend the life and appearance of your bed frame.

- **Cleaning:** For general cleaning, wipe the upholstered surfaces with a lightly damp cloth. For spills, blot immediately with a clean, dry cloth. Avoid rubbing, which can spread the stain.

- **Dusting:** Regularly dust the frame with a soft, dry cloth.
- **Inspection:** Periodically inspect all hardware connections (bolts, screws) and re-tighten if they have loosened over time.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause the fabric to fade.
- **Avoid Harsh Chemicals:** Do not use strong detergents, abrasive cleaners, or chemical solvents, as these can damage the fabric and finish.

7. TROUBLESHOOTING

If you encounter any issues with your bed frame, refer to the following common problems and solutions:

- **Bed Frame Wobbles:**

- Ensure all bolts and screws are fully tightened.
- Check that the bed frame is on a level surface. If not, use furniture glides or shims to stabilize.
- Verify that all components are correctly assembled according to the instructions.

- **Squeaking Noises:**

- Tighten all hardware connections.
- Ensure the mattress is properly seated on the slats.
- Check if the slats are securely fastened and not rubbing against the frame.

- **Missing or Damaged Parts:**

- Do not attempt to assemble with missing or damaged parts.
- Contact REALROOMS customer support immediately for replacement parts.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Model Name	Valencia Wingback Platform Bed Frame
Size	Queen
Color	Cream Linen
Dimensions (Overall)	84.5" L x 66" W x 54" H
Headboard Height	54 inches
Weight Capacity	1000 lbs
Material	Wood, Metal, 100% Polyester Fabric (Upholstery)
Box Spring Required	No
Assembly Required	Yes
Item Weight	90 pounds

Feature	Detail
Manufacturer	Dorel Home Products
Model Number	4792139
UPC	029986479204

9. WARRANTY AND CUSTOMER SUPPORT

The REALROOMS Valencia Wingback Platform Bed Frame is backed by a 1-year limited warranty against manufacturer defects. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, missing parts, assembly assistance, or any other inquiries, please contact REALROOMS customer service. You can typically reach them via email or live chat, as indicated in the product packaging or on the official REALROOMS website.

Please have your model number (4792139) and proof of purchase ready when contacting support to expedite the process.