

[Manuals.plus](#) /

› [VECELO](#) /

› VECELO Full Size Bed Frame Instruction Manual

VECELO bed-frames

VECELO Full Size Bed Frame Instruction Manual

Model: **bed-frames** | Brand: **VECELO**

1. PRODUCT OVERVIEW

The VECELO Full Size Bed Frame is designed to provide sturdy and long-lasting support for your mattress. It features a durable metal construction combined with a rustic wooden headboard and footboard, offering both stability and a modern industrial aesthetic. This bed frame is designed to be used without a box spring, providing ample under-bed storage space.



Image: Fully assembled VECELO Full Size Bed Frame in a bedroom setting, showcasing its design and functionality.

2. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- Do not exceed the maximum weight capacity of 450 pounds for the Full size mattress.
- Ensure all parts and screws are securely attached before use.
- Be cautious of pinch points when assembling metal slats and legs.
- Keep children and pets away from the assembly area.
- Assemble on a soft, clean surface to prevent scratches.

3. PACKAGE CONTENTS

Verify that all components and hardware are present before beginning assembly. If any parts are missing or damaged, please contact VECELO customer service.

Component	Quantity
Bed frame parts (metal and wood)	1 set
Accessory Kit (screws, bolts, wrench)	1
Instructions Manual	1

Refer to the included accessory kit for detailed hardware counts and identification.

4. ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to have two people for assembly.

4.1. Headboard Assembly

Assemble the headboard components. Attach the horizontal metal bars to the vertical headboard posts using the specified screws and tools.

Your browser does not support the video tag.

Video: Step-by-step guide on assembling the headboard and footboard components. (Relevant segment: 0:04 - 0:19 for headboard metal frame, 0:20 - 0:26 for attaching wood panels)



Image: Detailed view of the headboard metal frame assembly, showing the connection points.

Once the metal frame is assembled, attach the rustic wooden panels to the headboard using the provided screws.

Rustic Wooden Headboard

Made of high-quality wood board combined with metal frame to provide stable support, add style and function to your bedroom.



Image: Close-up of the rustic wooden headboard, highlighting its texture and attachment to the metal frame.

4.2. Footboard Assembly

Similar to the headboard, assemble the footboard components. Attach the horizontal metal bar to the vertical footboard posts.

Video: Step-by-step guide on assembling the headboard and footboard components. (Relevant segment: 0:27 - 0:35 for footboard metal frame)

4.3. Side Rail and Support Leg Attachment

Connect the assembled headboard and footboard using the side rails. Ensure all connections are tight and secure. Attach the central support legs to the main frame.

Video: Step-by-step guide on assembling the bed frame. (Relevant segment: 0:36 - 0:44 for attaching side rails and central support legs)



Image: Illustrates the 13.7 inches of under-bed storage space provided by the frame.

4.4. Center Support Bar Installation

Install the center support bar(s) across the width of the bed frame. These provide additional stability and support for the mattress.

Video: Step-by-step guide on assembling the bed frame. (Relevant segment: 0:45 - 0:53 for attaching side rails and central support legs, 0:54 - 1:09 for center support bar)

4.5. Slat Installation

Place the metal slats onto the designated supports along the side rails. Ensure they are evenly spaced and securely seated. The EVA foam padding on the center slat helps reduce noise.

Video: Step-by-step guide on assembling the bed frame. (Relevant segment: 1:10 - 1:26 for slat installation)

| Durable Metal Bed Frame



Heavy-duty
Metal Slats



Easy Assemble
& Save Time



Embedded Design
Prevents Slipping



Image: Close-up view of the heavy-duty metal slats, showing their structure and how they prevent slipping.

Supports All Types of Mattresses



Image: Illustrates how the bed frame supports various mattress types and the recommended mattress height of 6-12 inches.

Assembly is now complete. Ensure all screws are tightened before placing your mattress.

5. OPERATING INSTRUCTIONS

The VECELO Full Size Bed Frame is designed for straightforward use.

- **Mattress Placement:** Carefully place your full-size mattress directly onto the metal slats. No box spring is needed. The non-slip design helps keep the mattress securely in place.
- **Weight Capacity:** Do not exceed the maximum weight capacity of 450 pounds for the Full size frame.
- **Under-Bed Storage:** Utilize the 13.7 inches of under-bed clearance for storing items.

6. MAINTENANCE

Proper care will extend the life and appearance of your VECELO bed frame.

- **Dusting:** Dust regularly with a soft, dry cloth.
- **Metal Components:** Wipe metal components with a damp cloth as needed. Avoid abrasive cleaners that could damage the finish.
- **Wooden Headboard:** Use furniture polish on the wooden headboard as needed to maintain its appearance.
- **Tighten Fasteners:** Periodically check and tighten all screws and bolts to ensure the frame remains stable and squeak-free.

7. TROUBLESHOOTING


If you encounter any issues with your bed frame, refer to the following common solutions:

- **Squeaking Noises:** Squeaking often indicates loose connections. Re-tighten all screws and bolts on the frame, especially where the side rails connect to the headboard and footboard, and where the slats rest on the frame. The EVA foam padding on the center slat is designed to minimize noise.
- **Instability/Wobbling:** Ensure the bed frame is assembled on a flat, level surface. Check that all support legs are making firm contact with the floor and that all fasteners are fully tightened.
- **Mattress Sliding:** The bed frame features a small tailgate to help prevent mattress sliding. If your mattress still slides, ensure it is properly centered on the frame.
- **Missing or Damaged Parts:** If you discover any missing or damaged parts during assembly, do not proceed with assembly. Contact VECELO customer service immediately for assistance.

8. SPECIFICATIONS

Feature	Detail
Material	Wood & Metal
Bed Frame Color	Black & Brown
Headboard Height	40"
Bed Tailboard Height	16.7"
Slat Spacing	5.7"
Under-bed Height	13.7"
Max Load Capacity (Full)	450 lb
Recommended Mattress Height	6"-12"
Product Dimensions	74.8"L x 55"W x 40"H
Item Weight	46.5 pounds
Assembly Required	Yes

Full Size

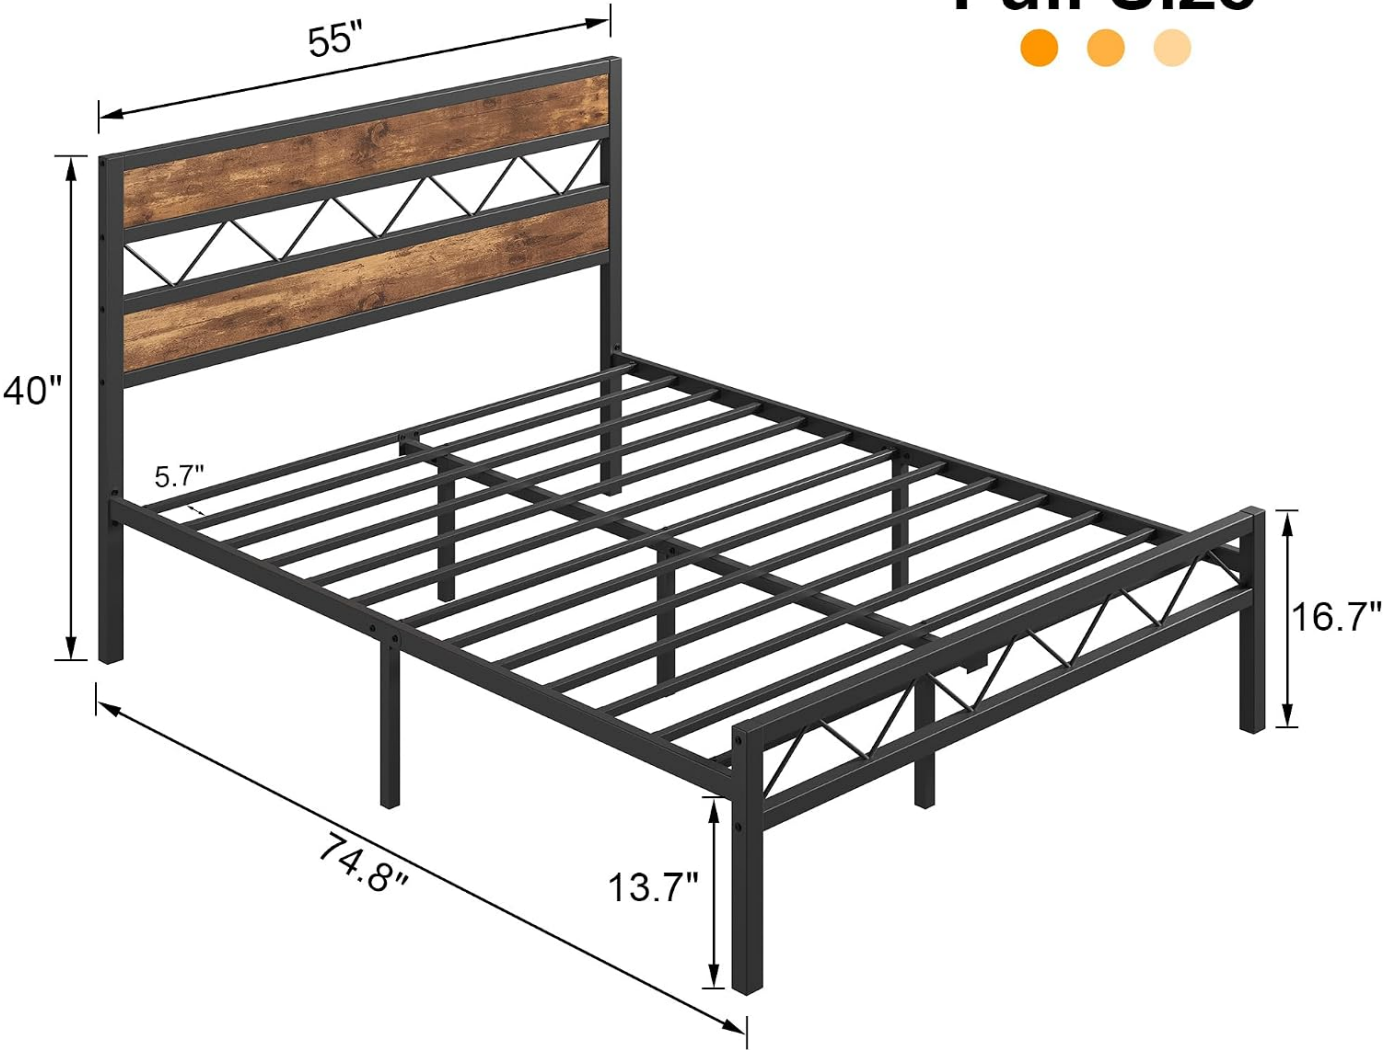

Material
Wood,Metal



Dimensions
74.8"L x 55"W x 40"H



Weight Capacity
650lbs

Image: Technical diagram illustrating the dimensions (length, width, height, under-bed clearance) and weight capacity of the VECELO Full Size Bed Frame.

9. WARRANTY AND CUSTOMER SUPPORT

VECELO is committed to providing high-quality products. If you have any questions, concerns, or require assistance with your bed frame, please contact our customer service team. Refer to your purchase documentation for specific warranty details.

For support, please reach out to the VECELO customer service team via the contact information provided with your purchase or on the official VECELO website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question