



Manuals.plus /

› WOODBRIDGE /

› WOODBRIDGE Alcove Solid Surface Shower Kit (60" x 32" x 75") - Installation and Care Manual

WOODBRIDGE SWP603275-3-SB-M+SUS-WH-6032

WOODBRIDGE Alcove Solid Surface Shower Kit

Model: SWP603275-3-SB-M+SUS-WH-6032

Dimensions: 60" L x 32" W x 75" H

1. PRODUCT OVERVIEW

This WOODBRIDGE Alcove Solid Surface Shower Combo Kit is designed for modern bathrooms, offering a durable and easy-to-maintain showering solution. The kit includes solid surface glue-up shower walls and a curbless shower base with a reversible drain, providing both functionality and aesthetic appeal.

Key features include:

- **Solid Surface Material:** Non-porous, resistant to chips and scratches, with color and pattern running throughout the entire thickness for lasting durability.
- **Easy Access:** Low-profile, zero-threshold shower base with an anti-slip texture, ideal for wheelchair access and safe entry.
- **Simple Installation:** Designed for glue-up installation, suitable for both remodeling and new construction projects.
- **Finished Edges:** Side panels feature clean finished outer edges, eliminating the need for additional trim.

2. COMPONENTS INCLUDED

The WOODBRIDGE Alcove Solid Surface Shower Combo Kit includes the following components:

- One (1) 60 in. x 75 in. Back Wall Panel
- Two (2) 32 in. x 75 in. Side Panels
- One (1) 60 in. x 32 in. Low Profile Zero Threshold Shower Base (White)
- One (1) Reversible Drain with Brushed Nickel Drain Cover



Image: Side view of the complete shower kit, showing the back and side panels with the shower base.

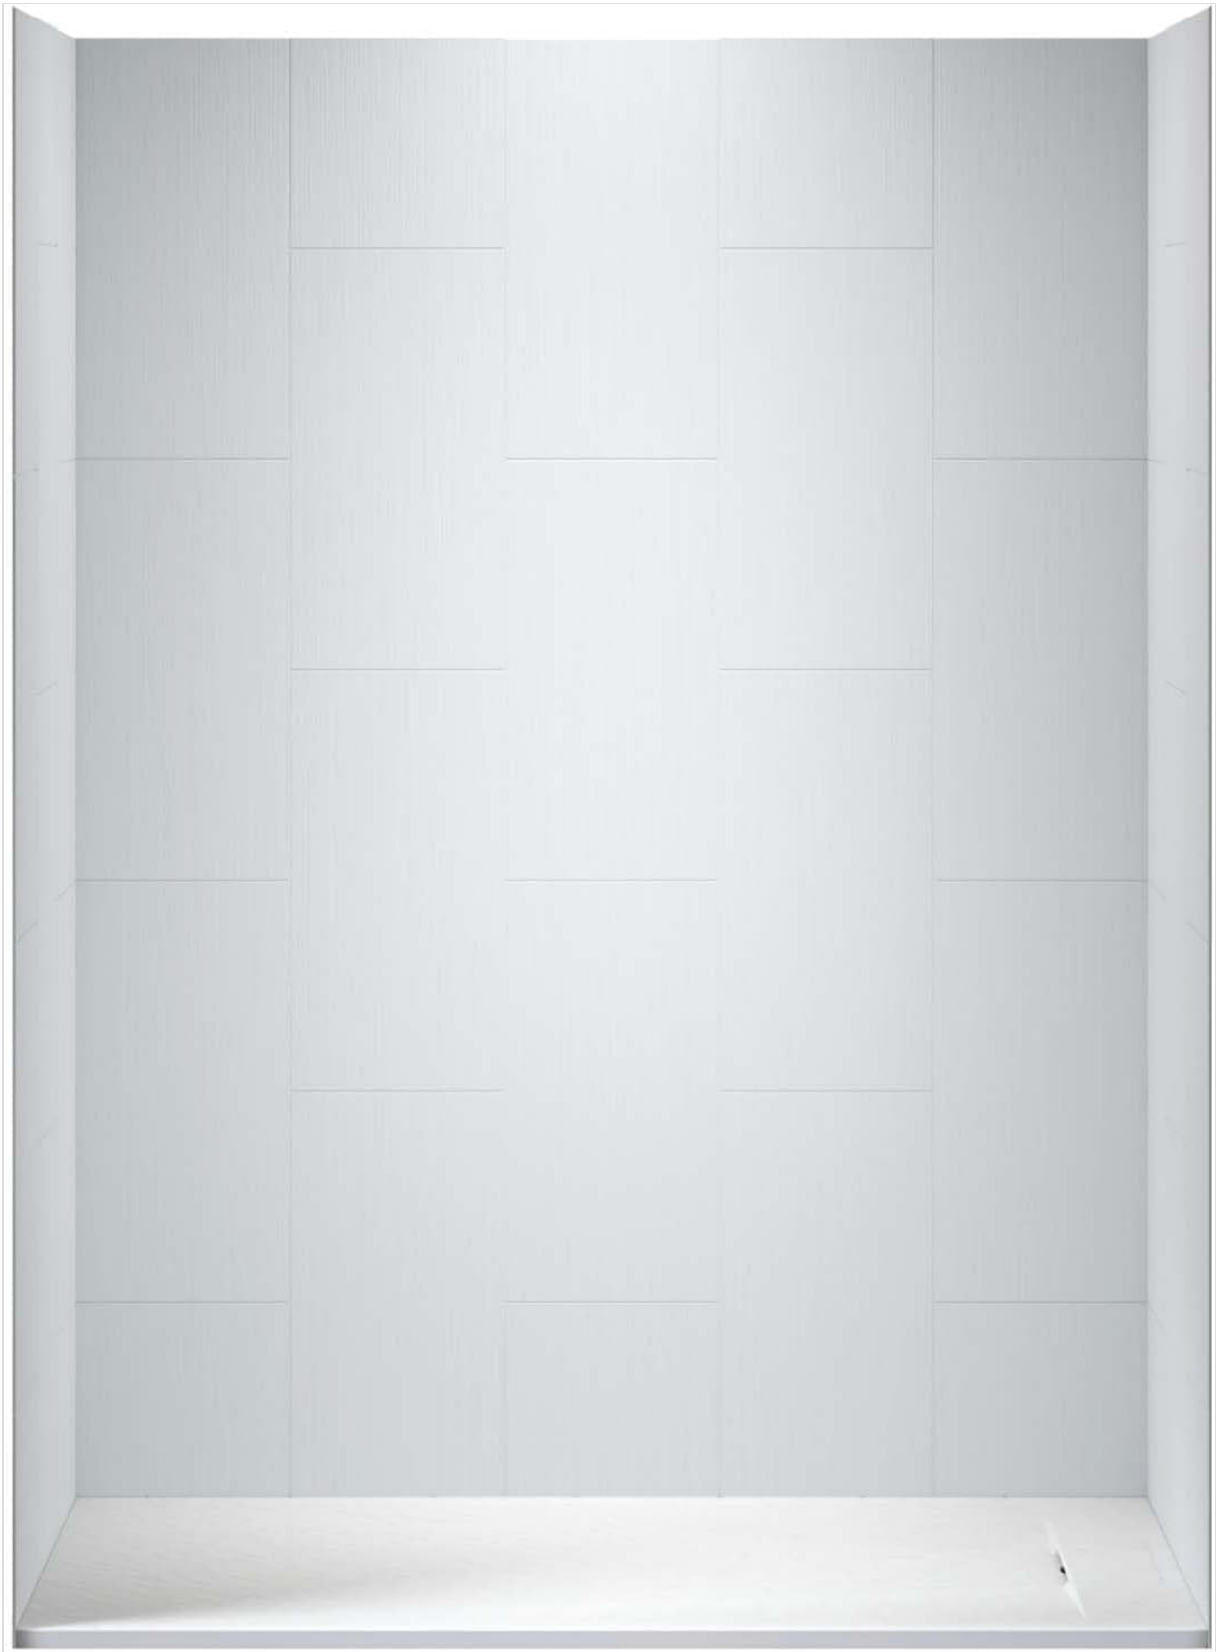


Image: Front view of the shower kit, highlighting the seamless appearance of the solid surface panels and the low-profile base.

3. SETUP AND INSTALLATION

Professional installation is recommended for optimal results. Ensure all local plumbing and building codes are followed. This kit is designed for 'Glue Up' installation.

3.1 Pre-Installation Checklist

- Verify all components are present and undamaged.

- Ensure the alcove area is properly prepared, plumb, and level.
- Confirm rough-in plumbing for the drain is correctly positioned for the reversible drain base.
- Gather necessary tools and materials, including appropriate adhesive for solid surface panels.

3.2 Shower Base Installation

1. Position the shower base in the desired location. The base can be installed fully flush with a new shower floor or approximately 1-inch above an existing floor.
2. Connect the shower base drain to the existing plumbing, ensuring a watertight seal.
3. Level the base using shims if necessary, and secure it according to manufacturer guidelines for your specific subfloor type.

3.3 Shower Wall Panel Installation

1. Apply a suitable adhesive to the back of the wall panels and the prepared wall surfaces.
2. Install the back wall panel first, ensuring it is centered and level.
3. Install the two side panels, aligning them precisely with the back panel and the shower base. The finished edges of the side panels should face outwards.
4. Apply sealant to all seams and joints between panels and the shower base to prevent water penetration.



Image: Dimensional diagram of the shower kit, illustrating the 60" L x 32" W x 75" H measurements for planning and installation.

4. OPERATING INSTRUCTIONS

This shower kit provides the enclosure and base for a showering area. Operation involves standard shower fixtures (not included). Ensure proper water temperature and flow before use. The anti-slip texture on the shower base enhances safety during use.

5. MAINTENANCE

The solid surface material of your WOODBRIDGE shower kit is designed for easy maintenance and long-term durability.

- **Regular Cleaning:** Clean regularly with a soft cloth or sponge and a non-abrasive cleaner. Avoid harsh chemicals or abrasive pads that can dull the finish.
- **Stain Removal:** For stubborn stains, a mild abrasive cleaner or a paste of baking soda and water can be used. Rub gently in a circular motion.
- **Scratch and Chip Repair:** Minor chips and scratches can be easily repaired. The surface can be sanded down and polished with fine sandpaper to restore its original appearance, as the color and pattern run through the entire product thickness. Consult a professional for significant damage.
- **Drain Maintenance:** Periodically remove the brushed nickel drain cover and clean any debris from the drain to ensure proper water flow.

6. TROUBLESHOOTING

This section addresses common issues you might encounter.

- **Water Leakage:** Check all sealed joints and connections. Reapply sealant if necessary. Ensure the shower base is properly leveled and installed.
- **Slow Drainage:** Remove the drain cover and clear any hair or debris from the drain. If the issue persists, check the plumbing connections.
- **Surface Discoloration:** Ensure only recommended cleaning agents are used. For minor discoloration, try gentle polishing as described in the maintenance section.

If you encounter issues not listed here or require further assistance, please contact WOODBRIDGE customer support.

7. SPECIFICATIONS

Brand	WOODBRIDGE
Model Number	SWP603275-3-SB-M+SUS-WH-6032
Product Dimensions (D x W x H)	60" x 32" x 75"
Material	Solid Surface
Color	Matte White/White
Finish Type	Matte
Drain Style	Reversible Drain
Installation Type	Glue Up
Number of Panels	3
Item Weight	125.5 Pounds
Certifications	US UPC, Canada CSA Standard

8. WARRANTY AND SUPPORT

This WOODBRIDGE shower kit comes with a **10-year limited warranty**, covering material defects from the date of purchase. Please retain your proof of purchase for warranty claims.

For any sales or product-oriented inquiries, our US-based product support team is available to assist you.

Refer to the product packaging or the official WOODBRIDGE website for contact information.