Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

powoq TLC2025050801

powoq Floor Mat, Cargo Mat, and Backrest Mat Installation Guide

Compatible with 2024-2025 Toyota Land Cruiser & Lexus GX550 Overtrail

1. Product Overview

This manual provides instructions for the installation and maintenance of your new powoq TPE (Thermoplastic Elastomer) floor mats, cargo mat, and backrest mats. These custom-fit liners are designed to protect the interior of your 2024-2025 Toyota Land Cruiser or Lexus GX550 Overtrail, offering durability and ease of cleaning.



Image 1.1: Complete set of powoq TPE floor mats, cargo mat, and backrest mats.

2. Package Contents

Your package should contain the following items:

- Trunk Mat
- Backrest Mat (Set)
- Floor Mat (Set)

3. Key Features

- **Custom Fitment:** Designed specifically for 2024-2025 Toyota Land Cruiser and 5-seat Lexus GX550 Overtrail models.
- **Premium TPE Material:** Soft, scratch-resistant, odorless, and durable.

- **All-Weather Protection:** Water-resistant surface protects against spills, dirt, and debris.
- **Non-Slip Design:** Special tread pattern increases friction to prevent cargo from shifting and mats from slipping.
- **Easy to Clean:** Simply wipe with a damp cloth or rinse with water.



Image 3.1: Illustration of the durable TPE material and mat dimensions.

4. Compatibility

These mats are custom-designed for:

- 2024-2025 Toyota Land Cruiser
- 2024-2025 5-Seat Lexus GX550 Overtrail

Please verify your vehicle model and seating configuration before installation to ensure proper fitment.

5. Setup and Installation

Follow these steps for proper installation of your powoq mats:

1. **Prepare the Vehicle:** Ensure the vehicle's original carpeted surfaces are clean and free of dust or debris before placing the new mats.
2. **Install Trunk Mat:** Carefully place the trunk mat into the correct position in the trunk area. The custom design ensures a snug fit.
3. **Install Backrest Mats:** The backrest mats come with Velcro on the back. Align them with the back of the seats and firmly press to secure. Note: An oval shape cutout may be required on the backrest mat for safety seat installation.
4. **Install Floor Liners:** Place the front and rear floor liners in their respective footwells. The floor liners include clips to hold them securely in place. Ensure they do not interfere with the brake or accelerator pedals.

Video 5.1: Installation guide for powoq Floor Mat, Cargo Mat, and Backrest Mat in a 2024-2025 Land Cruiser.



Image 5.2: Custom fit of the cargo and backrest mats in the trunk.

Image 5.3: Floor liner clips for secure placement.

Image 5.4: Designated cutout area on backrest mat for safety seat access.

6. Operating Instructions

Once installed, ensure all mats are securely in place and do not obstruct the movement of the accelerator or brake pedals. Periodically check the mats to confirm they remain properly positioned, especially after cleaning or adjusting seats.

7. Maintenance and Cleaning

The TPE material makes these mats easy to maintain:

- For light dirt, simply wipe the mats with a damp cloth.
- For heavier stains or mud, remove the mats from the vehicle and rinse them with water.
- Allow the mats to air dry completely before reinstalling them in your vehicle.
- Avoid using harsh chemicals or abrasive cleaners, as these may damage the TPE material.

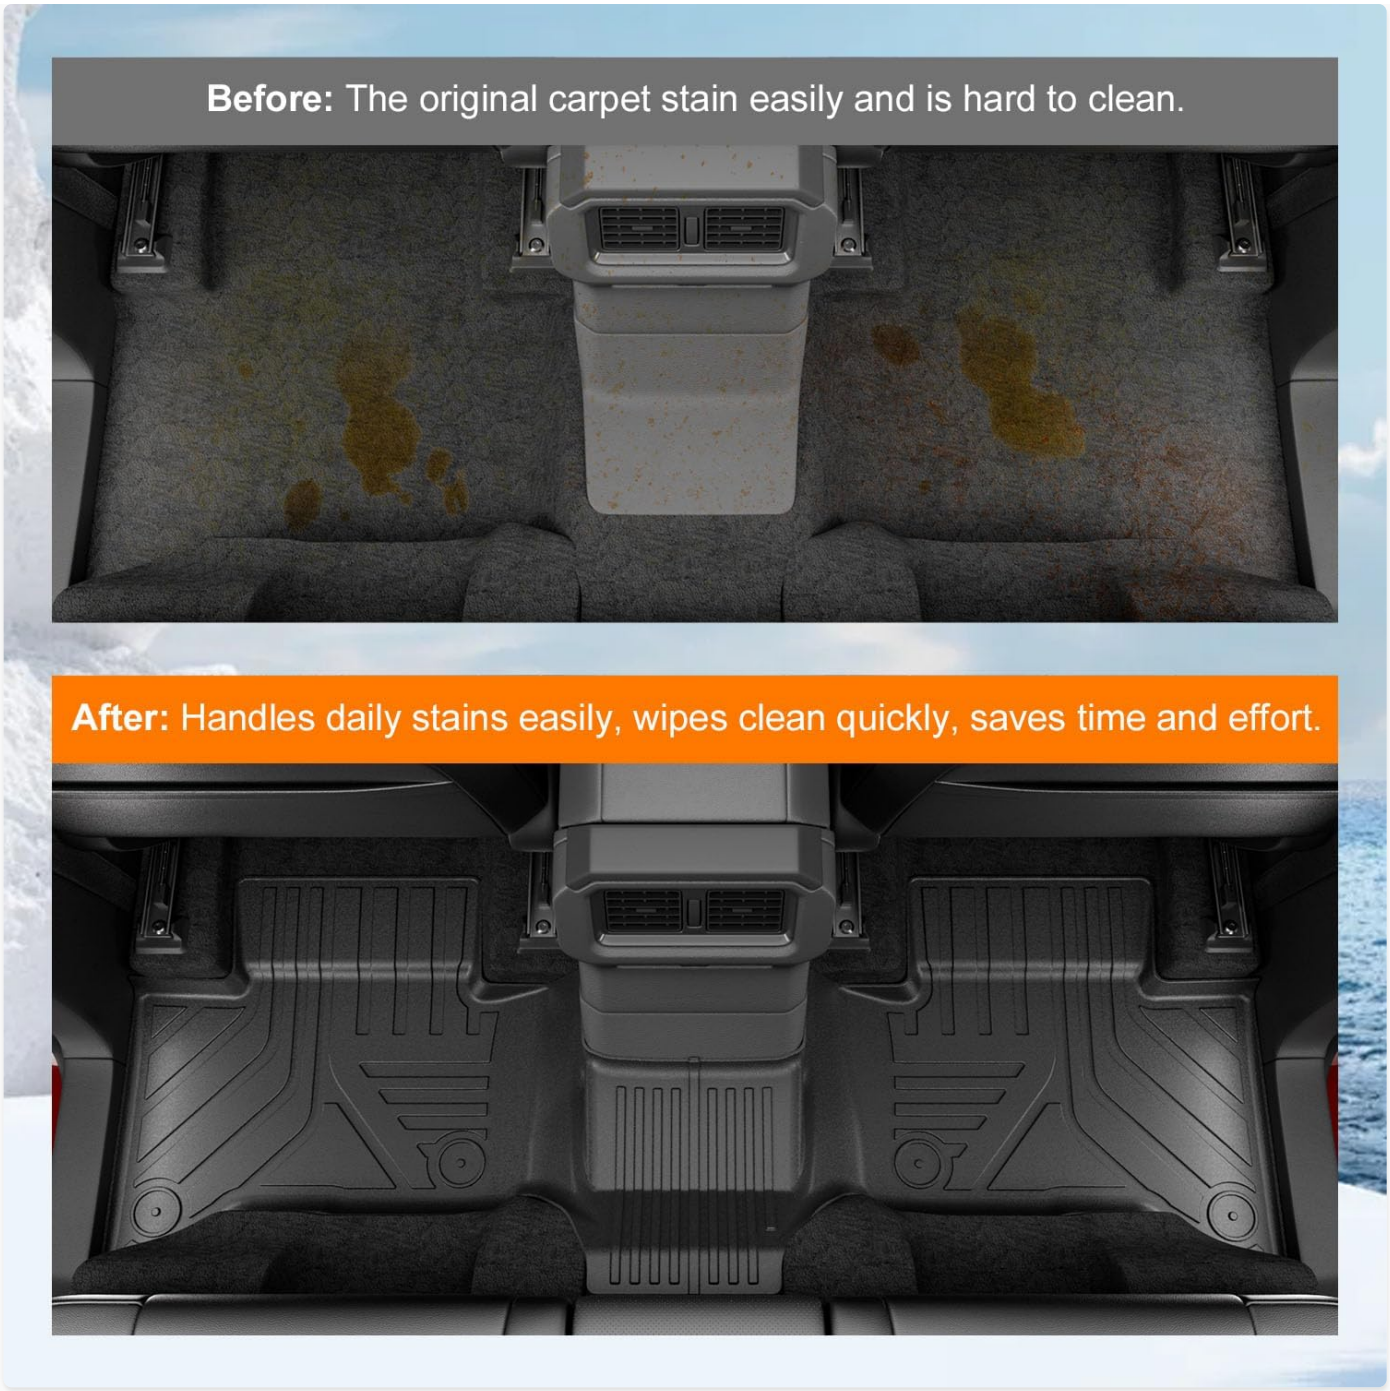


Image 7.1: Before and after comparison demonstrating ease of cleaning.

Image 7.2: Wiping the mat clean with a damp cloth.

8. Troubleshooting

- **Improper Fit:** Double-check that the mats are correctly aligned with the contours of your vehicle's floor and trunk. Ensure all clips are engaged.
- **Mat Shifting:** Verify that the non-slip backing is clean and the mats are properly secured with the provided clips or Velcro.
- **Odor:** Although made from odorless TPE, new products may have a faint scent. Allow them to air out in a well-ventilated area for a short period if necessary.

9. Specifications

Attribute	Detail
Brand	powoq
Model Number	TLC2025050801
Material	TPE (Thermoplastic Elastomer)
Item Weight	13.01 pounds
Product Dimensions	29.53 x 22.05 x 5.51 inches
Automotive Fit Type	Vehicle Specific Fit
Color	Trunk Mat+Backrest Mat+Floor Mat

10. Warranty and Support

If you have any questions about your powoq floor mat and cargo mat set, or require assistance with installation or product issues, please contact our customer service team. We are committed to providing prompt support and excellent after-sales service to ensure your satisfaction.

© 2025 powoq. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F7WVS1ZF

More documents and user manuals: **https://manuals.plus/**