

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VASAGLE](#) /

› [VASAGLE Full Bed Frame URMB982G01V1 Instruction Manual](#)

VASAGLE URMB982G01V1

VASAGLE Full Bed Frame URMB982G01V1 Instruction Manual

Model: URMB982G01V1 | Brand: VASAGLE

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your new VASAGLE Full Bed Frame with Upholstered Headboard. Please read all instructions carefully before assembly and retain this manual for future reference.

SAFETY INFORMATION

To ensure safe use and prevent damage, please observe the following:

- Do not overload this metal bed frame. The maximum static weight capacity is 1100 lb (500 kg).
- Gently pat the upholstery of the headboard and footboard upon unpacking. Allow 48 hours for them to regain their shape.
- If necessary, use a steam iron to remove any creases from the upholstered parts.
- Ensure all screws and connections are securely tightened before use. Periodically check and re-tighten as needed.
- Keep small parts and packaging materials away from children to prevent choking hazards.
- Assemble the bed frame on a soft, clean surface to avoid scratching the product or your floor.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly. Refer to the diagram below for identification.

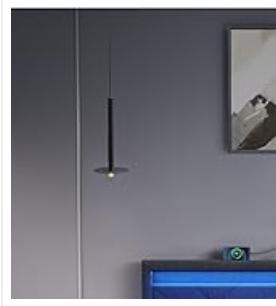


Image: Overview of all bed frame components and hardware included in the package.

Included Components:

- 1 x Full Bed Frame (disassembled)
- 1 x Assembly Kit (hardware)
- 1 x Instructions Manual (this document)

ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your bed frame. It is recommended to have two people for assembly.

Your browser does not support the video tag.

Video: Detailed assembly guide for the VASAGLE Bed Frame. (Duration: 2:12)

Step 1: Assemble the Side Rails

Connect the individual side rail sections (e.g., A, B, C1, C2) using the provided screws (e.g., screw 1 or 3) and the Allen wrench (e.g., tool 5). Ensure all connections are snug but do not overtighten.



Image: Connecting the metal side rail components.

Step 2: Attach the Headboard Frame

Secure the headboard frame (e.g., D) to the assembled side rails using the appropriate screws (e.g., screw 3). Make sure the frame is oriented correctly.



Image: Fastening the headboard frame to the bed's side structure.

Step 3: Attach the Footboard Frame

Similarly, attach the footboard frame (e.g., D) to the other end of the side rails using the designated screws (e.g., screw 3).



Image: Securing the footboard frame to complete the bed's perimeter.

Step 4: Install Center Support Legs and Bars

Assemble the center support structure (e.g., H, F1, F2) and attach it to the main frame. Ensure all connections are firm to provide adequate central support for the mattress.



Image: Installing the central support system for the bed frame.

Step 5: Place the Steel Slats

Lay the steel slats (e.g., G) across the bed frame. Ensure they are evenly spaced and fit securely into the designated slots or connectors.



Image: Positioning the steel slats for mattress support.

Step 6: Install Mattress Retainers

Attach the mattress retainers (e.g., part 4) to the designated locations on the side rails using screws (e.g., screw 1). These prevent the mattress from sliding.



Image: Attaching the mattress retainers to secure the mattress in place.

Step 7: Apply Noise Isolators

Place the noise isolators (e.g., part 6) onto the steel slats where they connect to the frame. This helps to prevent squeaking and ensures a quiet sleep environment.



Image: Installing noise isolators for a stable and silent bed frame.

Step 8: Attach Upholstered Headboard and Footboard

Attach the upholstered headboard (K) and footboard (L) to their respective frames. These typically use hook-and-loop fasteners for easy attachment and removal.



Image: Attaching the upholstered panels to the headboard and footboard frames.

Step 9: Final Check

Review all connections to ensure they are tight and secure. The bed frame is now ready for your mattress.



Image: The completed bed frame assembly.

OPERATING THE BED FRAME

The VASAGLE Full Bed Frame is designed for straightforward use. Once assembled, simply place your full-size mattress directly onto the steel slats. No box spring is needed. The integrated mattress retainers will help keep your mattress from shifting during use.

MAINTENANCE

General Care

- Regularly check all bolts and screws to ensure they remain tight. Re-tighten as necessary to maintain

stability and prevent noise.

- Avoid dragging the bed frame when moving it. Lift it to prevent damage to the legs and floor.
- Do not exceed the maximum weight capacity of 1100 lb (500 kg).

Cleaning

- For the metal frame, wipe with a soft, damp cloth. Avoid abrasive cleaners.
- The upholstered headboard and footboard can be cleaned by gently patting them. For deeper cleaning or to remove creases, a steam iron can be used. Ensure the fabric is dry before reattaching or using.



Image: The removable, washable backrest feature of the upholstered headboard.



Image: Rounded tubes for added safety and ease of cleaning.

PRODUCT FEATURES

The VASAGLE Full Bed Frame is designed with several features for comfort, stability, and convenience:

- **Sleek Minimalist Design:** Clean lines and a simple silhouette complement modern bedroom decor. Rounded tube edges enhance safety.
- **Cozy Upholstered Headboard:** Features 24D high-density foam wrapped in premium polyester fabric, providing comfortable support.
- **Stable and Noise-Free:** A sturdy painted steel frame with 9 support legs distributes weight up to 1100 lb. Sound isolators secure slats, preventing creaks and shifts.
- **Ample Underbed Space:** Standing 12.2 inches (31 cm) above the floor, it offers significant space for storage baskets, optimizing bedroom space and facilitating easy cleaning.
- **Effortless Assembly:** Simple construction and snap-on slats, combined with clear instructions, allow for quick setup.

Your browser does not support the video tag.

Video: Demonstrating the stable and noise-free design of the bed frame. (Duration: 0:22)

Your browser does not support the video tag.

Video: Overview of the bed frame, highlighting features like underbed storage and headboard. (Duration: 0:32)



Image: Detail of the noise-free design with sound isolators.



Image: Ample under-bed space for storage and easy cleaning.

74

Design Awards



Image: Illustration of the bed frame's great weight capacity and robust support legs.

Image: Mattress retainers to prevent mattress sliding.

TROUBLESHOOTING

Squeaking Noises

- Ensure all bolts and screws are securely tightened. Loose connections are a common cause of squeaking.
- Check that the plastic noise isolators are correctly installed on all slats.
- Verify that the mattress retainers are properly attached and not causing friction.

Instability/Wobbling

- Confirm that the bed frame is assembled on a flat, level surface.
- Re-check all connections, especially those for the center support legs, to ensure they are fully tightened.
- Ensure all legs are making firm contact with the floor.

SPECIFICATIONS

Attribute	Detail
Brand	VASAGLE
Model Number	URMB982G01V1
Size	Full
Product Dimensions	77.8" L x 54.5" W x 40.9" H (197.7 x 138.5 x 104 cm)
Material	Steel, Polyester Fiber, 24D High-Density Foam

Color	Dove Gray
Weight Capacity	1100 lb (500 kg)
Under-bed Clearance	12.2 inches (31 cm)
Assembly Required	Yes
Compatible Mattress Size	Full (54" x 75" / 137 x 191 cm)

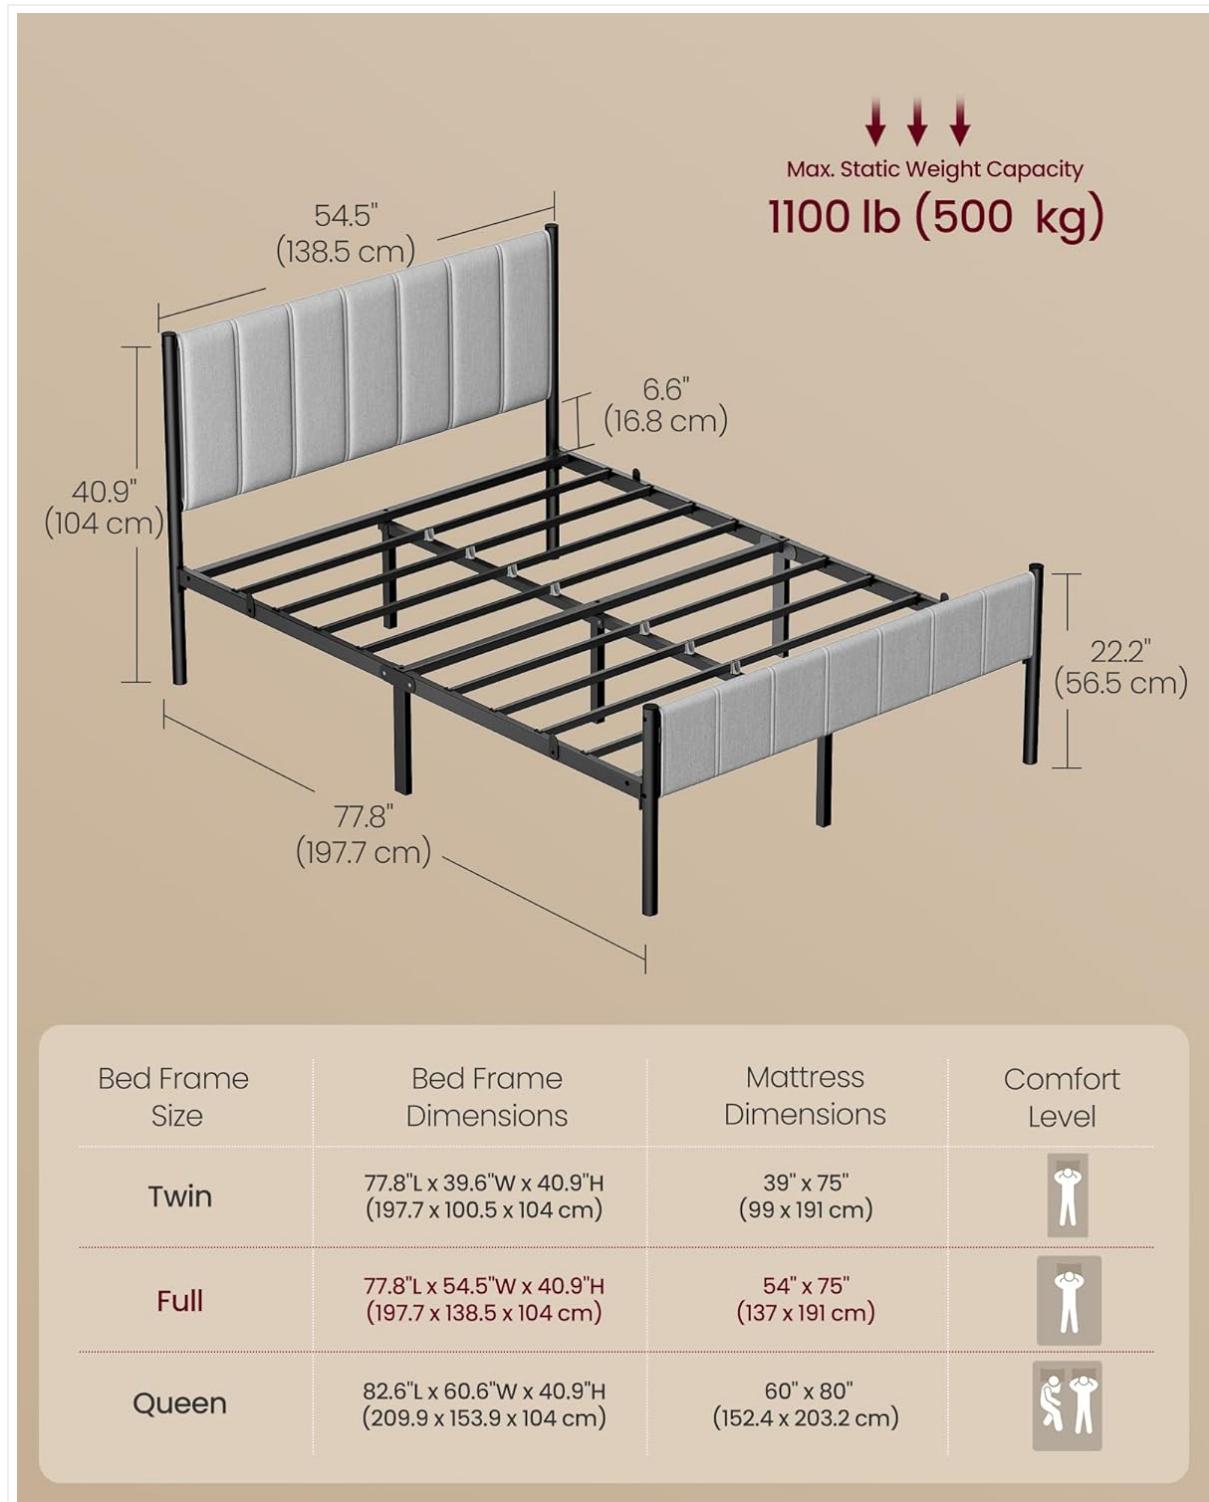


Image: Detailed dimensions for the Full bed frame and mattress compatibility.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official VASAGLE website. Keep your purchase receipt as proof of purchase.