

Allewie AK-LE6093Q

Allewie Queen Size Platform Bed Frame User Manual

Model: AK-LE6093Q

INTRODUCTION

Thank you for choosing the Allewie Queen Size Platform Bed Frame. This bed frame features a modern wingback headboard upholstered in soft velvet, designed for comfort and elegance. It is constructed with a high-quality metal frame and strong wooden slats, eliminating the need for a box spring. This manual provides essential information for safe assembly, operation, and maintenance of your new bed frame.

Key features include:

- Velvet upholstered wingback headboard for a modern aesthetic.
- Sturdy metal frame with reinforced center legs, supporting up to 800 lbs.
- 8-inch under-bed clearance for convenient storage.
- Noise-reducing foot pads and sound-absorbing foam for a quiet sleep environment.
- Durable wooden slats with velcro fixation, suitable for various mattress types (8"-12" thickness recommended).
- Designed for easy assembly.

SAFETY INFORMATION

Please read and understand all safety warnings and instructions before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- Always assemble according to the instructions provided.
- Do not exceed the maximum weight limit of **800 lbs**.
- Keep away from heat sources and prevent exposure to liquids.
- This product is not intended for use by children without adult supervision.
- Ensure all bolts and screws are securely tightened before use and periodically check for tightness.

PACKAGE CONTENTS

Before beginning assembly, ensure all parts are present and undamaged. If any parts are missing or damaged, please contact Allewie customer support.

- Bed Frame Components

- Hardware Pack (screws, bolts, tools)
- Headboard
- Wooden Slats

Note: Mattress is not included.

SETUP AND ASSEMBLY

Assembly is designed to be straightforward and can typically be completed by one adult in under an hour. It is recommended to have a second person for easier handling of larger components.

1. **Unpack and Identify Parts:** Carefully unpack all components and lay them out on a clean, soft surface (like a rug or blanket) to prevent scratches. Verify all parts against the included parts list.
2. **Assemble the Headboard:** Follow the step-by-step instructions provided in your package to connect the headboard sections.
3. **Construct the Side Rails:** Attach the side rails to the headboard and footboard using the provided hardware. Ensure all connections are secure but do not fully tighten until the frame is mostly assembled.
4. **Install Center Support:** Place and secure the center support beam(s) and legs.
5. **Attach Slats:** Unroll the wooden slats and attach them to the bed frame. The slats are typically secured with velcro for quick installation and stability. Ensure even spacing.
6. **Final Tightening:** Once all components are in place, go back and fully tighten all bolts and screws.
7. **Place Mattress:** Position your mattress (8-12 inches thick recommended) directly onto the slats. No box spring is needed.

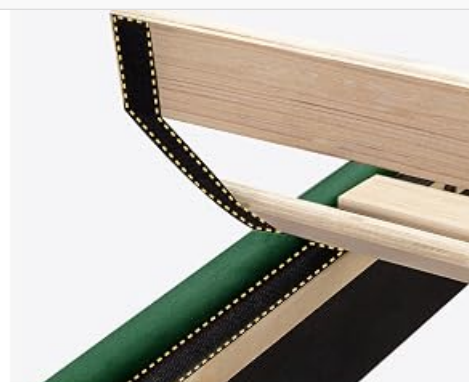


Image: Overview of Queen size dimensions, 800 lbs capacity, and estimated 30-minute assembly time.



Strong Support

Solid support legs and ample storage space



Quick Assemble

Slats are fixed with velcro for quick installation

Image: Detail showing the velcro design for quick slat assembly.

Your browser does not support the video tag.


Video: Official Allewie video demonstrating the assembly process for the velvet upholstered platform bed frame.

OPERATING INSTRUCTIONS

Once assembled, the Allewie Platform Bed Frame is ready for use. Simply place your preferred mattress directly onto the wooden slats. The sturdy construction and noise-reducing features ensure a comfortable and quiet sleeping experience.

Under-Bed Storage

The bed frame provides 8 inches of clearance underneath, offering ample space for storage bins, boxes, or other items. This feature helps maximize space in your bedroom.

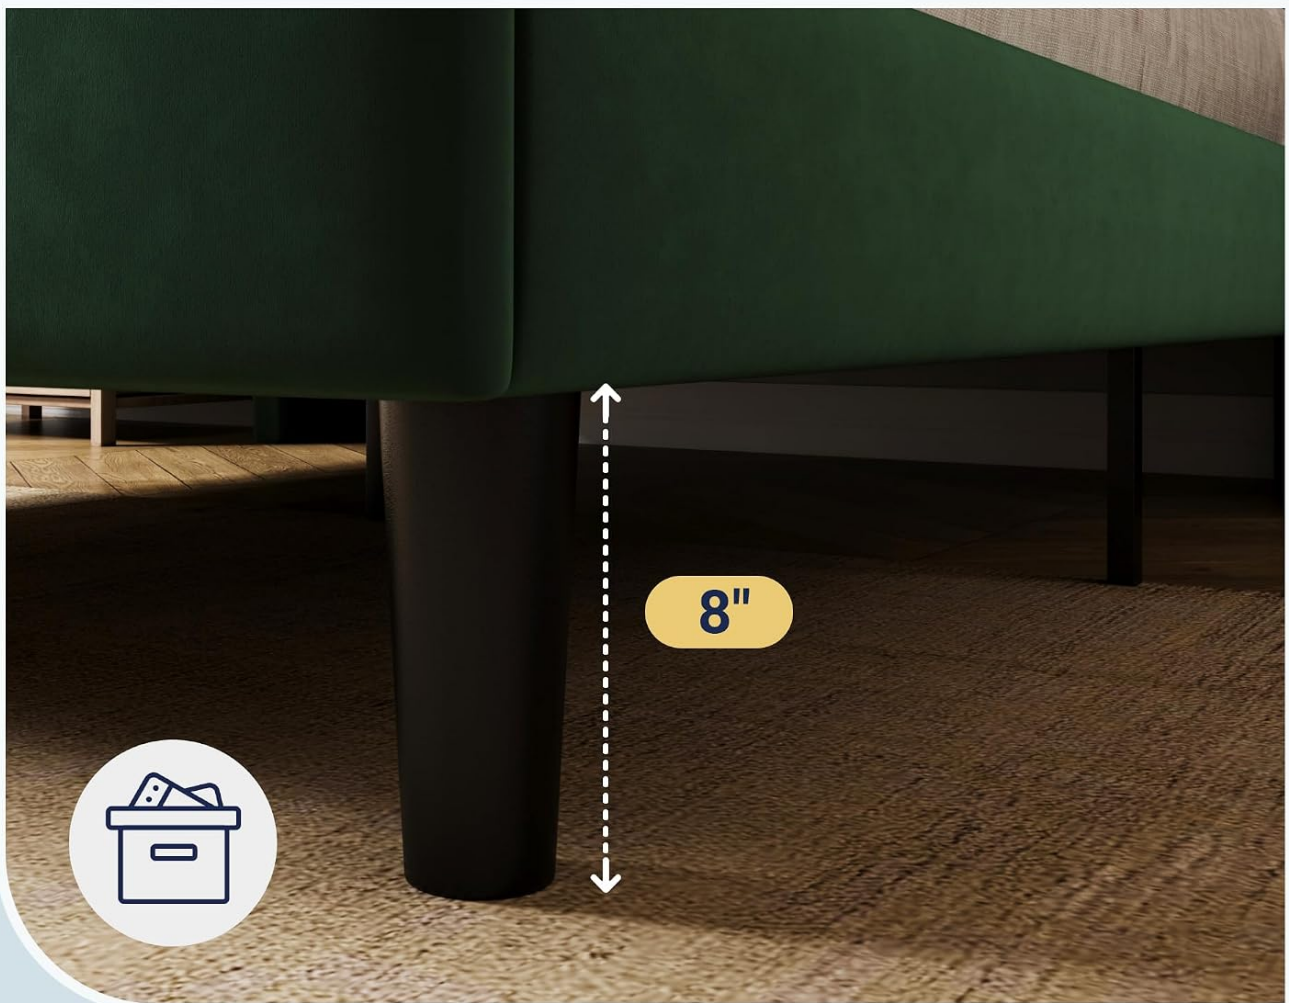

8" Under Bed Clearance Space

Idea for the robot vacuum's cleaning

Image: Illustration of the 8-inch under-bed clearance, ideal for storage or robot vacuums.

MAINTENANCE

Proper care will extend the life and appearance of your bed frame.

- **Velvet Headboard:** The velvet upholstery should be **dry cleaned only**. For minor spills, gently blot with a clean, dry cloth. Avoid harsh chemicals or excessive moisture.
- **Frame and Slats:** Wipe metal and wood components with a soft, damp cloth. Avoid abrasive cleaners.
- **Regular Checks:** Periodically inspect all bolts and screws to ensure they remain tight. Re-tighten if necessary to maintain stability and prevent squeaking.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight may cause the velvet fabric to fade.

SOFT VELVET FABRIC

Easy to Clean and Extremely Durable.



Velvety soft
and cozy



Breathable
& Warm



Easy to Clean



Image: Details on the soft, breathable, and easy-to-clean velvet fabric.

TROUBLESHOOTING

If you encounter any issues with your bed frame, refer to the following common solutions:

Problem	Possible Cause	Solution
Bed frame is wobbly or unstable.	Loose connections or uneven assembly.	Ensure all bolts and screws are fully tightened. Check that all components are correctly aligned according to the assembly instructions.
Squeaking noises.	Loose connections, friction between parts, or uneven floor.	Re-tighten all hardware. Apply felt pads or lubricant to contact points if necessary. Ensure the bed is on a level surface. The design includes noise-reducing foot pads and sound-absorbing foam to minimize squeaks.
Mattress sliding.	Smooth mattress bottom or insufficient friction with slats.	Place a non-slip mat between the mattress and the slats. Ensure the mattress thickness is within the recommended 8-12 inches.
Missing parts during assembly.	Packaging error.	Contact Allewie customer support immediately with your purchase details and a list of missing parts.

SPECIFICATIONS

Feature	Detail
Model Number	AK-LE6093Q
Size	Queen
Color	Green (as per current product variant)
Material	Metal, Velvet, Wood
Product Dimensions (L x W x H)	83.3" x 62.4" x 47"
Weight Capacity	800 lbs
Under-Bed Clearance	8 inches
Recommended Mattress Thickness	8" - 12"
Box Spring Required	No
Item Weight	67 pounds
Headboard Material	Velvet
Assembly Time (Estimated)	30-60 minutes (with two people)

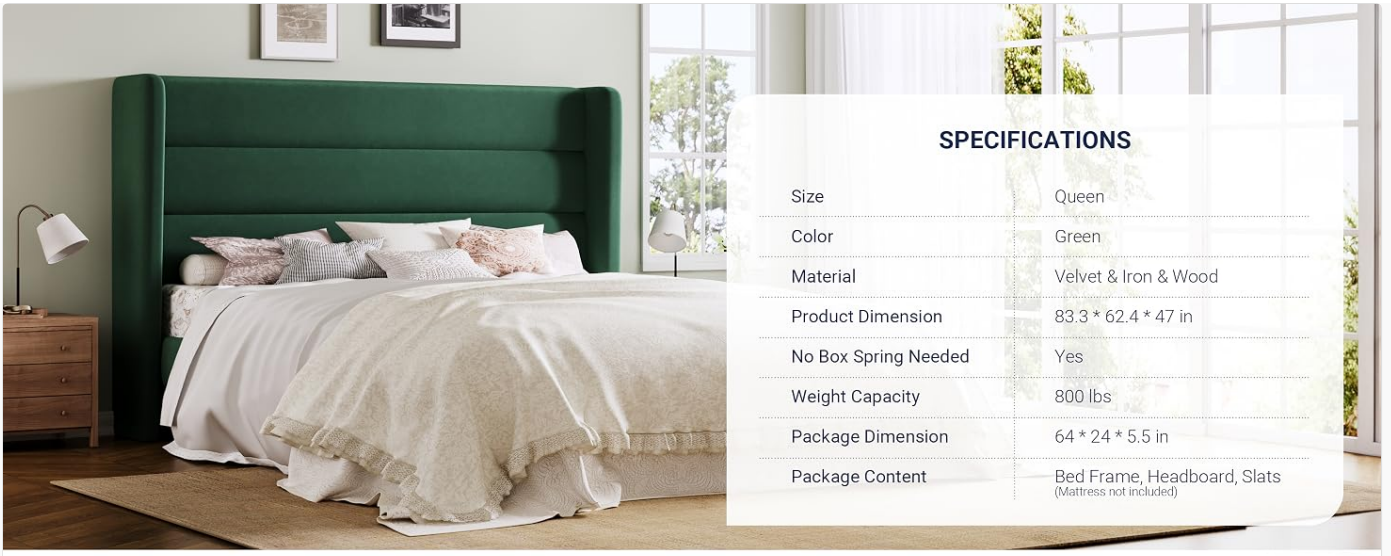


Image: Detailed specifications for the Queen size bed frame.

WARRANTY AND SUPPORT

Allewie offers a 30-day easy return policy for this product. For any questions, concerns, or assistance with assembly or parts, please contact Allewie customer support directly through your purchase platform or the official Allewie website. Please have your model number (AK-LE6093Q) and purchase information ready when contacting support.

For additional information or to explore other products, visit the [Allewie Store on Amazon](#).

© 2026 Allewie. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question